AKAI SERVICE MANUAL

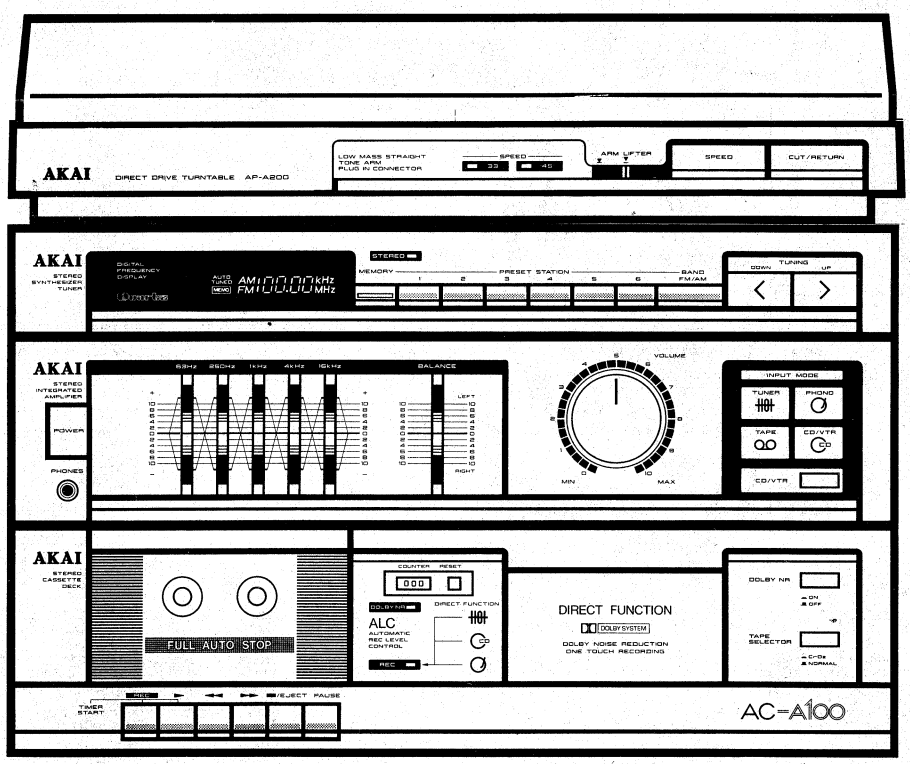

PRO-A100/A100D

COMPATIBLE TURNTABLE

MODEL AP-A100/C,A200/C

AMP-TUNER-DECK

MODEL AC-A100/L

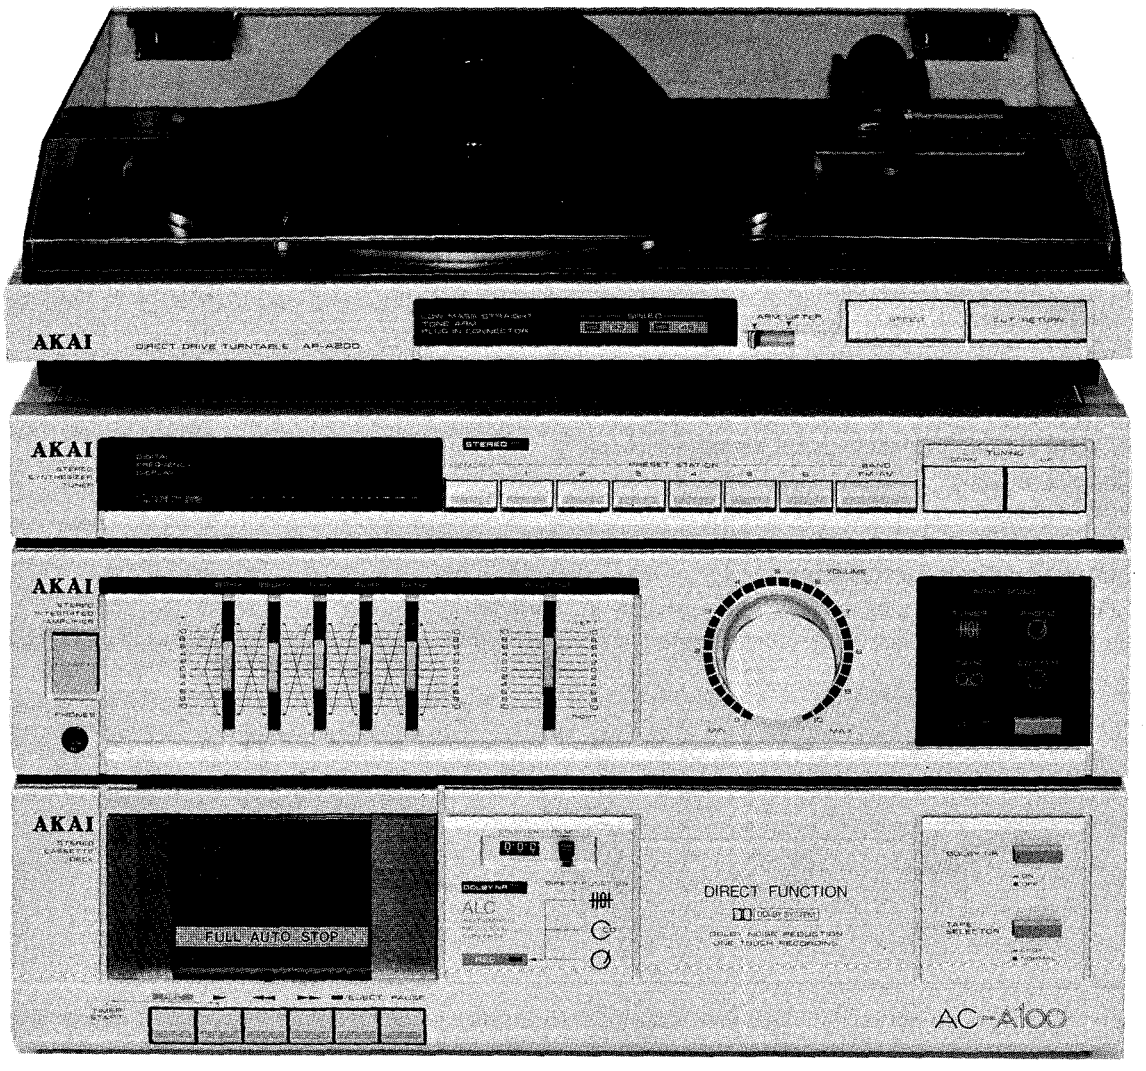

PRO-A100/A100D

MODEL AP-A100/C, AP-A200/C, AC-A100/L

SECTION 1 MODEL AP-A100 SERVICE MANUAL 5
SECTION 2 MODEL AP-A200 SERVICE MANUAL 11
SECTION 3 MODEL AC-A100/L SERVICE MANUAL . . 17
SECTION 4 PARTS LIST
(AP-A100, AP-A200, AC-A100/L) . . 31

SAFETY CHECK AFTER SERVICING

Confirm the specified insulation resistance between power cord plug prongs and externally exposed parts of the set is greater than 10 Mohms, but for equipment with external antenna terminals (tuner, receiver, etc.) and is intended for [C] or [A], specified insulation resistance should be more than 2.2 Mohms (ground terminals, microphone jacks, headphone jacks. line-in-out jacks etc.)

PRECAUTIONS DURING SERVICING

1. Parts identified by the ⚠ symbol parts are critical for safety.
   Replace only with parts number specified.
2. In addition to safety, other parts and assemblies are specified for conformance with such regulations as those applying to spurious radiation. These must also be replaced only with specified replacements.
   Examples: RF converters, tuner units, antenna selector switches, RF cables, noise blocking capacitors, noise blocking filters, etc.
3. Use specified internal wiring. Note especially:
   1) Wires covered with PVC tubing
   2) Double insulated wires
   3) High voltage leads
4. Use specified insulating materials for hazardous live parts. Note especially:
   1) Insulation Tape
   2) PVC tubing
   3) Spacers (Insulating Barriers)
   4) Insulation sheets for transistors
   5) Plastic screws for fixing microswitch (especially in turntable)
5. When replacing AC primary side components (transformers, power cords, noise blocking capacitors, etc.), wrap ends of wires securely about the terminals before soldering.

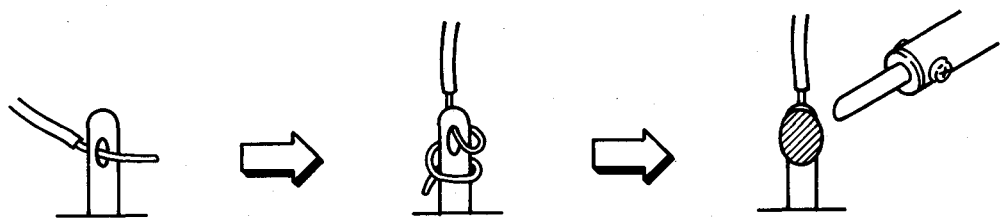

6. Observe that wires do not contact heat producing parts (heatsinks, oxide metal film resistors, fusible resistors, etc.).
7. Check that replaced wires do not contact sharp edged or pointed parts.
8. Also check areas surrounding repaired locations.
9. Use care that foreign objects (screws, solder droplets, etc.) do not remain inside the set.

VOLTAGE CONVERSION

Models for Canada, USA, Europe, UK and Australia are not equipped with this facility. Each machine is preset at the factory according to destination, but some machines can be set to 110V, 120V, 220V, or 240V as required.
If your machine's voltage can be converted:
Before connecting the power cord, turn the VOLTAGE SELECTOR located on the rear panel with a screwdriver until the correct voltage is indicated.

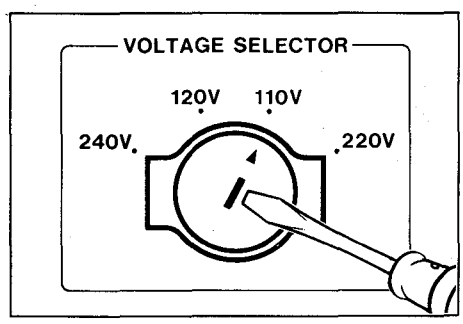

INTRODUCING THE AKAI PRO-A100 SERIES COMPONENTS

The AC-A100/L components are microcomputer controlled for easy (Direct Function) operation and convenient recording. Combined with the compatible AP-A100/A200 turntable, these components comprise a complete high quality HI-Fi system.

1. PRO-A100 Series Line-up

	PRO-A100	PRO-A100D
Turntable	AP-A100/C	AP-A200/C
AMP-TUNER-DECK	AC-A100/A100L	

2. Features

1) AP-A100/C

- Semi automatic player system
  * Set the record speed, then use the damped cue control arm to lift and lower the tone arm. The Akai AP-A100 will automatically locate the end of each record and return to the tone arm rest when the selection is finished. If you want to lift the tone arm from one section and start another, the tone arm Cue Control Damper eliminates the possibility of accidental scratches to your records.
- Low resonant cabinet which helps prevent distortion
- Sensitive straight tone arm
  T4P * type plug in cartridge (AP-A100C only)
- DIRECT FUNCTION control makes playback and recording operations simple, when combined with the Akai AC-A100/L.

2) AP-A200/C

- Low mass straight tone arm
- Low resonant cabinet which helps prevent distortion
- Semi automatic Direct Drive player system.
  * Set the record speed, then use the damped cue control arm to lift and lower the tone arm. The Akai AP-A200 will automatically locate the end of each record and return to the tone arm rest when the selection is finished. If you want to lift the tone arm from one section and start another, the tone arm Cue Control Damper eliminates the possibility of accidental scratches to your records.

  T4P * type plug in cartridge (AP-A200C only)
- DIRECT FUNCTION control makes playback and recording operations simple, when combined with the Akai PRO-A200.

3) AC-A100/L

Quartz Stereo Synthesizer Tuner

- Microcomputer controlled Tuner for accurate tuning
- Up to 12 stations can be memorized (6 AM band, and 6 FM band)
- FL digital display panel

Stereo Integrated Amplifier

- Five band graphic equalizer for adjusting the sound to suit your taste, can be used during all playback and recording operations.
- DIRECT FUNCTION control automatically activates the tuner, tape deck and Phono.
- BALANCE control and large VOLUME control dial
- CD/VTR input mode selector button for use when you want to play back another audio component connected to the rear panel CD/VTR jacks

Stereo Cassette Deck

- Direct Function recording with the tuner, phono, or other connected audio component
- DOLBY NR (B) switch for use of the Dolby Noise Reduction System
- Full auto stop, the tape will automatically stop during all tape functions, when the end of the tape is reached.
- One touch recording button for easy recording
- Timer (optional) can be used for Timed Playback or Absentee Recording purposes.

SECTION 1

SERVICE MANUAL

MODEL AP-A100/C

TABLE OF CONTENTS

I. SPECIFICATIONS 6
II. DISMANTLING OF UNIT 6
III. CONTROLS 7
IV. PRINCIPAL PARTS LOCATION 7
V. REPLACEMENT OF CARTRIDGE AND TONE ARM ASSEMBLY 8
1. HOW TO CHANGE OR INSTALL THE CARTRIDGE (Refer to Fig. 5-1) 8
2. HOW TO REPLACE THE TONE ARM ASSEMBLY (Refer to Fig. 5-2 to 5-3) 8
VI. MECHANICAL ADJUSTMENT 9
1. TONE ARM LIFTER HEIGHT ADJUSTMENT (Refer to Fig. 6-1, 6-2) 9
2. AUTO-RETURN ADJUSTMENT (Refer to Fig. 6-3) 9
VII. ELECTRICAL ADJUSTMENT 10
1. SPEED ADJUSTMENT 10
VIII. PC BOARD TITLES AND IDENTIFICATION NUMBERS 10

For basic adjustments, measurnig methods, and operating principles, refer to GENERAL TECHNICAL MANUAL.

I. SPECIFICATIONS

TURNTABLE (PLATTER)	Aluminum alloy diecast
DRIVE SYSTEM	Direct drive
MOTOR	FG servo DC motor
SPEED	33-1/3 & 45rpm
WOW & FLUTTER	0.045% (WRMS)
RUMBLE	70dB (DIN-B)
TONE ARM	Static balanced type
EFFECTIVE ARM LENGTH	220mm
STYLUS PRESSURE ADJUSTMENT RANGE	1.25g (fixed)
APPLICABLE CARTRIDGE WEIGHT	5.9g
ARM LIFTER	Oil damped
OVER HANG	17.5mm
CARTRIDGE (AP-A100/C only)	VM type (PC-35/T4P plug-in type)
OUTPUT VOLTAGE	2.5mV
CHANNEL SEPARATION	More than 20dB
OPTIMAL STYLUS PRESSURE	1.25g
DIMENSIONS	440(W) x 99(H) x 347(D)mm (17.3 x 3.9 x 13.7 inches)
WEIGHT	3.2kg (7.1 lbs)

* For improvement purposes, specifications and design are subject to change without notice.

II. DISMANTLING OF UNIT

In case of trouble, etc. necessitating dismantling, please dismantle in the order shown in the photographs. Reassemble in reverse order.

2

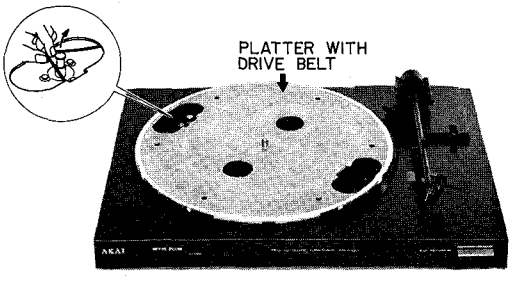

1

3

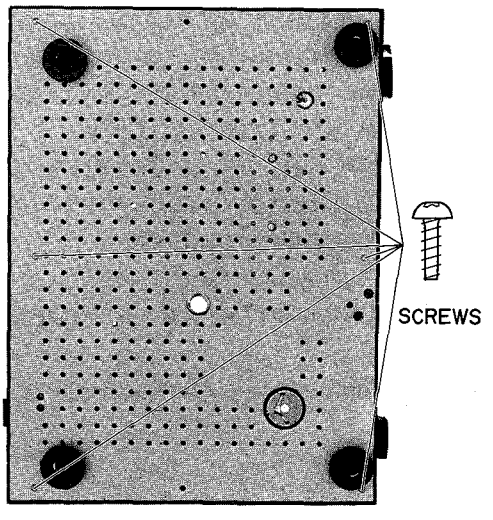

III. CONTROLS

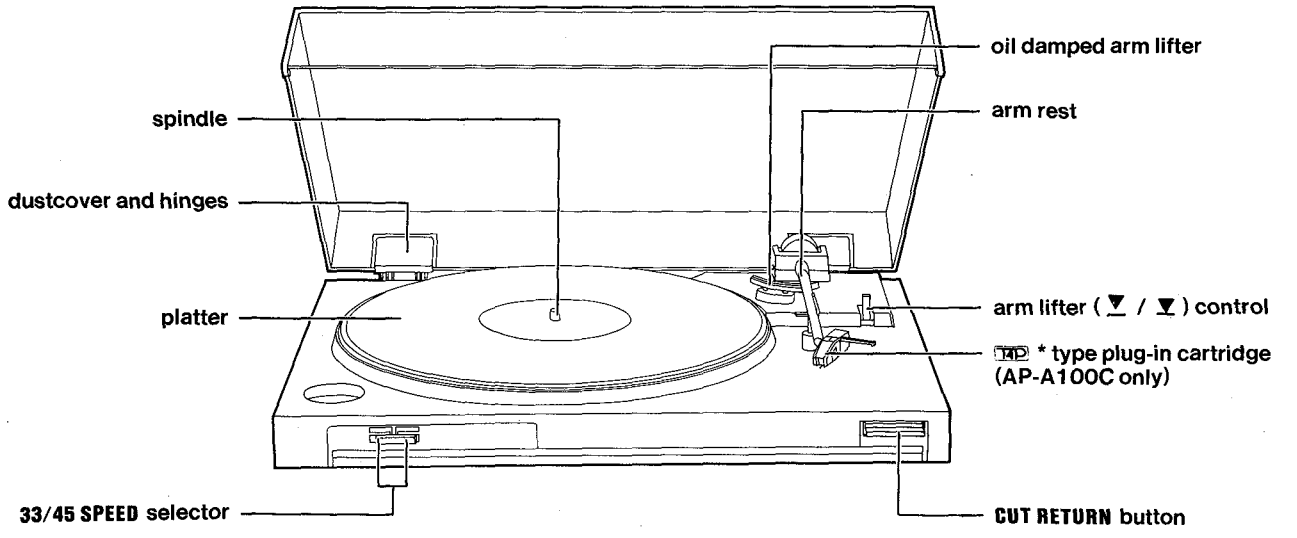

Fig. 3-1 Controls

IV. PRINCIPAL PARTS LOCATION

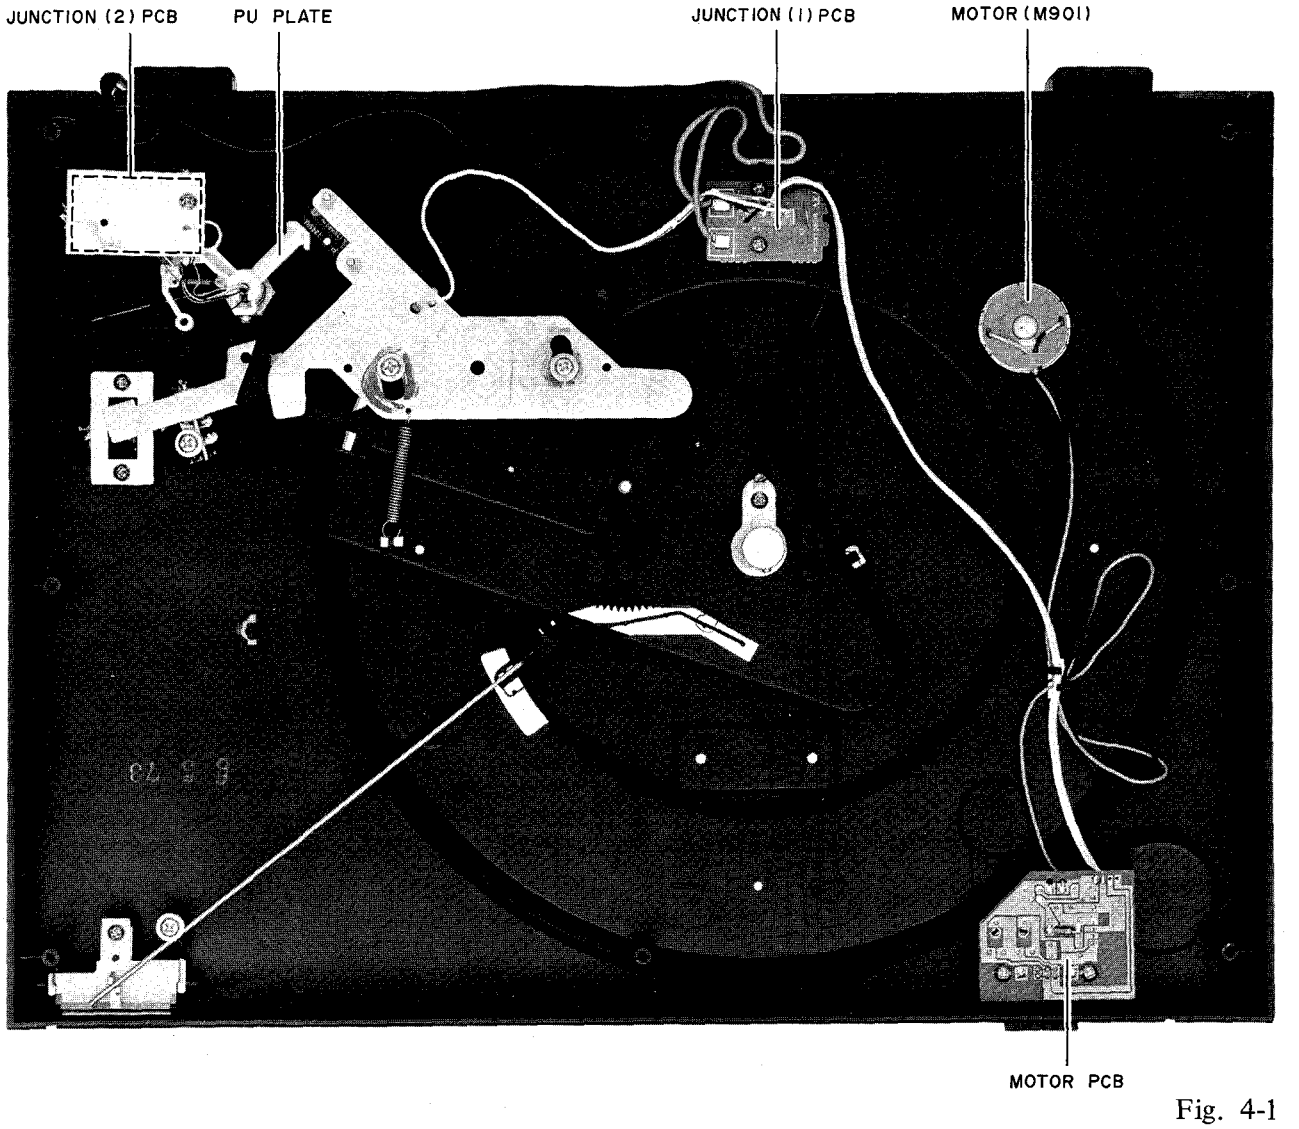

Fig. 4-1

V. REPLACEMENT OF CARTRIDGE AND TONE ARM ASSEMBLY

5-1. HOW TO CHANGE OR INSTALL THE CARTRIDGE (Refer to Fig. 5-1)

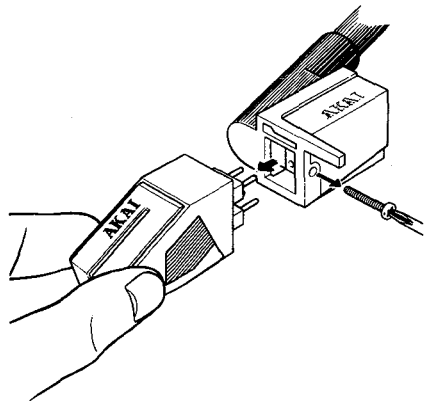

Fig. 5-1

With the tone arm on the tone arm rest and clamped, remove the screw on the side of the tone arm (directly behind the cartridge) by using a screwdriver. After removing the screw, grasp the cartridge firmly and pull it forward, away from the tone arm, until it is free.
Replace the new cartridge by reversing the above operation.
In order to enjoy the full capability of the Akai AP-A100 please note the following when changing the cartridge.

* Repace the cartridge with one which has the same output voltage (2.5mV/1kHz, 5cm/sec peak).
* 14P is the standard mark for plug-in connectors. Connectors with this mark are compatible with each other. The Akai AP-A100 is equipped with a high quality VM cartridge, but any cartridge with the 14P mark can be used.
* Let's protect the records.
  Do not touch the grooves when handling the record.
  Dirty grooves will produce distortions.
  Store records standing in a well ventilated place, relatively free of dust.
* Don't interrupt any movement.
  Do not touch the tone arm or the platter and do not turn off the power under the following conditions:
  * During record playback
  * When the tone arm is moving automatically.
  * When the platter is turning.
* Be sure.
  The ARM LIFTER is in the down (▼) position before attempting to clamp the tone arm to the tone arm rest.

5-2. HOW TO REPLACE THE TONE ARM ASSEMBLY (Refer to Fig. 5-2 to 5-3)

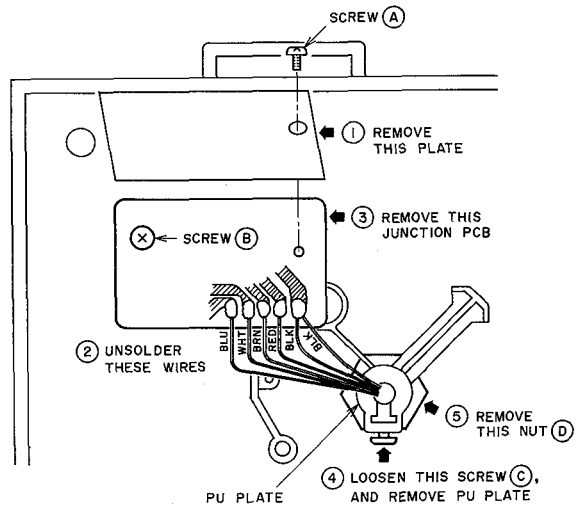

Fig. 5-2

1) Unscrew Ⓐ and remove the shield plate.
2) Remove the wires from Tone Arm Assembly.
3) Unscrew Ⓑ and remove the JUNCTION (2) PCB.
4) Loosen screw Ⓒ and remove the PU lever.
5) Unscrew the Nut Ⓓ and Remove the Tone Arm Assembly.
6) Install the New Tone Arm Assembly and do the reverse way.

After replaced the Tone Arm, PU plate position Adjustment is necessary as follow.

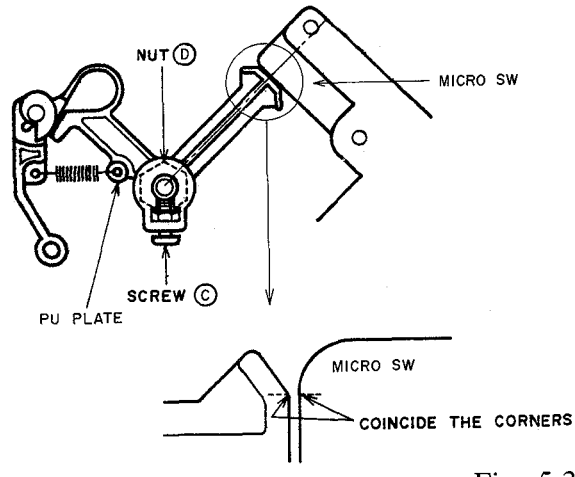

Fig. 5-3

1) Lock the Tone Arm on the TONE ARM REST.
2) Loosen the Screw Ⓒ, and Confirm that the PU PLATE is installed all the way into the Nut Ⓓ.
3) May loosen the screw Ⓒ a little and turn PU PLATE so that the corner of those PU PLATE and Micro SW are coincide as shown Fig. 5-3.
4) Tighten screw Ⓒ.
5) Next excute an AUTO RETURN operation and confirm that the AUTO RETURN position is proper. Do the fine adjustment in item 6-2 AUTO-RETURN ADJUSTMENT if necessary.
6) Paint lock the screw Ⓒ after the adjustment.

VI. MECHANICAL ADJUSTMENT

6-1. TONE ARM LIFTER HEIGHT ADJUSTMENT (Refer to Fig. 6-1, 6-2)

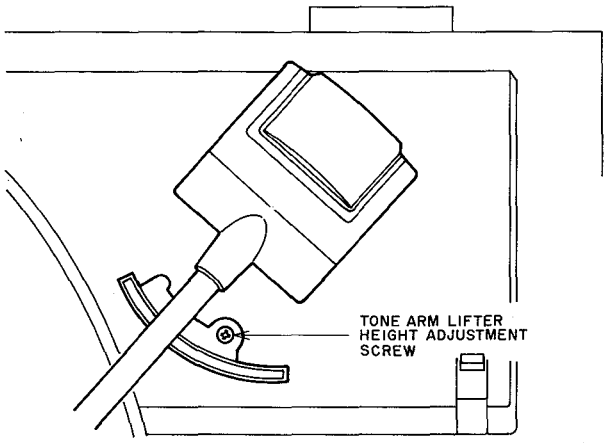

Fig. 6-1



Fig. 6-2

With the Tone Arm in the up-position, the stylus should be about 6mm above the surface of the record.
If it is not, adjust the height by adjusting the TONE ARM HEIGHT ADJUSTMENT SCREW.

Clockwise: Down
Counterclockwise: Up

6-2. AUTO-RETURN ADJUSTMENT (Refer to Fig. 6-3)

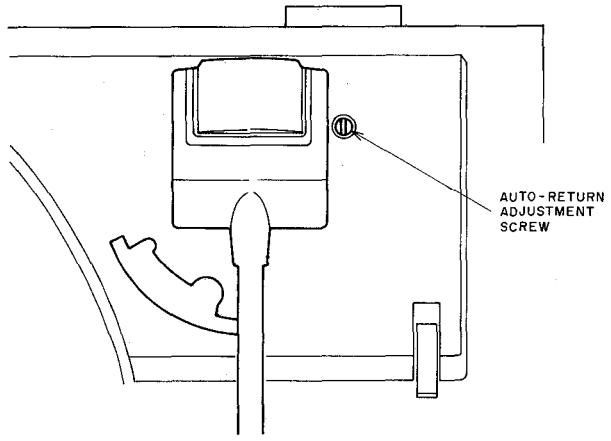

Fig. 6-3

If the Tone Arm does not return automatically to the TONE ARM REST at the end of record.
Adjust auto-return Adjustment screw as follow.

* If the tone arm return before the end of the record Turn the Auto-Return Adjustment Screw Clockwise.
* If the tone arm does not return at the end of record Turn the Auto-Return Adjustment Screw Counter-clockwise.

CAUTION:
Do not turn the Auto-Return Adjustment screw too much.

VII. ELECTRICAL ADJUSTMENT

7-1. SPEED ADJUSTMENT

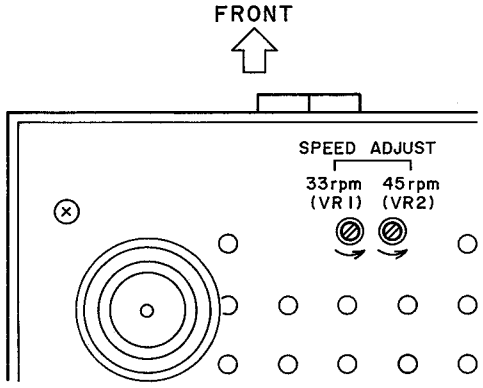

Fig. 7-1 Speed Adjustment Points

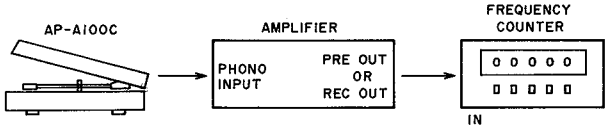

Fig. 7-2 Instruments Connection

1) Connect a Amplifier and Frequency counter as shown Fig. 6-2.
2) Set the Speed Selector to 33-1/3rpm.
3) Play back the Test Record (1000Hz, 33-1/3rpm), and Adjust VR1 so that the speed is 1000±10Hz.
4) Set the speed Selector to 45rpm.
5) Play back the Test Record (1000Hz, 45rpm), and adjust VR2 so that the speed is 1000±10Hz.

NOTE:
This Speed Adjustment should be adjust 33-1/3rpm position first then adjust 45rpm next.

VIII. PC BOARD TITLES AND IDENTIFICATION NUMBERS

PC BOARD TITLE	PC BOARD NUMBER	REMARKS
MOTOR PC BOARD	G-80	
JUNCTION (1) PC BOARD	P1047D501A	
JUNCTION (2) PC BOARD	P1047D501B	

SECTION 2

SERVICE MANUAL

MODEL AP-A200/C

TABLE OF CONTENTS

I. SPECIFICATIONS 12
II. DISMANTLING OF UNIT 12
III. CONTROLS 13
IV. PRINCIPAL PARTS LOCATION 14
V. HOW TO CHANGE OR INSTALL THE CARTRIDGE 14
VI. MECHANICAL ADJUSTMENT 15
1. TONE ARM HEIGHT ADJUSTMENT 15
2. AUTO-RETURN ADJUSTMENT (Refer to Fig. 6-1) 15
3. RETURN ARM POSITION ADJUSTMENT (Refer to Fig. 6-3 & 6-4) 15
VII. ELECTRICAL ADJUSTMENT 16
1. SPEED ADJUSTMENT 16
VIII. PC BOARD TITLES AND IDENTIFICATION NUMBERS 16

For basic adjustments, measuring methods, and operating principles, refer to GENERAL TECHNICAL MANUAL.

I. SPECIFICATIONS

TURNTABLE (PLATTER)	Aluminum alloy dicast
DRIVE SYSTEM	Direct Drive Semi-automatic
MOTOR	FG Servo DC motor
SPEED	33-1/3 & 45 rpm
WOW & FLUTTER	0.045% (WRMS)
RUMBLE	70dB (DIN-B)
TONE ARM	Static balanced type
EFFECTIVE ARM LENGTH	220mm
STYLUS PRESSURE ADJUSTMENT	Oil damped
STYLUS RANGE ADJUSTMENT	1.25g (Final)
APPLICABLE CARTRIDGE WEIGHT CARTRIDGE (AP-A200C only) OUTPUT VOLTAGE CHANNEL SEPARATION OPTIMAL STYLUS PRESSURE	5.9g VM type (PC-35/ 4P Plug in Type) 2.5mV More than 20dB 1.25g
DIMENSIONS	440(W) x 346.5(D) x 94(H) mm (17.3 x 13.6 x 3.7 inches)
WEIGHT	3.2kg (7.0 lbs)

* For improvement purposes, specifications and design are subject to change without notice.

II. DISMANTLING OF UNIT

In case of trouble, etc. necessitating dismantling, please dismantle in the order shown in the photographs. Reassemble in reverse order.

1

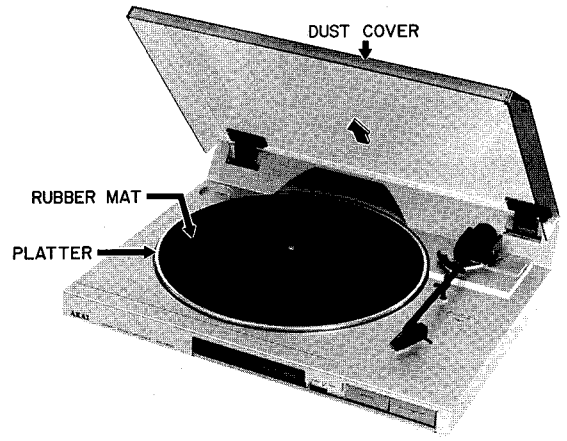

2

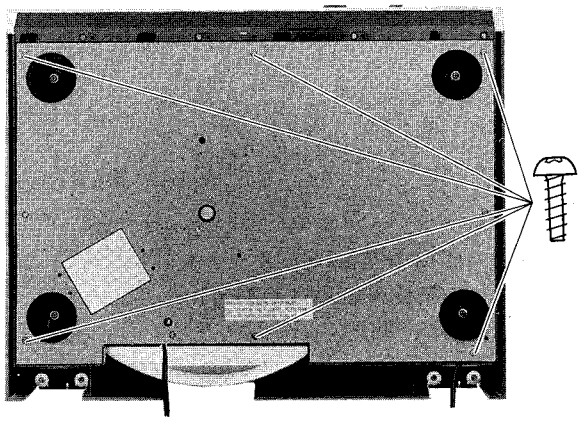

III. CONTROLS

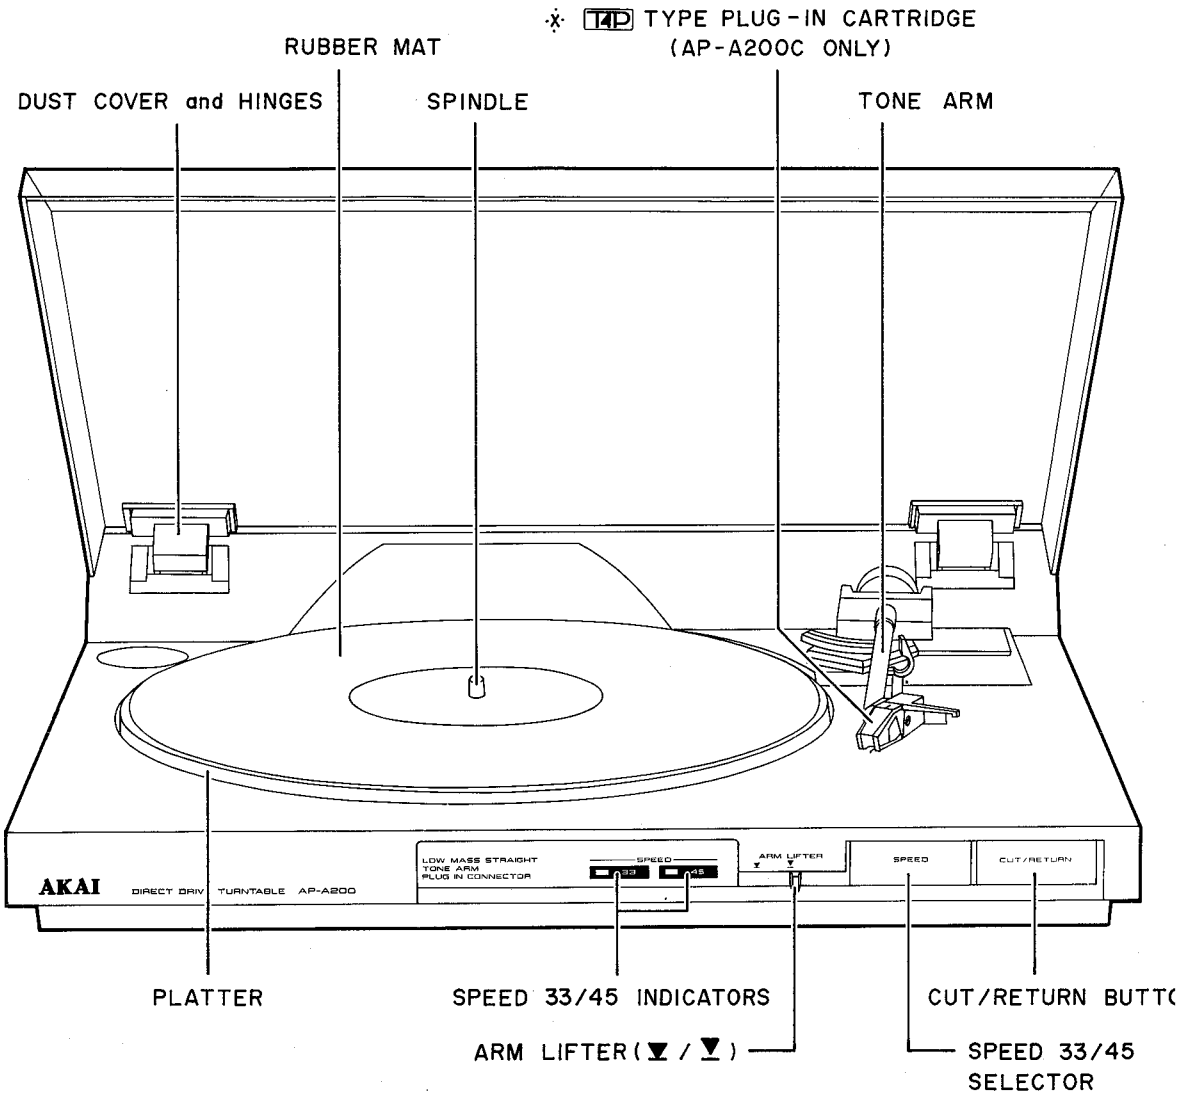

Fig. 3-1 Controls

IV. PRINCIPAL PARTS LOCATION

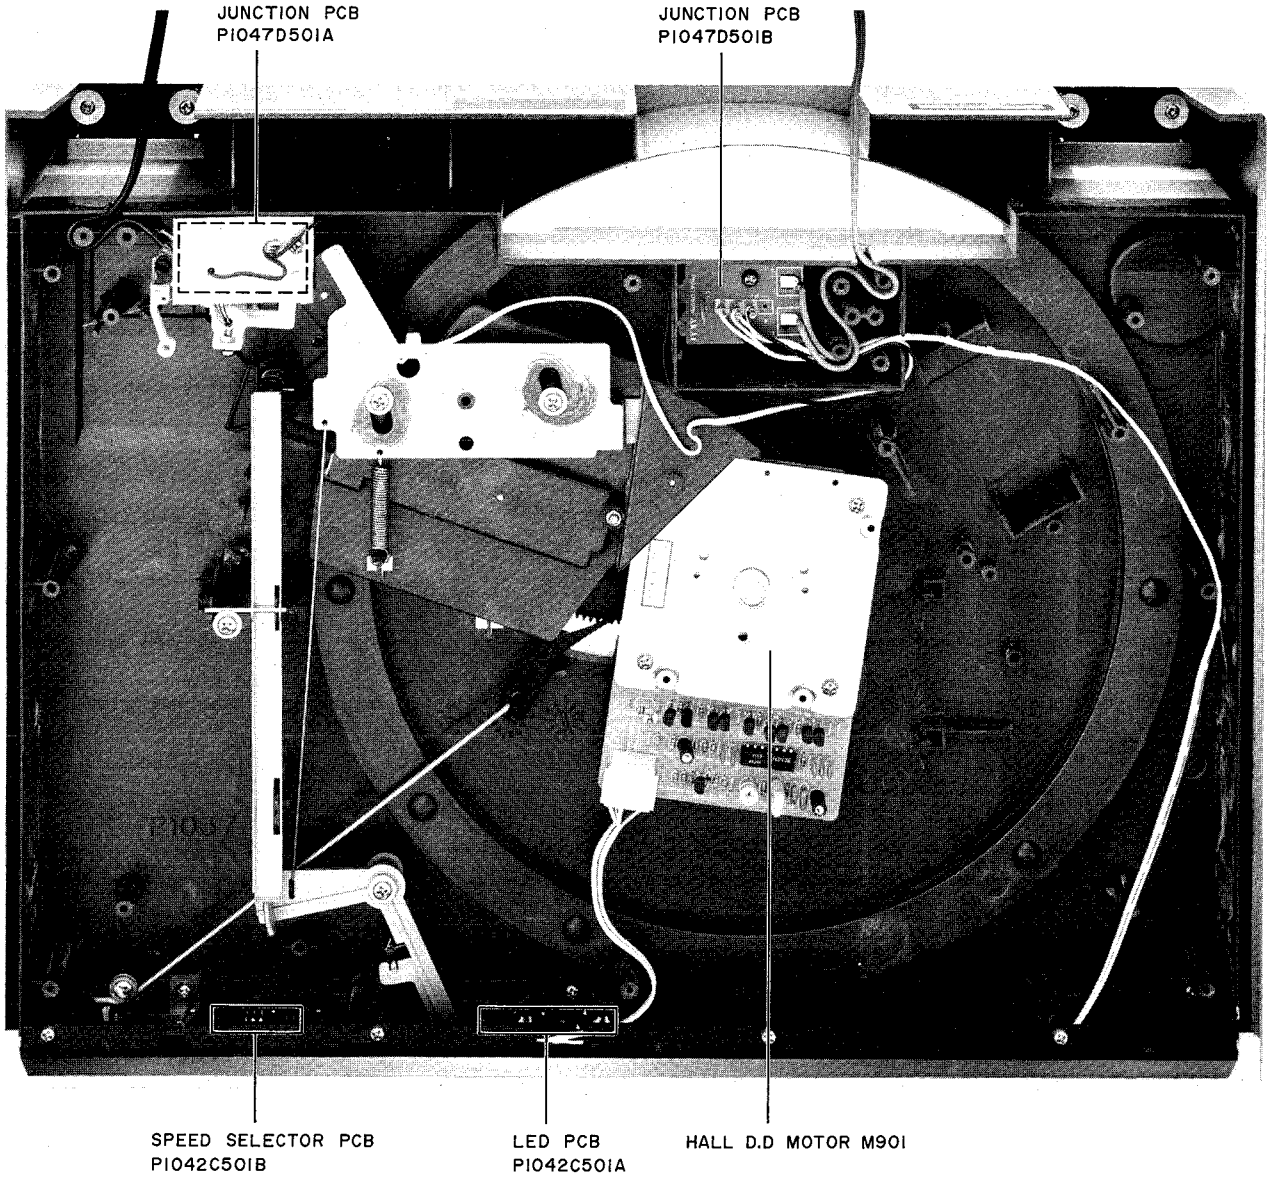

Fig. 4-1 Bottom Side View

V. HOW TO CHANGE OR INSTALL THE CARTRIDGE

With the tone arm on the tone arm rest and clamped, remove the screw on the side of the tone arm-directly behind the cartridge-by using a screwdriver.
After removing the screw, grasp the cartridge firmly and pull it forward, away from the tone arm, until it is free. Replace the new cartridge by reversing the above operation.

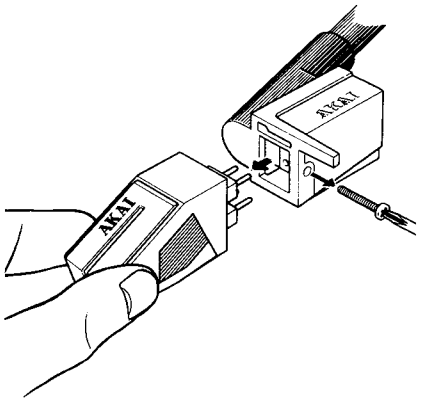

Fig. 5-1

VI. MECHANICAL ADJUSTMENT

6-1. TONE ARM HEIGHT ADJUSTMENT

* WHEN AUTO-CUT (Auto-Return) MODE (Refer to Figs. 6-1 and 6-2).

Set the play mode, and push the Cut Button. While returning the Tone Arm, comfirm the height of the Tone Arm, so that the height are 0.5 to 1.0 mm from flat face of Tone Arm Rest.

If the height is without 0.5 to 1.0 mm, adjust Tone Arm Lifter Height Adjustment screw.

Counterclockwise: Up
Clockwise: Down

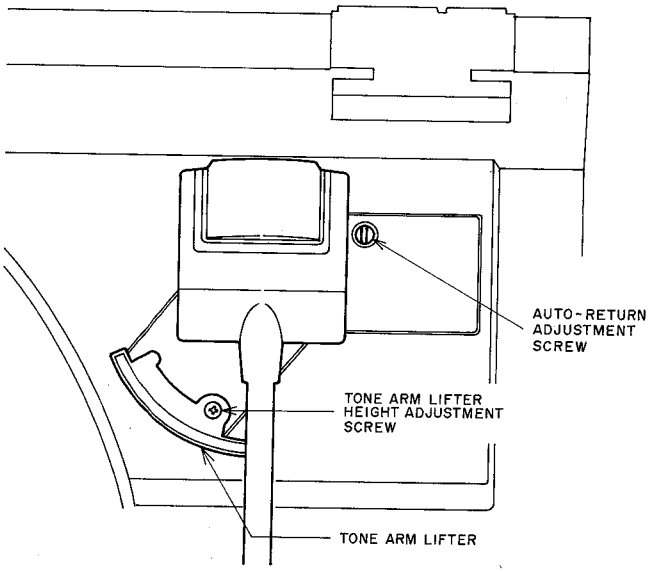

Fig. 6-1

6-2. AUTO-RETURN ADJUSTMENT (Refer to Fig. 6-1)

If the Tone Arm does not return automatically to the Tone Arm Rest at the end of the playback, or does so during playback:

1) Leave the Power Cord connected.
2) Adjust the Auto-Return Adjustment Screw.
   Turn clockwise:
   If the Tone Arm returns before the end of record.
   Turn counterclockwise:
   If the Tone Arm does not return at the end of record.

* Do not turn the screw counterclockwise too much.

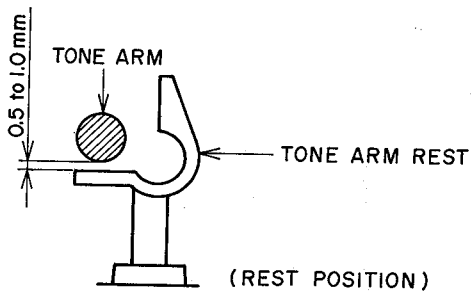

Fig. 6-2

6-3. RETURN ARM POSITION ADJUSTMENT (Refer to Figs. 6-3 & 6-4)

After, replaced the Tone Arm, PU LEVER position Adjustment is necessary as follow.

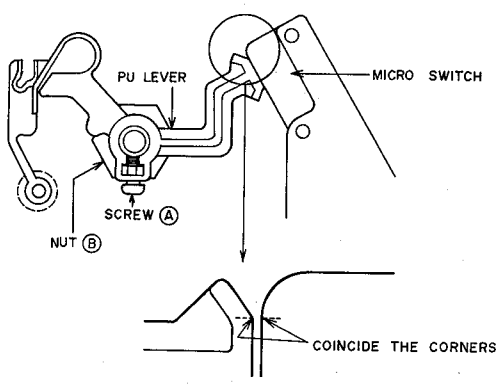

Fig. 6-3

1) Lock the Tone Arm on the ARM REST.
2) Loosen the Screw A, and confirm that the PU LEVER is installed all the way in the Nut B .
3) Turn the PU LEVER so that the corner of those PU LEVER and Micro switch are coincide as shown in Fig. 6-3.
4) Tighten the Screw A .
5) Move the Tone Arm to the spindle side, and confirm that micro switch is switched "ON" at about center between Tone Arm Rest position and platter as shown in Fig. 6-4.

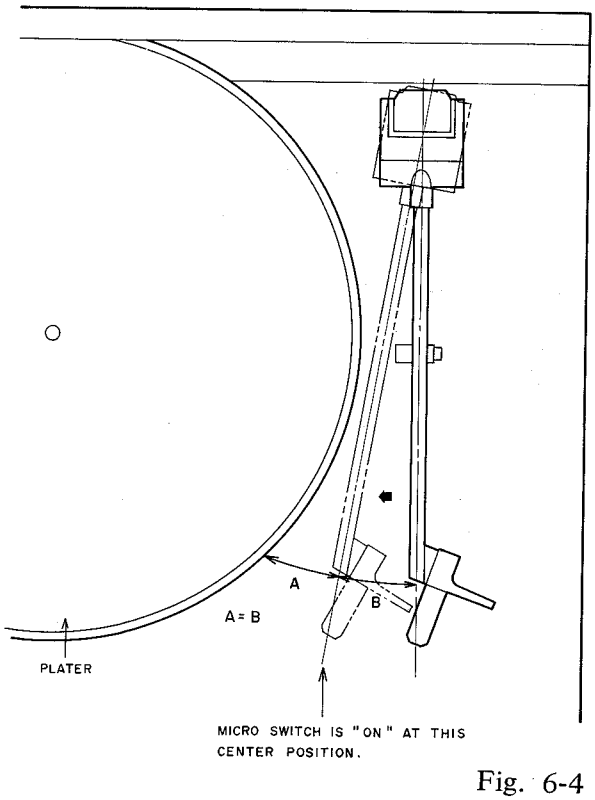

Fig. 6-4

VII. ELECTRICAL ADJUSTMENT

7-1. SPEED ADJUSTMENT

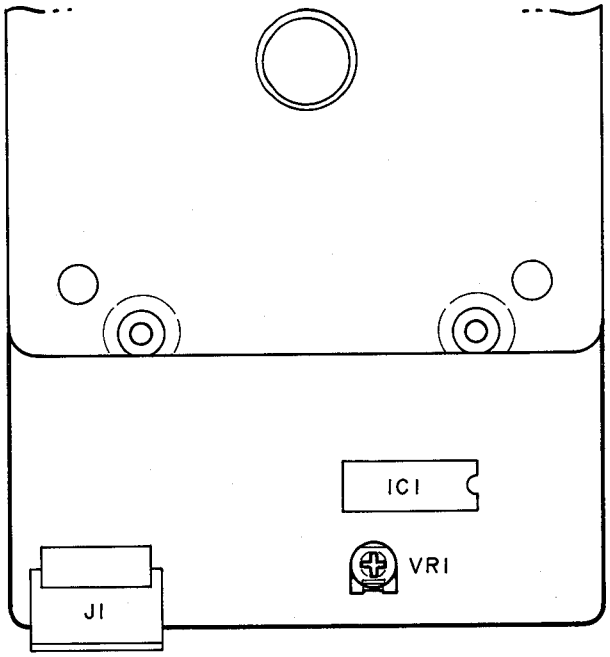

Fig. 7-1

1) Set the Speed Selector to 33-1/3rpm.
2) Playback the Test Record (33-1/3rpm, 1000Hz).
3) Adjust VR1 (10kohms) so that the speed is 1000 ±10Hz.
4) Set the Speed Selector to 45rpm.
5) Playback the Test Record (45rpm, 1000Hz).
6) Confirm that the Speed is 1000±10Hz.

VIII. PC BOARD TITLES AND IDENTIFICATION NUMBERS

PC BOARD TITLE	PC BOARD NUMBER	REMARKS
LED PC BOARD	P1042C501A	
SPEED SELECTOR PC BOARD	P1042C501B	
JUNCTION (A) PC BOARD	P1047D501A	
JUNCTION (B) PC BOARD	P1047D501B	

SECTION 3

SERVICE MANUAL

MODEL AC-A100/L

TABLE OF CONTENTS

I. **SPECIFICATIONS** 18
II. **DISMANTLING OF UNIT** 20
III. **CONTROLS** 21
IV. **PRINCIPAL PARTS LOCATION** 22
V. **MECHANICAL ADJUSTMENT** 23
1. PINCH ROLLER PRESSURE MEASUREMENT 23
2. WINDING TORQUE MEASUREMENT IN EACH MODE 23
3. TAPE SPEED ADJUSTMENT 23
4. REC/PB HEAD AZIMUTH ADJUSTMENT 23
VI. **ELECTRICAL ADJUSTMENT** 24
1. INSTRUMENT CONNECTIONS FOR CASSETTE DECK 24
2. CASSETTE DECK ADJUSTMENT 24
3. INSTRUMENT CONNECTIONS FOR TUNER ADJUSTMENT 26
4. HOW TO ADJUST TUNING COIL 27
5. FM SECTION ADJUSTMENTS 28
6. LW SECTION ADJUSTMENTS (AC-A100L ONLY) 29
7. AM (MW) SECTION ADJUSTMENT 29
VII. **PC BOARD TITLES AND IDENTIFICATION NUMBERS** 30

For basic adjustments, measuring methods, and operating principles, refer to GENERAL TECHNICAL MANUAL.

I . SPECIFICATIONS

POWER AMPLIFIER SECTION

	8ohms
RATED POWER OUTPUT 40Hz to 20kHz	35W/0.3%
POWER OUTPUT (BY FTC) 40Hz to 20kHz	35W/0.3%
DIN 1kHz	40W/0.7%
MUSIC POWER (BOTH CHANNELS)	180W
POWER BANDWIDTH (IHF –3dB, 8ohms)	10Hz to 40kHz (0.5%)
S/N (IHF-A) PHONO	70dB
CD/VTR	90dB
RESIDUAL NOISE (8ohms)	0.5mV
CHANNEL SEPARATION (IHF, 1kHz)	50dB
DAMPING FACTOR (1kHz, 8ohms)	30
REQUIRED SPEAKER IMPEDANCE	8 to 16ohms

PRE AMPLIFIER SECTION

INPUT SENSITIVITY/IMPEDANCE PHONO	2.5mV/47kohms
CD/VTR	250mV/47kohms
FREQUENCY RESPONSE	
PHONO (RIAA DEVIATION)	±0.5dB
TUNER, AUX, TAPE	5Hz to 100kHz (–3 dB)
GRAPHIC EQUALIZER	
TYPE	5 bands
CENTER FREQUENCY	63Hz/250Hz/1kHz/4kHz/16kHz
CONTROL RANGE	±10dB

TUNER SECTION

FM TUNER SECTION

TUNING FREQUENCY RANGE	87.5MHz to 108.0MHz
USABLE SENSITIVITY (300ohms)	12.7dBf
QUIETING SENSITIVITY (S/N=50dB)	19.2dBf (Mono)/40.2dBf (Stereo)
CAPTURE RATIO	2.0dB
SELECTIVITY (400kHz)	60dB
IMAGE REJECTION	50dB
IF REJECTION	80dB
SPURIOUS REJECTION	80dB
AM SUPPRESSION	50dB
SUB CARRIER SUPPRESSION	55dB
S/N (IHF)	70dB (Mono)/60dB (Stereo)
T.H.D.	0.2% (Mono) 0.4% (Stereo)
STEREO SEPARATION (1kHz)	40dB
FREQUENCY RESPONSE	30Hz to 15kHz ±1.0dB

AM TUNER SECTION (MW & LW FOR AC-A100L)

	AM tuner section	LW tuner section
	(MW FOR AC-A100L)	(FOR AC-A100L)
TUNING FREQUENCY RANGE		
USA & CANADA	530kHz to 1,610kHz	–
OTHER COUNTRIES	531kHz to 1,602kHz	146kHz to 353kHz
USABLE SENSITIVITY (LOOP ANTENNA)	300uV/m	800uV/m
SELECTIVITY	30dB	40dB
IMAGE REJECTION	45dB	45dB
IF REJECTION	35dB	35dB
S/N	40dB	35dB
T.H.D.	1.0%	2.0%

OUTPUT SECTION

OUTPUT LEVEL FM	700mV (100% Mod.)
AM (MW FOR AC-A100L)	250mV (30% Mod.)
DIMENSIONS	440(W) x 66(H) x 210(D)mm (17.3 x 2.6 x 8.3 inches)
WEIGHT	1.6kg (3.5 lbs)

DECK SECTION

TRACK SYSTEM	4 track 2 channel stereo
TAPE	Phillips type cassette
HEADS	HD head for recording and playback x1 Erase head x1
MOTOR	Electronically speed controlled DC motor x1
WOW & FLUTTER	0.05% WRMS (JIS), 0.12% (DIN)
FREQUENCY RESPONSE NORMAL CrO_2	 30Hz to 15,000Hz ±3dB 30Hz to 16,000Hz ±3dB
S/N DOLBY NR SWITCH ON:	56dB Improves up to 5dB at 1kHz, 10dB above 5kHz
HARMONIC DISTORTION	Less than 0.7%
POWER REQUIREMENTS	120V, 60Hz for USA & CANADA 220V, 50Hz for Europe except UK 240V, 50Hz for UK & Australia 110V/120V/220V/240V, 50Hz/60Hz convertible for other countries.
DIMENSIONS	440(W) x 265(H) x 223(D) mm (17.3 x 10.4 x 8.8 inches)
WEIGHT	6.6kg (14.6 lbs)

* For improvement purposes, specifications and design are subject to change without notice.
* Noise Reduction manufactured under license from Dolby Laboratories Licensing Corporation. "Dolby" and the double-D symbol are trade marks of Dolby Laboratories Licensing Corporation.

II. DISMANTLING OF UNIT

In case of trouble, etc. necessitating dismantling, please dismantle in the order shown in the photographs. Reassemble in reverse order.

1

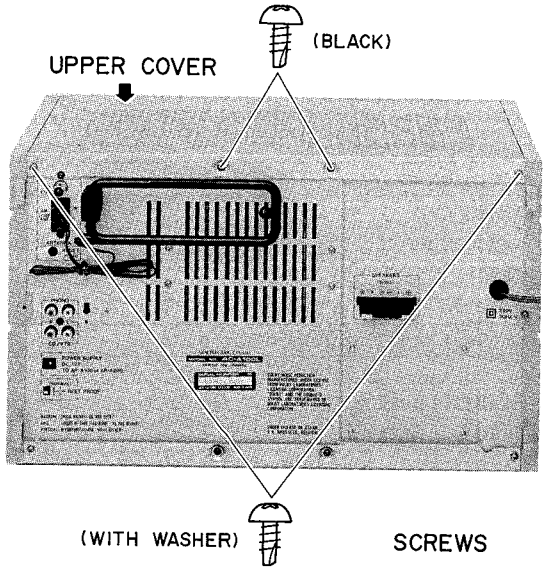

2

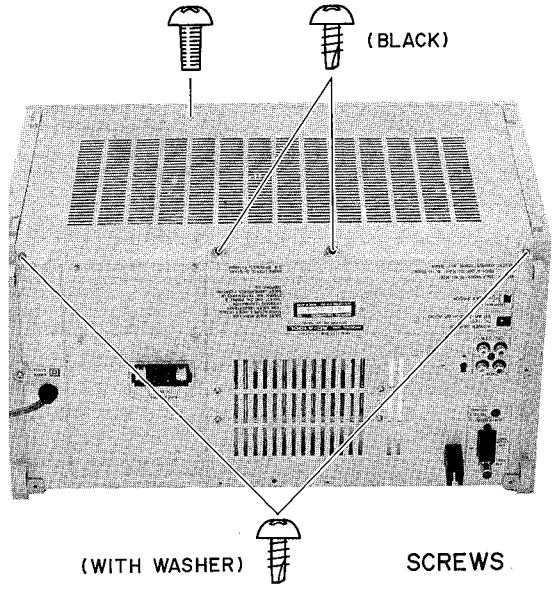

How to disassemble BASE PCB.

3

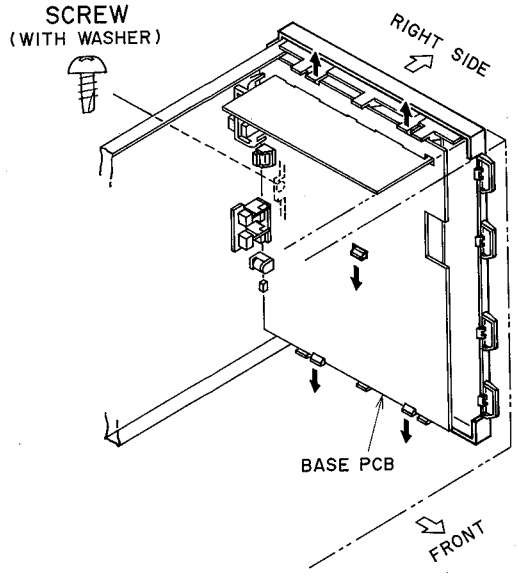

4

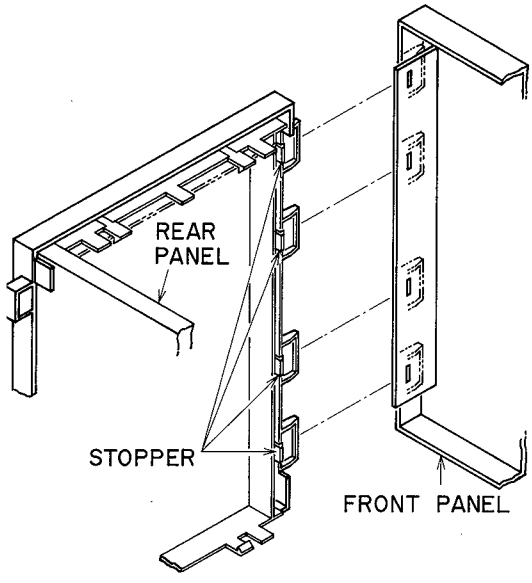

III. CONTROLS

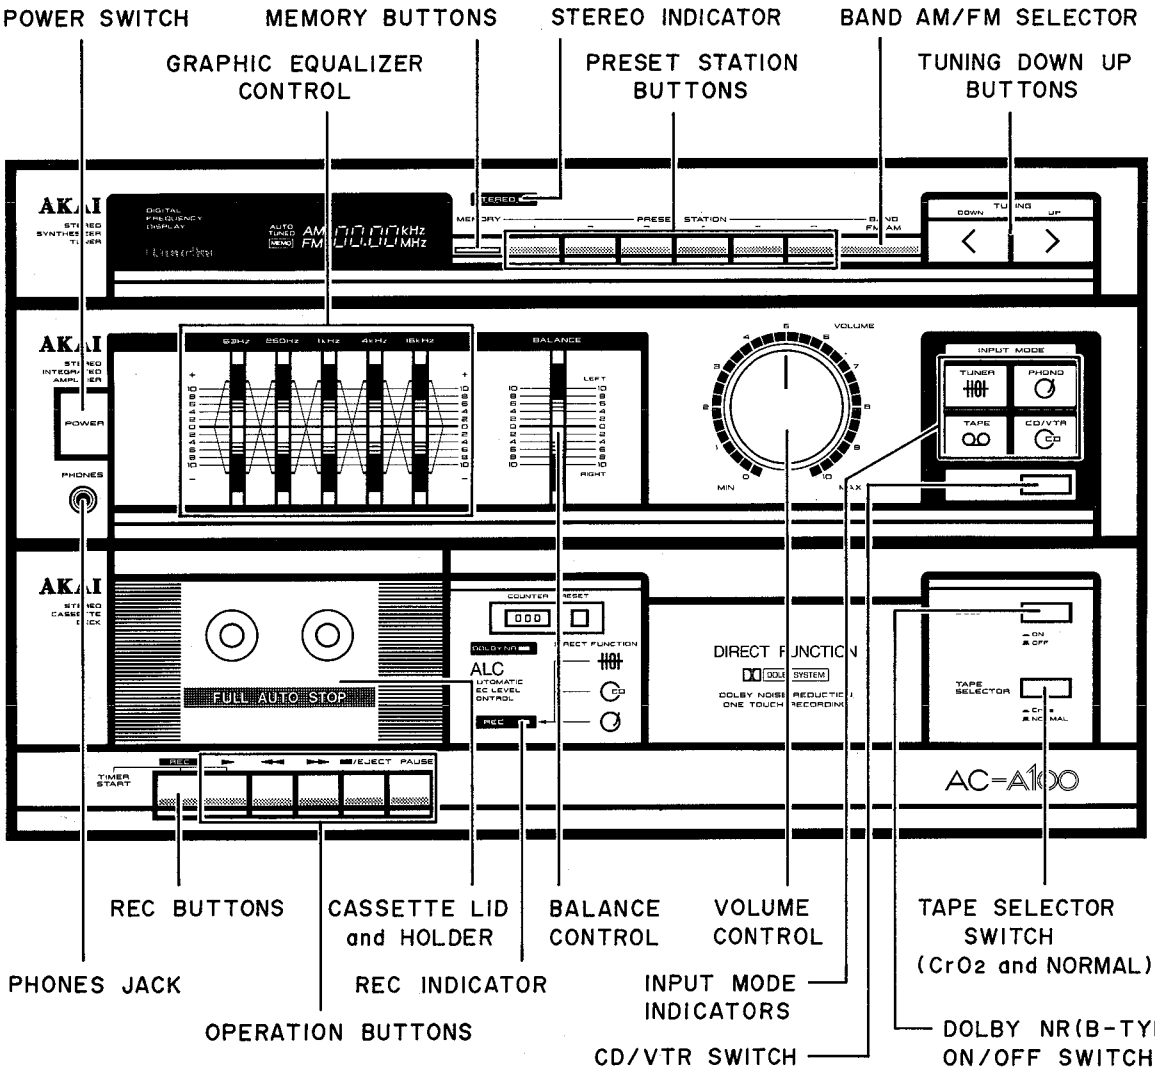

IV. PRINCIPAL PARTS LOCATIONS

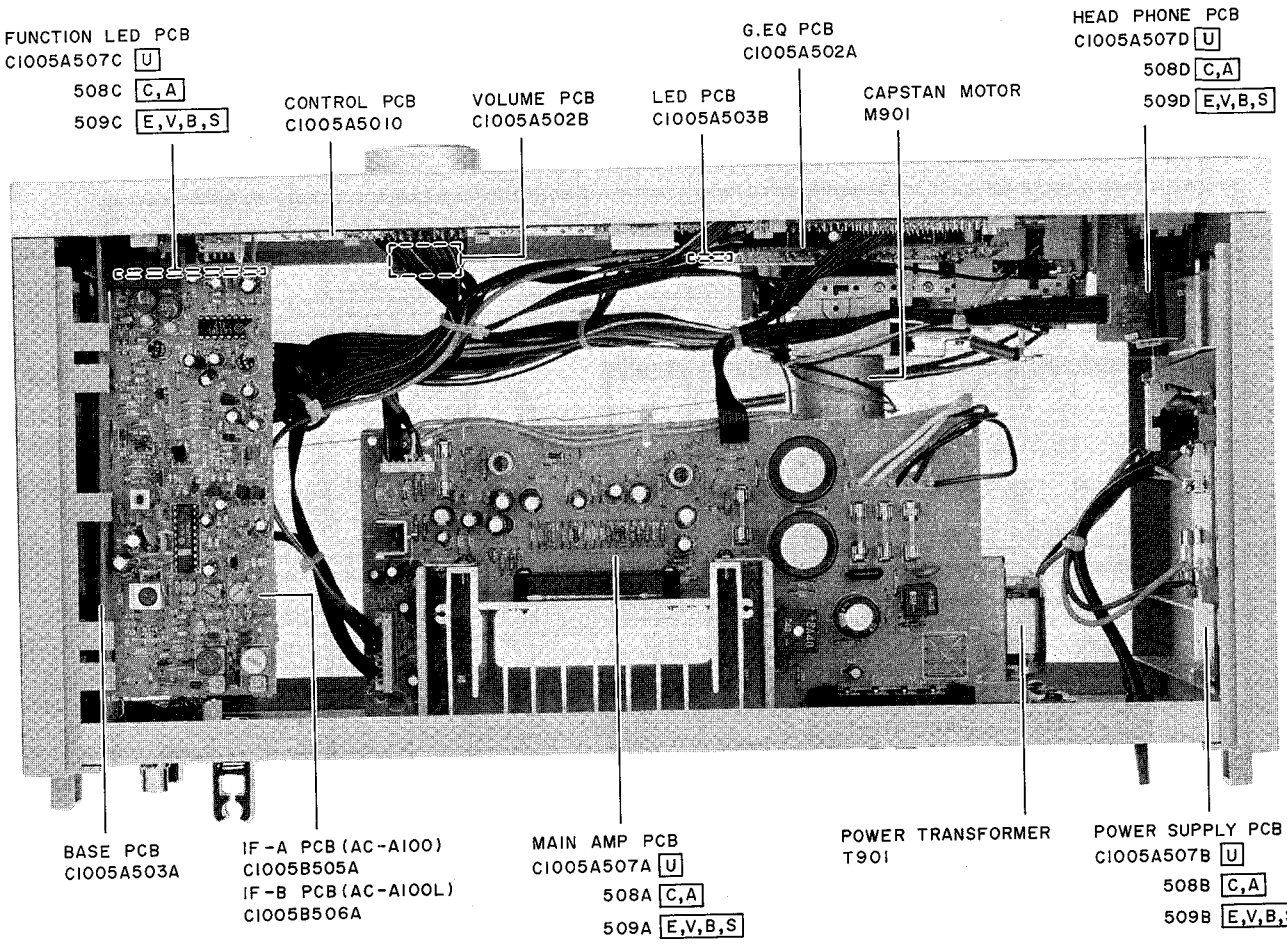

Fig. 4-1

V. MECHANICAL ADJUSTMENT

5-1. PINCH ROLLER PRESSURE MEASUREMENT

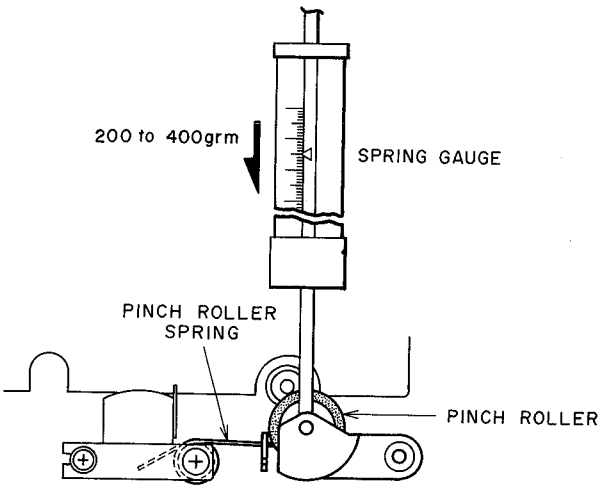

Fig. 5-1

Put in PLAY mode. Push pinch roller arm down with the spring gauge, push the pinch Roller 1 to 2 mm from the Capstan and release slowly.
Read the spring gauge at the moment the pinch roller touches the capstan and begins to totate. Specified contact pressure measurement of 200 to 400 grm. If there is no measurement obtained, Adjust or Replace the pinch Roller spring.

5-2. WINDING TORQUE MEASUREMENT IN EACH MODE

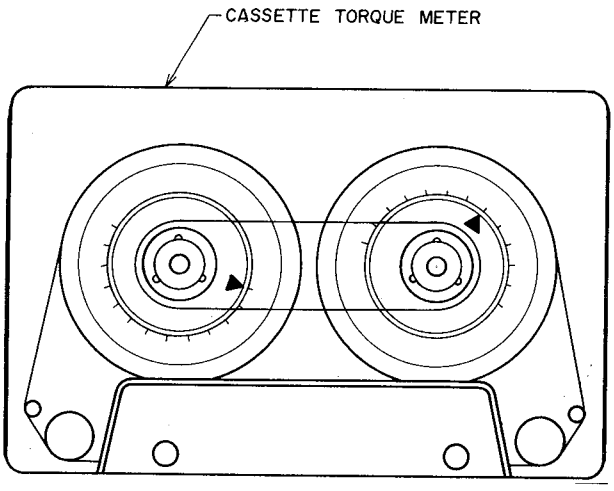

Fig. 5-2

Insert cassette torque meter (AJ-751179) and measure in each mode.
PLAY mode
Tack up Torque: 35 to 75 grm-cm
Back tension torque: 1 to 6 grm-cm
FAST FORWARD, REWIND mode
Tack up Torque: 80 to 140 grm-cm

5-3. TAPE SPEED ADJUSTMENT

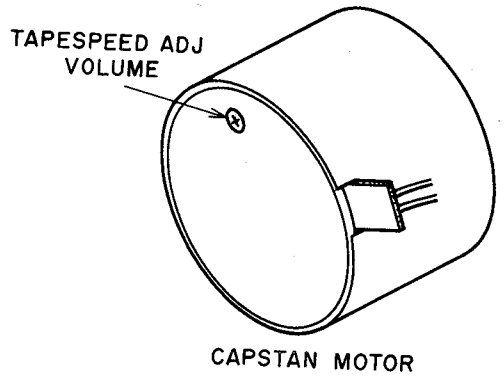

Fig. 5-3

5-4. REC/PB HEAD AZIMUTH ADJUSTMENT

Connect a frequency Counter to Line output terminals. Play Back a 3,150Hz Tape Speed Test Tape (AT-751263) and adjust a Tape Speed Adjustment Volume (see Fig. 5-3) to obtain a tape speed of 3,150 ±30Hz.

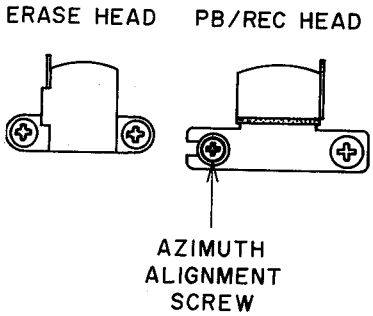

Fig. 5-4

Play back a 10kHz Azimuth Alignment tape (AT-750778) and adjust the Azimuth Alignment Screw, untill the output levels of both channels are maximum. After Adjustment, Paintlock the azimuth Alignment Screw.

VI. ELECTRICAL ADJUSTMENT

6-1. INSTRUMENT CONNECTIONS FOR CASSETTE DECK

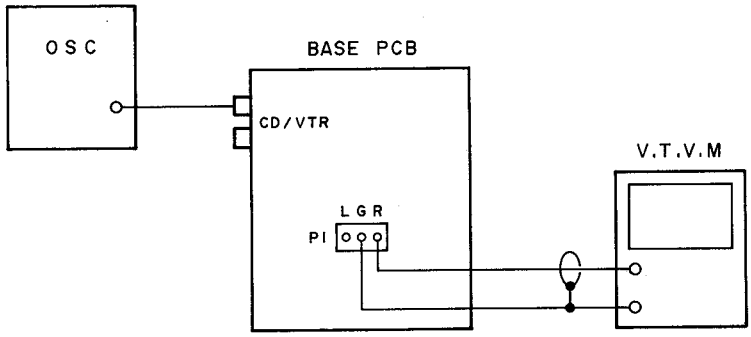

6-2. CASSETTE DECK ADJUSTMENT

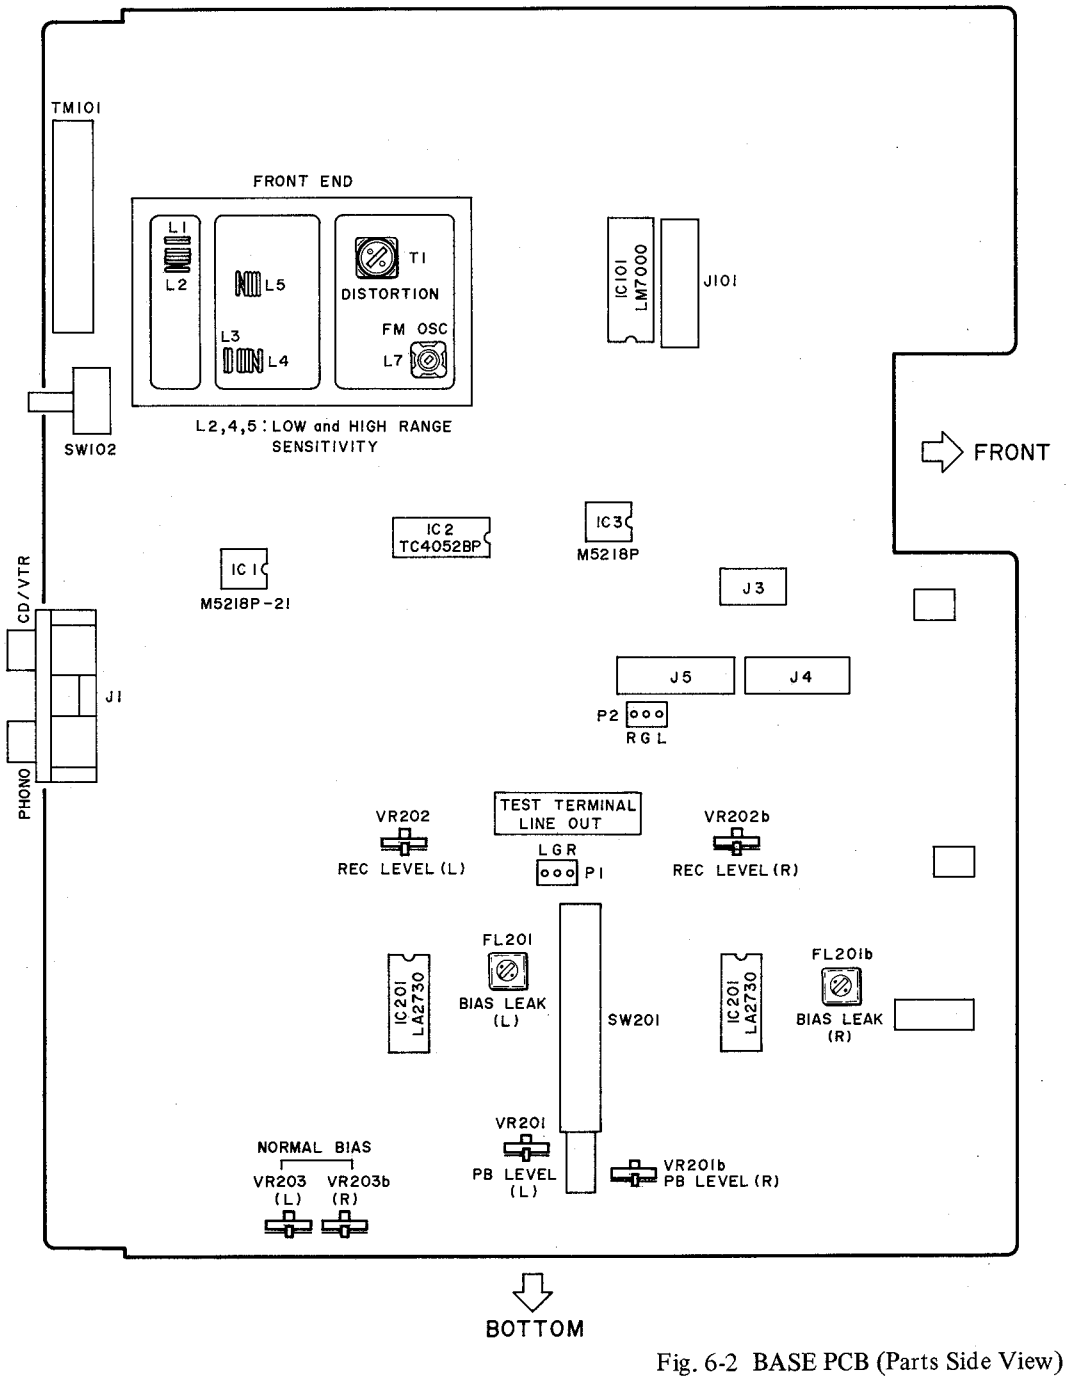

Fig. 6-2 BASE PCB (Parts Side View)

Step	Adjustment Item	Input Signal or Test Tape	Mode	Adjustment Parts	Result	Remarks
1	PB LEVEL	315Hz	PB	VR201	−19.7±1.5dB	
2	NORMAL BIAS	NORMAL Blank Tape 1kHz, 10kHz −39.7dBm	REC/ PB	VR203	1kHz, 10kHz −39.7±0.3dBm	BEAT SW: NORMAL
3	REC LEVEL	NORMAL Blank Tape 315Hz, −19.7dBm	REC/ PB	VR202	−19.7±0.2dBm	BEAT SW: NORMAL
4	BIAS LEAK	NO SIGNAL	REC	FL201	Less than −60dBm	BEAT

NOTE: 1. All adjustments are without Dolby.
2. Use the following cassette measuring tapes:
NORMAL TAPE : Maxell UDI C-60
CrO_2 TAPE : TDK SA C-60

6-3. INSTRUMENT CONNECTIONS FOR TUNER ADJUSTMENT

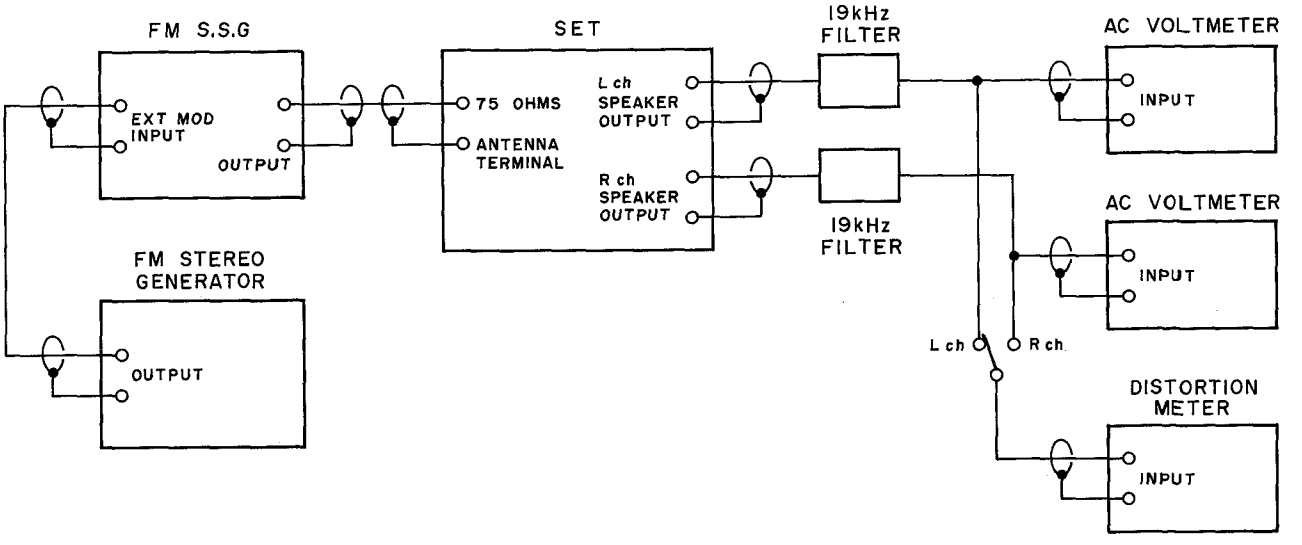

Fig. 6-3 Instrument Connections for FM Section Adjustment

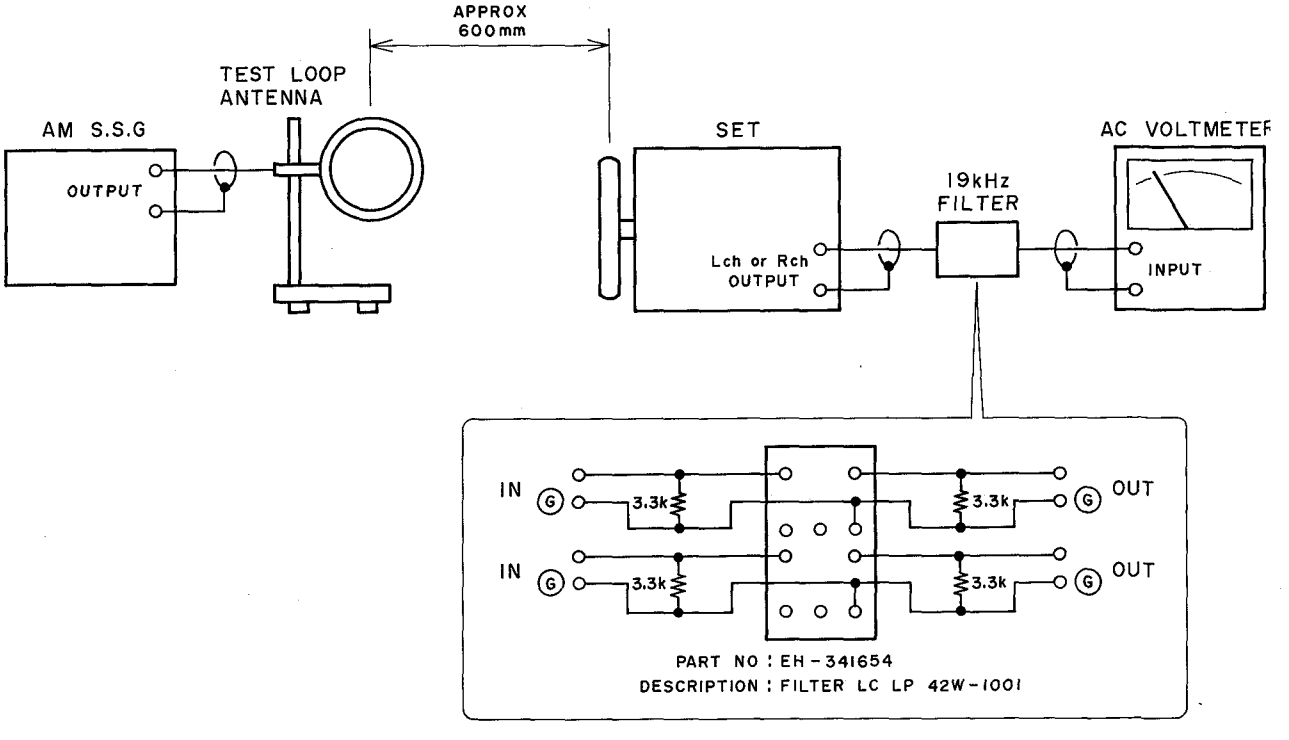

Fig. 6-4 Instrument Connections for AM (MW, LW) Section Adjustment

6-4. HOW TO ADJUST TUNING COIL

Normally, no adjustment will be required of the coils within the front end. If, however, any of the coils has inadvertently been stretched and its adjustment needs to be restored, follow the procedure below for re-adjustment.

1) Contact the stretched coil to restore its original form.
2) Open one end of the coil (by refering to the illustration).
3) After the above preparations, first adjust the low range by confirming to the adjusting procedure. The coil stretching procedure for this process is shown in Fig. .
4) Next, similarly adjust the high range.
5) Repeat 3 and 4 a few times until the best possible sensitivity is attained.

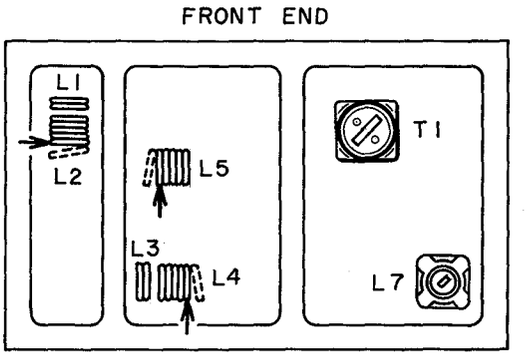

Fig. 6-5

Fig. 6-6

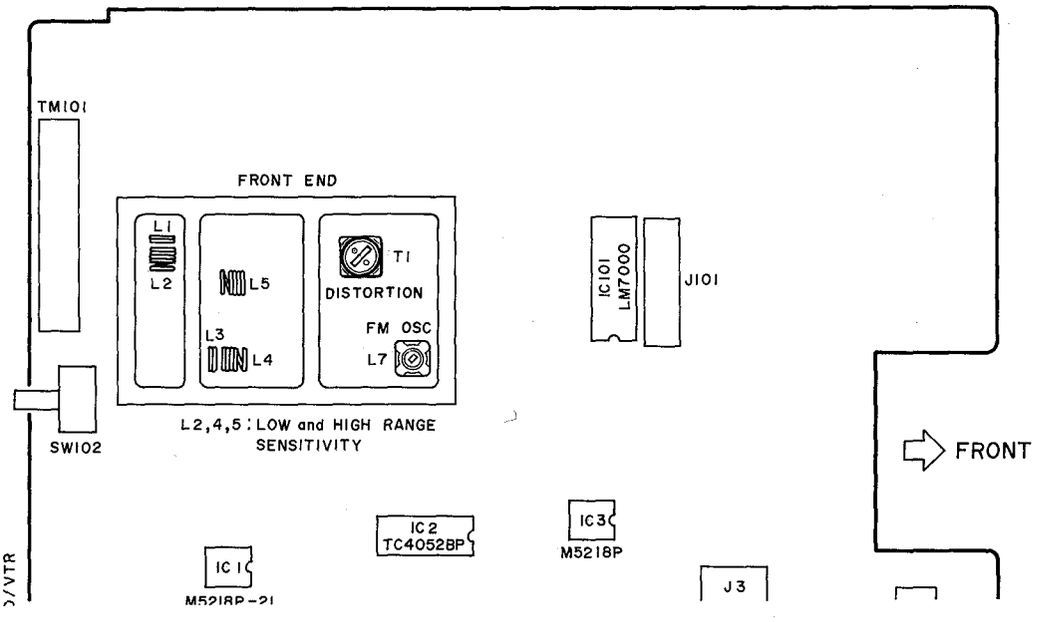

Fig. 6-7 BASE PC BOARD

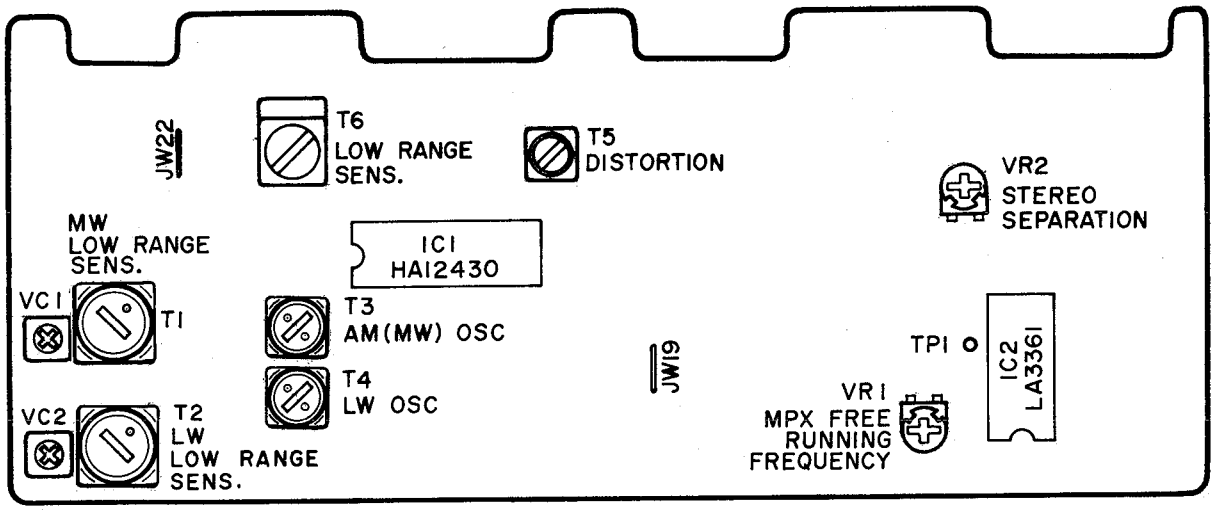

Fig. 6-8 IF PCB (Parts Side View)

6-5. FM SECTION ADJUSTMENTS

NOTE: 1) Set the S.S.G. to 1kHz, 75kHz diviation for U,C,A,S 40kHz diviation for B,E,V.
2) Set the Band Switch to FM.
3) (MHz) indicate for B,E,V model.
4) 0dBu = 1uV
5) Set the Equalizer to flat position.

Step	Adjustment Item	S.S.G. Freq./ATT	SET Tuning	Adjustment Parts	Result	Remarks
1	FM OSC	–	87.5MHz	L7 (Front End)	3.5±0.05V	1) Connect a Digital Volt Meter between JW22 and GND.
2	LOW RANGE Sensitivity	88MHz 10dBu (MONO)	88MHz	L2,L4,L5 (Front End)	Less than 3% Distortion	1) Connect a wire between Base of JW19 and GND. (Mute OFF)
3	High Range Sensitivity	108MHz 10dBu (MONO)	108MHz	L2,L4,L5 (Front End)	Less than 3% Distortion	1) Connect a wire between JW19 and GND. (Mute OFF)
4	For best Result, Repeat steps 2 and 3 two or three times.					
5	Distortion (MONO)	88MHz 60dBu (MONO)	88MHz	T5	Less than 1% Distortion	
6	MPX Free Running Frequency	–	–	VR1	19kHz±50Hz	1) Connect a Frequency counter between TP1 and GND.
7	Distortion (Stereo)	98MHz 60dBu Stereo Lch (Rch)	98MHz	T1 (Front End)	Less than 1% Distortion	See Note 3
8	Stereo Separation	98MHz 60dBu Stereo Lch (Rch)	98MHz	VR2	More than 35dBm Minimum Output of Rch (Lch)	

6-6. LW SECTION ADJUSTMENTS (AT-A200L ONLY)

NOTE: 1) Set the S.S.G. to 1kHz 30% modulation.
2) Set the Equalizer to flat position.

Step	Adjustment Item	S.S.G. Freq./ATT	SET Tuning	Adjustment Parts	Result	Remarks
1	LW OSC	–	300kHz	T4	5.82±0.05V	1) Connect a Digital volt Meter between JW22 and GND.
2	LOW Range Sensitivity	160kHz 65dBu	160kHz	T2,T6	Less than 10% Distortion	
3	High Range Sensitivity	300kHz 65dBu	300kHz	VC2	Less than 10% Distortion	
4	For best Result, Repeat steps 2 and 3 two or three times.					
5	Distortion Confirmation	200kHz 74dBu	200kHz	None	Less than 3% Distortion	

6-7. AM (MW) SECTION ADJUSTMENT

NOTE: 1) Set the S.S.G. to 1kHz 30% modulation.
2) (kHz) in S.S.G. frequency and set tuning indicates the Test Frequency in AM 9kHz STEP Area.
3) Set the Equalizer to flat position.

Step	Adjustment Item	S.S.G. Freq./ATT	SET Tuning	Adjustment Parts	Result	Remarks
1	AM (MW) OSC	–	1400kHz (1404kHz)	T3	6.7±0.1V	1) Connect a Digital volt Meter between JW22 and GND.
2	Low Range Sensitivity	600kHz (603kHz) 60dBu	600kHz (603kHz)	T1,T6	Less than 10% Distortion	
3	High Range Sensitivity	1400kHz (1404kHz) 60dBu	1400kHz (1404kHz)	VC1	Less than 10% Distortion	
4	For best Result, Repeat Steps 2 and 3 two or three times.					
5	Distortion (Confirmation)	1000kHz (999kHz) 74dBu	1000kHz (999kHz)	None	Less than 2% Distortion	

VII. PC BOARD TITLES AND IDENTIFICATION NUMBERS

PC BOARD TITLE		PC BOARD NUMBER	REMARKS
MAIN AMP	PC BOARD	C1005A507A	U
MAIN AMP	PC BORAD	508A	C,A
MAIN AMP	PC BOARD	509A	E,V,B,S
POWER SUPPLY	PC BOARD	C1005A507B	U
POWER SUPPLY	PC BOARD	508B	C,A
POWER SUPPLY	PC BOARD	509B	E,V,B,S
FUNCTION LED	PC BOARD	C1005A507C	U
FUNCTION LED	PC BOARD	508C	C,A
FUNCTION LED	PC BOARD	509C	E,V,B,S
HEADPHONE	PC BOARD	C1005A507D	U
HEADPHONE	PC BOARD	508D	C,A
HEADPHONE	PC BOARD	509D	E,V,B,S
G.EQ	PC BOARD	C1005A502A	
VOLUME	PC BOARD	C1005A502B	
CONTROL	PC BOARD	C1005A5010	
IF-A	PC BOARD	C1005B505A	AC-A100
IF-B	PC BOARD	C1005B506A	AC-A100L
BASE	PC BOARD	C1005A503A	
LED	PC BOARD	C1005A503B	

SECTION 4

PARTS LIST

TABLE OF CONTENTS

I. MODEL AP-A100/C 33
1. MOTOR PC BOARD 33
2. FINAL ASSEMBLY BLOCK 33
II. MODEL AP-A200/C 34
RECOMMENDED SPARE PARTS 34
1. MOTOR PC BOARD 34
2. SPEED SELECTOR PC BOARD 34
3. LED PC BOARD 34
4. FINAL ASSEMBLY BLOCK 34
III. MODEL AC-A100/L 36
RECOMMENDED SPARE PARTS 36
1. MECHA BLOCK 37
2. PC BOARD BLOCK 38
3. BASE PC BOARD 38
4. FRONT END PC BOARD 38
5. IF PC BOARD 38
6. MAIN AMP PC BOARD 39
7. G.EQ PC BORAD 39
8. VOLUME PC BOARD 39
9. HEADPHONE PC BOARD 39
10. CONTROL PC BOARD 39
11. FUNCTION LED PC BOARD 39
12. LED PC BOARD 39
13. POWER SUPPLY PC BOARD 39
14. ASSEMBLY BLOCK 40
15. FINAL ASSEMBLY BLOCK 42
INDEX 43
1. MODEL AP-A100/C 43
2. MODEL AP-A200/C 43
3. MODEL AC-A100/L 44

Resistor and Capacitor which is not listed in this parts list, please refer to COMMON LIST FOR SERVICE PARTS.

ATTENTION

1. When placing an order for parts, be sure to list the parts no. model no., and description of each part. If any of this information is omitted, there are instances in which parts cannot be shipped or the wrong parts will be delivered.
2. Please be careful not to make a mistake in the parts no. If the parts no. is in error, a part different from the one ordered may be delivered.
3. Because part numbers and part definitions and supply in the Preliminary Parts List may have been the subject of changes, please use this parts list for all future reference.

HOW TO USE THIS PARTS LIST

1. This Parts List shows those parts which are considered necessary for repairs. Other parts, such as resistors and capacitors, are shown in the "Common List for Service Parts" from which these parts should be selected and parts.
2. The Recommended Spare Parts List shows those parts in the Parts List which are considered particularly important for service.
3. Parts not shown in the Parts List and "Common List for Service Parts" will not in principle be supplied.
4. How to read the parts list
   a) Mechanism Block
   b) P.C Board Block

2. HEAD BASE BLOCK

REF. NO.	PART NO.	DESCRIPTION
2-1x	BH-T2023A320A	HEAD BASE BLOCK GX-F66R
2-2	HP-H2206A010A	HEAD R/P PR4-8FU C
2-3	ZS-477876	PAN20×03STL CMT
2-4	ZS-536488	BID20×08STL CMT
2-5	ZG-402895	CS ANGLE ADJUST SPRING

SP (Service Parts) Classification

A small "x" indicates the inability to show that particular part in the Photo or Illustration.

This number corresponds with the individual parts index number in that figure

This number corresponds with the Figure Number

6. SYS. CON. P C BOARD BLOCK

REF. NO.	PART NO.	DESCRIPTION
6-1	BA-T2034A070A	PC SYS CON BLK GX-F44R
6-IC1	EI-324536	IC HD14049BP
6-IC2	EI-336801	IC MB8841-564M
6-IC3	EI-331661	IC SN7405N
6-IC4	EI-336725	IC M54527P
6-TR1to4	ET-200985	TR 2SC2603 F,G
6-TR5to28	ET-554657	TR 2SA733A P,Q
6-D1	ED-318292	D SILICON H 1S2473T-77 T26
6-D2to4	ED-308952	D GERMA V 1K34A-LR F07
6-D5to10	ED-318292	D SILICON H 1S2473T-77 T26
6-X1	EI-318384	OSC X'TAL NC-18C 3.579545MHZ

SP (Service Parts) Classification

These reference symbols correspond with component symbols in the Schematic Diagrams.

5. The kind of part and its installation position can both be determined by the Part Number. To determine where a part number is listed, utilize the Parts Index at the end of the Parts List. It is necessary first of all to find the Part Number. This can be accomplished by using the Reference Number listed at the right of the part number in the Parts Index.

WARNING

⚠ INDICATES SAFETY CRITICAL COMPONENTS. FOR CONTINUED SAFETY, REPLACE SAFETY CRITICAL COMPONENTS ONLY WITH MANUFACTURE'S RECOMMENDED PARTS

AVERTISSEMENT

⚠ IL INDIQUE LES COMPOSANTS CRITIQUES DE SÉCURITÉ. POUR MAINTENIR LE DEGRÉ DE SÉCURITÉ DE L'APPAREIL, NE REMPLACER QUE DES PIÈCES RECOMMANDEES PAR LE FABRICANT

I. MODEL AP-A100/C

FINAL ASSEMBLY BLOCK

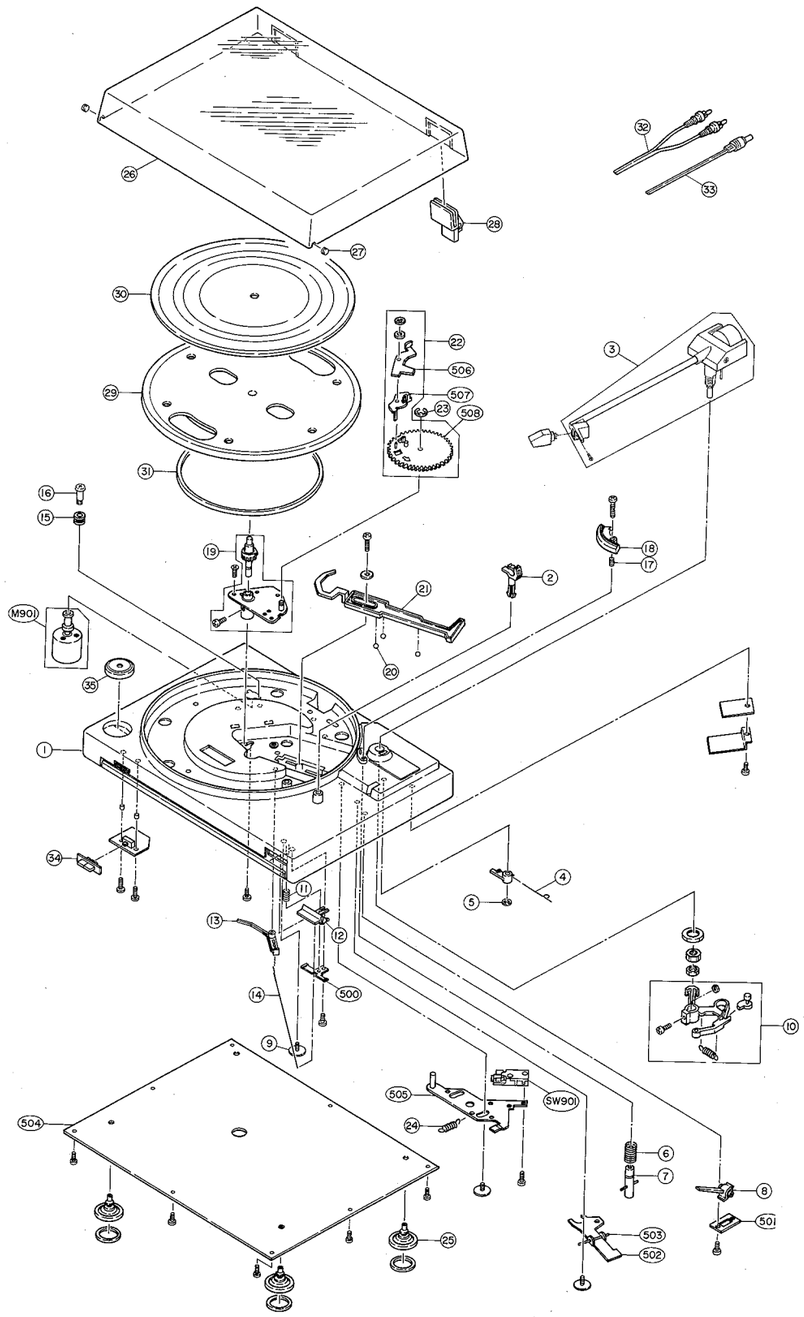

NOTE: Parts listed in 1 to SW901 on the exploded view and list are normally stocked for replacement purpose. The remaining parts shown in this manual are not normally stocked, because they are seldom required for routine service.

Optional Accessory
Cartridge PC-35

1. MOTOR PC BOARD

REF. NO.	PART NO.	DESCRIPTION
1-IC1	EI-357879	IC LA5512
1-SW1	ES-358768	SW SLIDE SSY322-059
1-VR1,VR2	EV-315416	R S-FIX H D8 3P 103

SYMBOL FOR DESTINATION
[A]: AAL (USA)
[B]: UK (England)

2. FINAL ASSEMBLY BLOCK

REF. NO.	PART NO.	DESCRIPTION
2-1	BC-358036A	CABINET AP-A100
2-1B	BC-358036B	CABINET AP-A100-B
2-2	TP-358836	CLAMPER ARM
2-3	TP-351625	TONE ARM ARM-A1
2-4	ZG-353257	SP TORSION CANCELER
2-5	ZW-340648	RING CS 190STL PKR
2-6	ZG-325402	SP ELEVATION
2-7	TP-345341	SHAFT ELEVATION
2-8	SK-345362A	KNOB ELEVATION
2-8B	SK-345362E	KNOB ELEVATION-B
2-9	ZS-358930	SCREW B Y 3824
2-10	TP-P1034A040A	PU PLATE BLK AP-B1
2-11	ZG-313181	SP C-04.5/0.35-16.0 C-028
2-12	SK-351739	KNOB CUT
2-13	ML-358006	LEVER MANUAL
2-14	MZ-358034	WIRE CUT
2-15	MB-345351B	CUSHION RUBBER (2)
2-16	ZS-350767	SCREW
2-17	ZG-332548	SP PUSH (A)
2-18	TP -B332568X2	ARM ELEVATION PART
2-19	TP-B345367	CHASSIS SPINDLE PART
2-20	MV-269965	BALL 400STL
2-21	ML-345348	LEVER AUTO
2-22	TP-P1034A080A	GEAR MAIN BLK AP-B1
2-23	ZW-270101	RING E 300SUP CMT
2-24	ZG-313073	SP T1-06.3/0.50-28.0 T1-18510
2-25	SA-332577C	INSULATOR (C)
2-26	BC-B332582	DUST COVER PART
2-27	TP-301300	COVER CUSHION
2-28	TP-336361	HINGE AUTO OH-5
2-28B	TP-336362	HINGE AUTO OH-5-BL
2-29	TP-348321	PLATTER
2-30A	TP-348266A	TABLE SHEET A [U,B]
2-30B	TP-348266B	TABLE SHEET B [A]
2-31	MB-355119	BELT EP
2-32A	EW-358749	CORD 2P AUDIO CORD [U,B]
2-32B	EW-358750	CORD 2P AUDIO UL [A]
2-33	EW-358754	CORD 2CORES DC CORD UL
2-34	SK-351613B	KNOB SLIDE-B
2-35	AX-332567C	45 ADAPTER-S
2-35B	AX-332567D	45 ADAPTER-B
2-M901	BM-354988	MOTOR BFD2R16
2-SW901	ES-316432	SW MICRO K2(P)

SYMBOL FOR COLOR VARIATION
NON : STANDARD COLOR
B OR BL : BLACK

II. MODEL AP-A200/C

RECOMMENDED SPARE PARTS

Because, if the parts listed below are on hand, almost any repair can be accomplished, we suggest that you stock these Recommended Spare Parts Items.

REF. NO.	PART NO.	DESCRIPTION
1 N	BM-360085	⚠ MOTOR SS09DA
2	ED-349656	D LED AY5505S
3	ED-337391	D LED GL5NG6 GREEN
4	ED-557447	D SILICON H 1S1588
5	ED-708712	D SILICON 1S1555
6	EI-780137	IC VC1031
7	ES-325488	SW MICRO K1(P)
8	ES-337843	SW PUSH ESB-64501 02-2
9	ET-308867	TR 2SA1015 O,Y,GR
10	ET-742510	TR 2SA950 O,Y
11	ET-330225	TR 2SC1815 BL
12	ET-328844	TR 2SC3120 O,Y
13	EV-780138	R S-FIX 103
14	TP-P1034A080A	MAIN GEAR BLK AP-B1

"NOTE" N: New Parts
SYMBOL FOR DESTINATION
[A]: AAL (USA)
[B]: UK (England)
[U]: U/T (Universal Area)

1. MOTOR PC BOARD

REF. NO.	PART NO.	DESCRIPTION
1-IC1	EI-780137	IC VC1031
1-Q1,Q2	ET-328844	TR 2SC2110 O,Y
1-Q3,Q4	ET-742510	TR 2SA950 O,Y
1-Q5,Q6	ET-308867	TR 2SA1015 O,Y,GR
1-Q7,Q8	ET-330225	TR 2SC1815 BL
1-Q9	ET-308867	TR 2SA1015 O,Y,GR
1-Q10	ET-330225	TR 2SC1815 BL
1-Q11	ET-742510	TR 2SA950 O,Y
1-D1	ED-708712	D SILICON 1S1555
1-VR1	EV-780138	R S-FIX 103
1-R1	ER-353877	⚠ R OMF H S15 FS 1W 1R0J

2. SPEED SELECTOR PC BOARD

REF. NO.	PART NO.	DESCRIPTION
2-D1,D2	ED-557447	D SILICON H 1S1588
2-SW1	ES-337843	SW PUSH ESB-64501 02-2

3. LED PC BOARD

REF. NO.	PART NO.	DESCRIPTION
3-D1	ED-337391	D LED GL5NG6 GREEN
3-D2	ED-349656	D LED AY5505S

4. FINAL ASSEMBLY BLOCK

REF. NO.	PART NO.	DESCRIPTION
4-1	BC-353231D	CABINET (2)
4 -1B	BC-353231F	CABINET (2)-B
4-2	TP-358836	C LAMPER ARM
4-3	ZG-358951	SP ELEVATION
4-4	MS-353238	SHAFT ELEVATION
4-5	ZG-353257	SP TORSION CANCELER
4-6	ZW-340648	RING CS 190STL PKR
4-7	TP-353252	TONE ARM ARM-A2
4-8	ZW-325521	N120×170×30STL CMT P100
4-9	TP-P1037A040A	LEVER PU PLATE BLK AP-A2
4-10	ZS-358930	SCREW B Y 3824
4-11	ZW-340648	RING CS 190STL PKR
4-12	ZS-310984	PT BR30×08STL CMT
4-13	ZG-358000	SP TORSION KNOB
4-14	ZW-331536	PW21×050×013PSL
4-15	ZW-382083	WASHER (NYLON) D6.1×13×1T
4-16	TP-358003	WIRE ELEVATION
4-17	ML-358006	LEVER MANUAL
4-18	TP-353712	HINGE ASSY AP-A2
4-19	ZS-349118	S CREW W/FRANGE
4-20	ZG-332548	SP PUSH (A)
4-21	TP-B332568X2	ARM ELEVATION PART
4-22	TP-360072	LEVER REJECT (B)
4-23	MV-269965	BALL 400STL
4-24	ML-345348	LEVER AUTO
4-25	TP-P1034A080A	MAIN GEAR BLK AP-B1
4-26	ZW-290283	RING U 285SUP CMT
4-27	ZG-313073	SP T1-06.3/0.50-28.0 T1-185
4-28	SA-332577	INSULATOR
4-29	TP-358012A	ANGLE LIFTER
4-29B	TP-358012B	ANGLE LIFTER-B
4-30xA	AX-332567C	45 ADAPTER-S
4-30xB	AX-332567D	45 ADAPTER-B
4-31	BD-P1047A020A	PANEL FRONT BLK AP-A200-C
4-31B	BD-P1047A020B	PANEL FRONT BLK AP-A200-CB
4-32	SK-358010A	KNOB CUT
4-33	SK-358011A	KNOB SPEED
4-34	ZG-358952	SP KNOB (B)
4-35	SP-359109	SP KNOB (C)
4-36	ZS-332009	PT BR30×06STL CMT [PANEL FRONT FIX]
4-37	BC-B353247	DUST COVER PART
4-38	MB-343057	COVER CUSHION
4-39	TP-B358014	PLATTER PART
4-40A	TP-348266B	TABLE SHEET B [A]
4-40B	TP-348266A	TABLE SHEET A [U,B]
4-41	EW-358754	CORD 2CORES DC CORD UL
4-42A	EW-358750	CORD 2P AUDIO UL [A]
4-42B	EW-358749	CORD 2P AUDIO CORD [U,B]
4-M901	BM-360085	⚠ MOTOR SS09DA
4-SW901	ES-325488	SW MICRO K1(P)

NOTE: Parts listed in 1 to SW901 on the exploded view and list are normally stocked for replacement purpose. The remaining parts shown in this manual are not normally stocked, because they are seldom required for routine service.

Optional Accessory
Cartridge PC-35

III. MODEL AC-A100/L

RECOMMENDED SPARE PARTS

Because, if the parts listed below are on hand, almost any repair can be accomplished, we suggest that you stock these Recommended Spare Parts Items.

REF. NO.		PART NO.	DESCRIPTION
1		BF-712807	FLFWHEEL ASSY
2		BL-712799	PINCH ROLLER ARM ASSY
3		BM-712825	⚠ MOTOR (W/PULLEY) ASSY
4	N	BT-359042	⚠ TRANS POWER C1005T-20(A)
5	N	BT-359041	⚠ TRANS POWER C1005T-30(C)
6	N	BT-359045	⚠ TRANS POWER C1005T-40(E,V)
7	N	BT-359046	⚠ TRANS POWER C1005T-50(S,B)
8	N	BT-359040	⚠ TRANS POWR C1005T-70(U,Y1)
9	N	EC-359065	CS-FIX H CTC-6U-020 4.3-20
10		ED-200213	⚠ D SILICON DBA40C-K15 200/2.6A
11		ED-346616	⚠ D ZENER H HZ12 B3
12		ED-337391	D LED GL5NG6 GREEN
13		ED-321269	D LED GL5PR6 RED
14		ED-348200	⚠ D SILICON DBA20C-K15 200/2.0A
15		ED-357754	D SILICON DS135D 200/1.0A
16		ED-301911	D SILICON H DS448
17		ED-344280	D SILICON H GMA-01-FY2 F05
18		ED-349460	D VARACTER SVC321 A,B,C,D DOUBLE
19		ED-349448	D VARACTOR 1SV147
20		ED-310387	D ZENER H HZ12 B2
21		ED-310607	D ZENER H HZ18 2
22		ED-329056	D ZENER H HZ22 2
23		ED-346455	D ZENER H HZ27FA F10 A1
24		ED-302269	D ZENER H HZ5 A2
25		ED-306316	D ZENER H HZ5 C2
26		ED-331617	D ZENER H HZ6 A3
27		ED-331197	D ZENER H HZ6 C1
28		ED-337265	D ZENER H HZ6 C2
29	N	EF-355226	⚠ FUSE BET T 1.00A 250V [B]
30	N	EF-359007	⚠ FUSE BET T 1.25A 250V [B]
31	N	EF-359225	⚠ FUSE BET T 3.15A 250V [B]
32	N	EF-359086	⚠ FUSE BET T 4.00A 250V [B]
33		EF-623103	⚠ FUSE SEMKO T 1.00A 250V [E,V,S]
34		EF-602550	⚠ FUSE SEMKO T 1.25A 250V [E,V,S]
35		EF-691007	⚠ FUSE SEMKO T 3.15A 250V [E,V,S]
36		EF-690996	⚠ FUSE SEMKO T 4.00A 250V [E,V,S]
37		EF-311839	⚠ FUSE TSC A 250V 1.60A [U,Y1]
38		EF-306952	⚠ FUSE TSC A 250V 4.00A [U,Y1]
39		EF-309392	⚠ FUSE TSC 125V 1.25A [C,A]
40		EF-323080	⚠ FUSE TSC 125V 3.15A [C,A]
41		EF-306957	⚠ FUSE TSC 125V 4.00A [C,A]
42		EH-336804	FILTER CE SFE10.7MA8 10.7MHz
43		EH-345550	FILTER CE SFE10.7MS26K-Z
44		EH-355568	FILTER CE SFE10.7MS2GY-A
45		EH-351182	FILTER DB 201AK-005 100kHz
46	N	EH-355382	FILTER LC BP 79-5151-11 [V]
47	N	EI-358554	⚠ IC STK4152-2
48	N	EI-359048	IC C1005-736
49	N	EI-359060	IC HA12430
50		EI-349591	IC LA2730
51	N	EI-359061	IC LA3361
52	N	EI-359053	IC LA3600
53		EI-354951	IC LM7000
54		EI-349719	IC M5218P
55		EI-344764	IC M5218P-21
56		EI-332259	IC TC4052BP
57		EI-348409	OSC CE CSB400P 0.4MHz
58		EI-344422	OSC X'TAL HC-18/U 7.200000MHz
59		EM-353670	IND FL 8-BT-29ZK CHARACTER
60		EO-336829	COIL OSC 2 7NR-7818F 125UH
61	N	EO-359062	COIL OSC2 7BR-9585F [L]
62		EO-337598	COIL VARI 2 25A-1353-01
63		EO-337599	COIL VARI 2 25A-1354-03 [L]
64		ER-319455	⚠ R FUSE ERD2FC S10 1/4W 10R0G
65		ER-318647	⚠ R FUSE ERD2FC S10 1/4W 4R7J
66		ER-345507	⚠ R FUSE ERD2FC S10 1/4W 220J
67		ES-337902	⚠ SW PUSH SDLD1P002 01-1
68		ES-349070	⚠ SW SELECTOR YKS11-0002 02-4 [U,Y1]
69	N	ES-716377	SW LEAF LSA-1120YN
70	N	ES-359070	SW LEVER SLY182 2-08-02N
71		ES-713179	SW LSA-1123-37
72	N	ES-359068	SW PUSH ESB-62556
73	N	ES-359071	SW PUSH ESB-62771 2-02-02N
74		ES-349056	SW PUSH ESB-62915 6 THROW
75	N	ES-360115	SW SLIDE 00120262 01-02S [U,Y1]
76	N	ES-360114	SW SLIDE 00220658 02-02S
77		ES-344445	SW TACT EVQ-QHR12B
78		ES-349367	SW TACT SKHHAB044A
79		ET-322598	⚠ TR 2SB632K E,F
80		ET-349459	⚠ TR 2SD1406 O,Y,GR
81		ET-351853	TR FET 2SK161 Y
82		ET-352408	TR FET 2SK192A GR [L]
83		ET-337759	TR FET 2SK246 GR
84	N	ET-355216	TR 2SA1317 T,U
85		ET-353899	TR 2SA1317 S,T,U
86		ET-349718	TR 2SA1392 S,T
87		ET-308977	TR 2SC2274K F
88		ET-344275	TR 2SC2320L F,G
89		ET-338410	TR 2SC2878 A,B [L]
90		ET-336869	TR 2SC2999 C,D
91		ET-353366	TR 2SC3112 A,B
92		ET-353898	TR 2SC3330
93	N	ET-360137	TR 2SC3330 U,V
94		ET-349081	TR 2SC3383 S,T
95		ET-350795	TR 2SC3399
96		ET-349366	TR 2SC3402
97		ET-328265	TR 2SC930 F
98		ET-338565	TR 2SD1302 R,S
99		ET-310148	TR 2SD612K E,F
100		EV-356579	R S-FIX H H0615C 3P 102
101		EV-356577	R S-FIX H H0615C 3P 103
102	N	EV-359093	R S-FIX RVF8W01
103	N	EV-359051	VR ROTARY 16P20x3x B104
104	N	EV-359083	VR SLIDE 30PSVOH MN254
105	N	EV-359219	VR SLIDE 30P2SVOI W104
106	N	EZ-358816	BATTERY LITHIUM BR2032-1HF
107		HE-337047	HEAD E HAJAB3040A C
108		HP-712824	HEAD R/P HY424528 SVK
109		MB-712818	BELT AUTO
110		MB-712820	BELT DRIVE
111		MB-712819	BELT FR
112		MB-351605	BELT 0.8XD593 CRHS65
113		MC-353312	COUNTER MK395-043 (BLACK)
114		MI-715935	CLUTCH ARM ASSY
115		MI-715920	CLUTCH AUTO
116		MI-712813	GEAR AUTO
117		MI-711710	GEAR C
118		MI-712814	GEAR CAM AUTO
119		MI-712804	GEAR FF
120		MI-712817	IDLER PLAY
121		MV-716186	MAIN CASE

"NOTE" N: New Parts

SYMBOL FOR DESTINATION

[A]: AAL (U.S.A.)
[B]: UK (England)
[C]: CSA (Canada)
[E]: CEE (Europe)
[S]: SAA (Australia)
[U]: U/T (Universal Area)
[V]: VDE (West Germany)

FINAL ASSEMBLY BLOCK

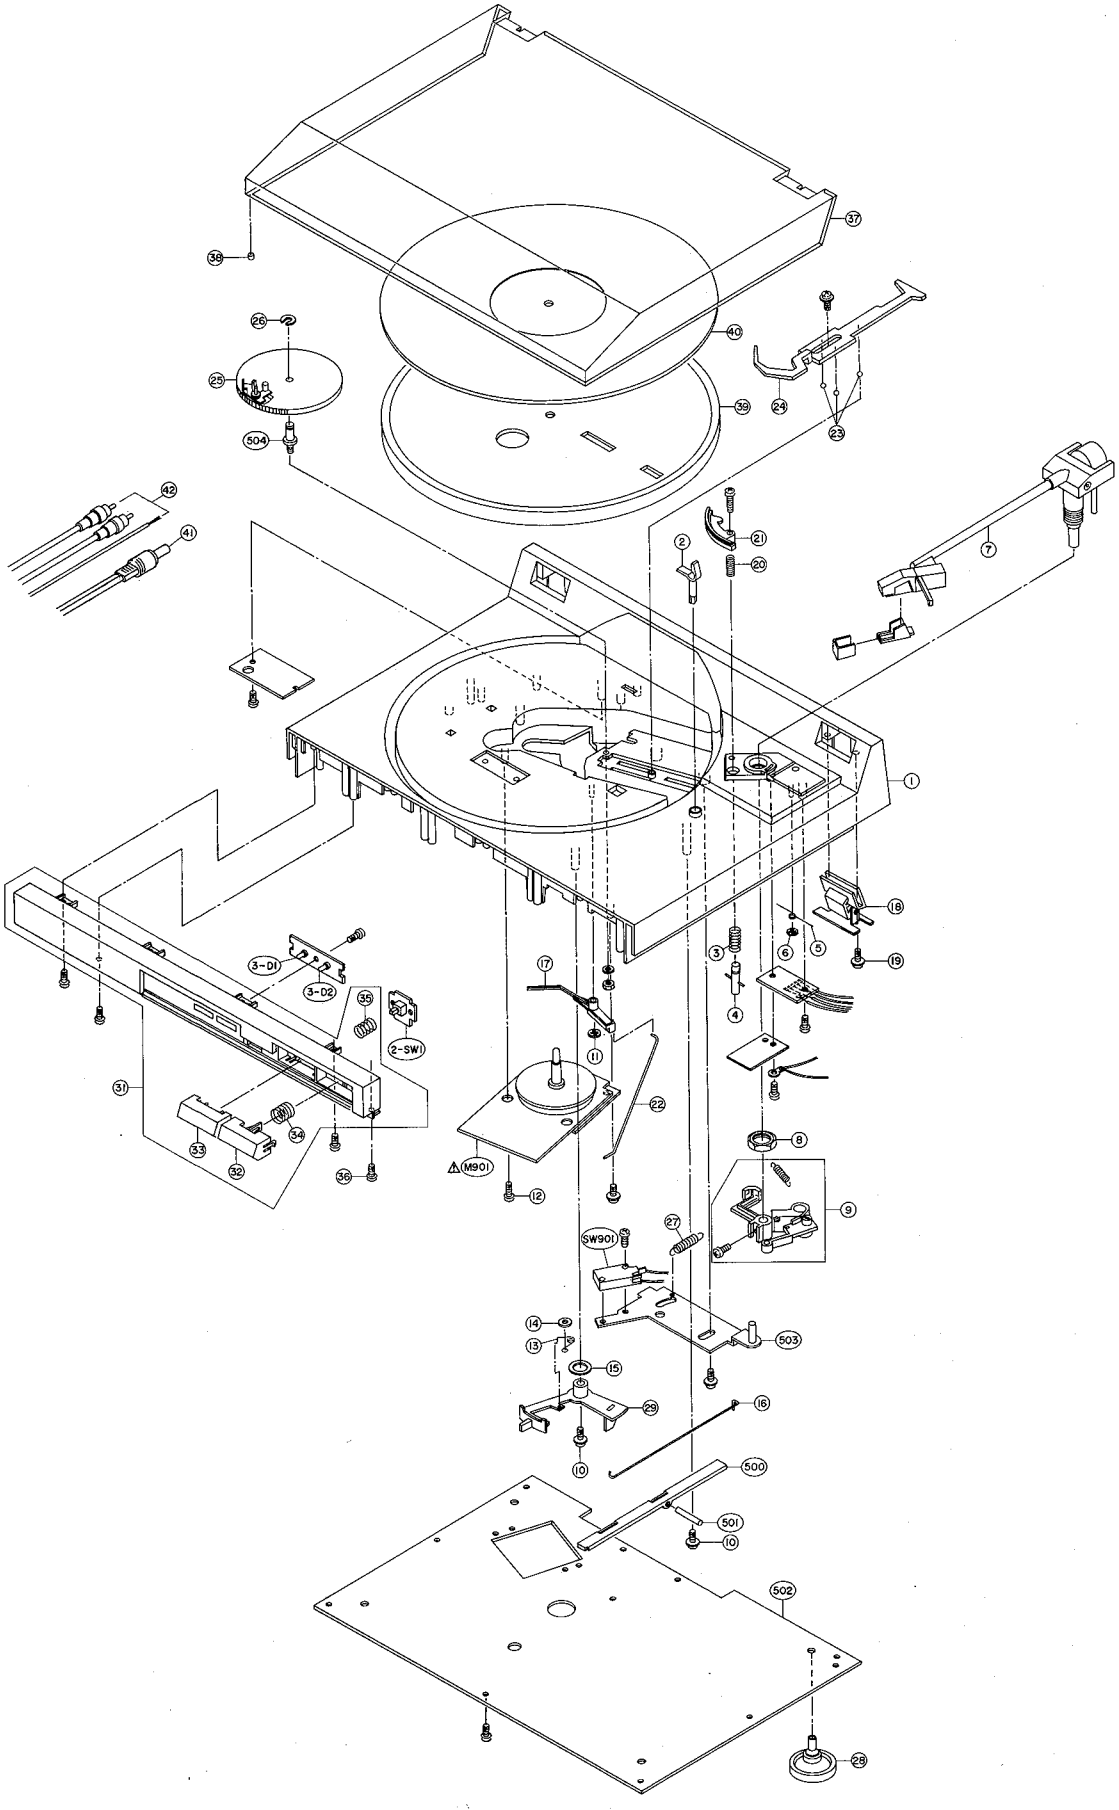

MECHA BLOCK

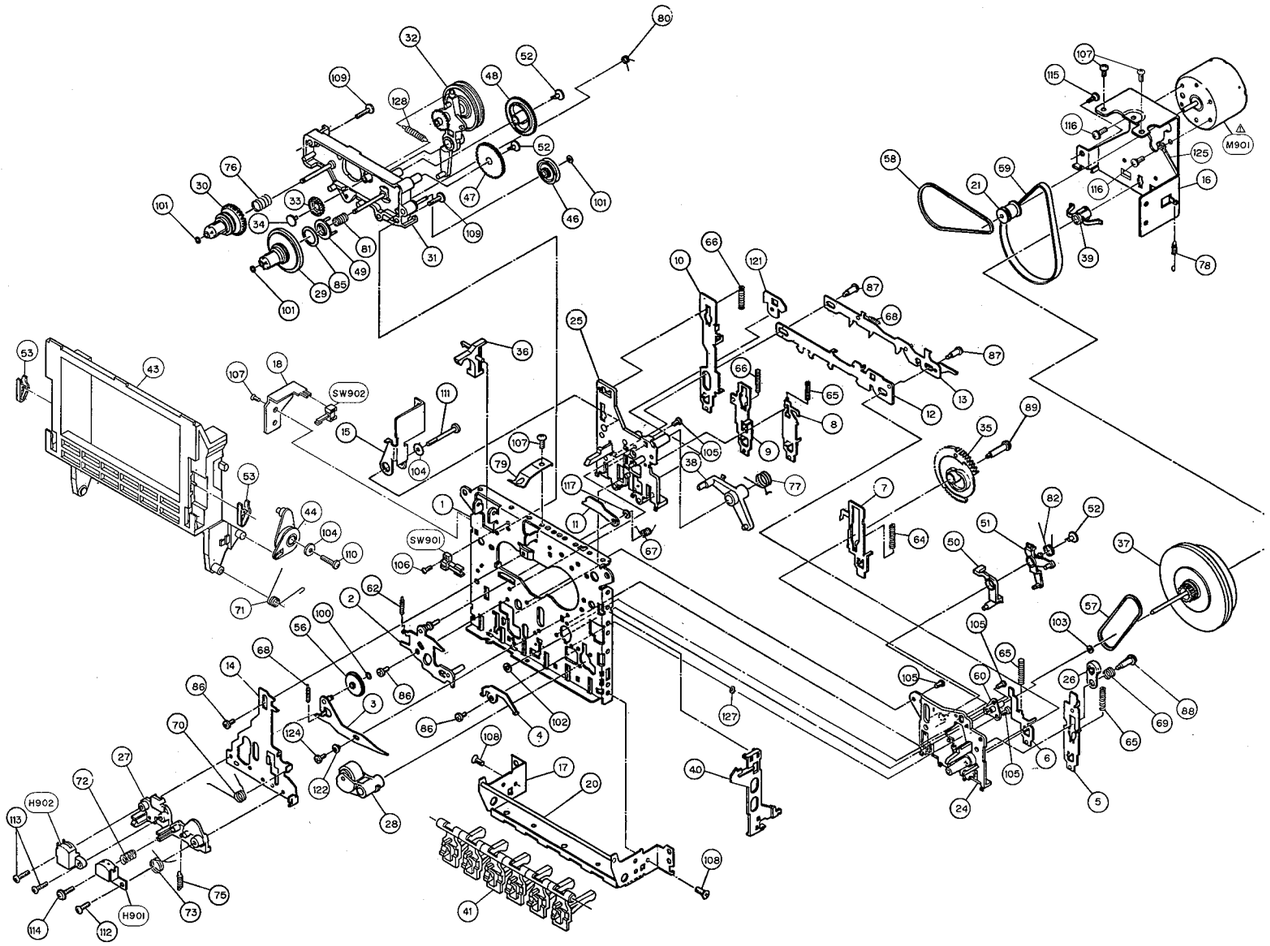

1. MECHA BLOCK

REF. NO.	PART NO.	DESCRIPTION
1-1	BB-359082	MECHA AKI-95FMF BLK
1-24	ML-716375	LEVER HOLDER (A)
1-26	MZ-716171	CAM PAUSE
1-27	MZ-716172	HEAD BASE
1-28	BL-712799	PINCH ROLLER ARM ASSY
1-29	BR-715918	TAKE-UP REEL TABLE BLK HX-M10
1-30	BT-715919	SUPPLY REEL TABLE BLK HX-M10
1-32	MI-715935	CLUTCH ARM ASSY
1-33	MI-712804	GEAR FF
1-34	MZ-749256	BUSH
1-35	MI-711710	GEAR C
1-36	ML-712806	REC SENSOR
1-37	BF-712807	FLYWHEEL ASSY
1-38	ML-716175	ARM LOCK (H)
1-39	MZ-712808	HOLDER CAPSTAN
1-40	ML-712809	LEVER EJECT
1-41	SB-716178	BUTTON LEVER
1-43	TC-712810	LID FRAME
1-44	TC-712811	DAMPER ASSY
1-46	MI-712812	PULLEY AUTO
1-47	MI-712813	GEAR AUTO
1-48	MI-712814	GEAR CAM AUTO
1-49	MI-715920	CLUTCH AUTO
1-50	ML-716179	ARM AUTO (B)
1-51	ML-716180	ARM AUTO LOCK
1-52	ZW-716181	BUSH
1-53	ZG-712816	CLAMP CASSETTE
1-56	MI-712817	IDLER PLAY
1-57	MB-712818	BELT AUTO
1-58	MB-712819	BELT FR
1-59	MB-712820	BELT DRIVE
1-60	MV-716186	MAIN CASE
1-67	ZG-716187	SP REC LEVER
1-68	ZG-716188	SP CAM
1-69	ZG-716189	SP PAUSE CAM
1-70	ZG-716190	SP HEAD CHASSIS
1-72	ZG-749268	SP HEAD
1-73	ZG-715921	SP PINCH ROLLER
1-75	ZG-715940	SP HEAD RETURN
1-78	ZG-716193	SP EJECT LEVER
1-79	ZG-712822	SP PACK
1-80	ZG-716194	SP AUTO SENSOR
1-81	ZG-716355	SP AUTO CLUTCH
1-82	ZG-716197	SP AUTO LOCK ARM
1-85	TC-712823	FELT AUTO CLUTCH
1-112	ZS-536488	BID20×08STL CMT
1-113	ZS-749292	BID20×085STL CMT
1-114	ZS-749293	BID20×09STL CMT TW
1-128	ZG-715922	SP CLUTCH ARM
1-H901	HP-712824	HEAD R/P HY424528 SVK
1-H902	HE-337047	HEAD E HAJAB3040A C
1-M901	BM-712825	⚠ MOTOR (W/PULLEY) ASSY
1-SW901	ES-716377	SW LEAF LSA-1120YN
1-SW902	ES-713179	SW LSA-1123-37

Note

Parts will not be supplied if they are not listed in the parts list, even if they appear on the assembling illustrations with reference No.

2. PC BOARD BLOCK

REF. NO.	PART NO.	DESCRIPTION
2-1A	BA-C1005A020A	PC BASE BLK AC-A100(U)
2-1B	BA-C1005A020B	PC BASE BLK AC-A100(C,A)
2-1C	BA-C1005A020C	PC BASE BLK AC-A100(E)
2-1D	BA-C1005A020D	PC BASE BLK AC-A100(V)
2-1E	BA-C1005A020E	PC BASE BLK AC-A100(S)
2-1F	BA-C1005A020F	PC BASE BLK AC-A100L(E,B)
2-1G	BA-C1005A020G	PC BASE BLK AC-A100(Y1)
2-2A	BA-F0141A010A	PC FRONT END BLK FE41(U) [U,C,A,E,S,L]
2-2B	BA-F0141A010B	PC FRONT END BLK FE41(V) [V]
2-2C	BA-F0141A010C	PC FRONT END BLK FE41/SA(Y1) [Y1]
2-3A	BA-C1005A040A	PC IF BLK AC-A100(U,Y1)
2-3B	BA-C1005A040B	PC IF BLK AC-A100(C,A)
2-3C	BA-C1005A040C	PC IF BLK AC-A100(E)
2-3D	BA-C1005A040D	PC IF BLK AC-A100(V)
2-3E	BA-C1005A040E	PC IF BLK AC-A100(S)
2-3F	BA-C1005A040F	PC IF BLK AC-A100L
2-4A	BA-C1005A080A	PC MAIN AMP BLK AC-A100(U,Y1)
2-4B	BA-C1005A080B	PC MAIN AMP BLK AC-A100(C,A)
2-4C	BA-C1005A080C	PC MAIN AMP BLK AC-A100(E,B)
2-4D	BA-C1005A080D	PC MAIN AMP BLK AC-A100(V)
2-4E	BA-C1005A080E	PC MAIN AMP BLK AC-A100(S)
2-5A	BA-C1005A060A	PC CONTROL BLK AC-A100(U)
2-5B	BA-C1005A060B	PC CONTROL BLK AC-A100(C)
2-5C	BA-C1005A060C	PC CONTROL BLK AC-A100(A)
2-5D	BA-C1005A060D	PC CONTROL BLK AC-A100(E,V,S)
2-5E	BA-C1005A060E	PC CONTROL BLK AC-A100L
2-5F	BA-C1005A060F	PC CONTROL BLK AC-A100(Y1)
2-6A	BA-C1005A070A	PC GEQ BLK AC-A100(U) [EXCEPT V]
2-6B	BA-C1005A070B	PC GEQ BLK AC-A100(V)

NOTE:

(1) PC BASE BLK consists of following PC BOARDS.
- BASE PC BOARD
- LED PC BOARD

(2) PC MAIN AMP BLK consists of following PC BOARDS.
- MAIN AMP PC BOARD
- HEAD PHONE PC BOARD
- FUNCTION LED PC BOARD
- POWER SUPPLY PC BOARD

(3) PC GEQ BLK consists of following PC BOARDS.
- G.EQ PC BOARD
- VOLUME PC BOARD

3. BASE PC BOARD

REF. NO.	PART NO.	DESCRIPTION
3-IC1	EI-344764	IC M5218P-21
3-IC2	EI-332259	IC TC4052BP
3-IC3	EI-349719	IC M5218P
3-IC101	EI-354951	IC LM7000
3-IC201	EI-349591	IC LA2730
3-TR1	ET-355216	TR 2SA1317 T,U
3-TR2	ET-349718	TR 2SA1392 S,T
3-TR3	ET-349459	⚠ TR 2SD1406 O,Y,GR
3-TR4	ET-349081	TR 2SC3383 S,T
3-TR101	ET-328265	TR 2SC930 F
3-TR102	ET-337759	TR FET 2SK246 GR
3-TR103	ET-349081	TR 2SC3383 S,T
3-TR104	ET-353898	TR 2SC3330 [L]
3-TR105	ET-353898	TR 2SC3330 [L]
3-TR201	ET-344275	TR 2SC2320L F,G
3-TR202	ET-350795	TR 2SC3399
3-TR203	ET-349081	TR 2SC3383 S,T
3-TR204	ET-349081	TR 2SC3383 S,T
3-TR205	ET-349081	TR 2SC3383 S,T
3-TR206	ET-349081	TR 2SC3383 S,T
3-TR207	ET-349081	TR 2SC3383 S,T
3-TR208	ET-308977	TR 2SC2274K F
3-TR209	ET-308977	TR 2SC2274K F
3-TR210	ET-353898	TR 2SC3330
3-TR211	ET-310148	TR 2SD612K E,F
3-TR212	ET-360137	TR 2SC3330 U,V
3-TR213	ET-349366	TR 2SC3402
3-TR214	ET-349081	TR 2SC3383 S,T
3-TR215	ET-349081	TR 2SC3383 S,T
3-TR216	ET-349366	TR 2SC3402
3-TR217	ET-349366	⚠ TR 2SC3402
3-D1	ED-357754	D SILICON DS135D 200/1.0A
3-D2	ED-331197	D ZENER H HZ6 C1
3-D3	ED-346455	D ZENER H HZ27FA F10 A1
3-D4	ED-310387	⚠ D ZENER H HZ12 B2
3-D5	ED-357754	D SILICON DS135D 200/1.0A
3-D6	ED-301911	D SILICON H DS448
3-D101	ED-306316	D ZENER H HZ5 C2
3-D201	ED-344280	D SILICON H GMA-01-FY2 F05
3-D202	ED-344280	D SILICON H GMA-01-FY2 F05
3-D203	ED-344280	D SILICON H GMA-01-FY2 F05
3-D204	ED-331617	D ZENER H HZ6 A3
3-SW1	ES-359071	SW PUSH ESB-62771 2-02-02N
3-SW101	ES-360115	SW SLIDE 00120262 01-02S [U,Y1]
3-SW102	ES-344445	SW TACT EVQ-QHR12B
3-SW201	ES-359070	SW LEVER SLY182 2-08-02N
3-SW202	ES-359071	SW PUSH ESB-62771 2-02-02N
3-SW203	ES-359068	SW PUSH ESB-62556
3-SW204	ES-360114	SW SLIDE 00220658 02-02S
3-VR201	EV-359093	R S-FIX RVF8W01
3-VR202	EV-359093	R S-FIX RVF8W01
3-VR203	EV-359093	R S-FIX RVF8W01
3-FL101	EH-355568	FILTER CE SFE10.7MS2GY-A
3-FL201	EH-351182	FILTER DB 201AK-005 100kHz
3-FL202	EO-356809	COIL FIX 1 100Z-121 100.00KC
3-L2	EO-336934	COIL FIX 1 LAL03KH 2R2M [V]
3-L201	EO-357050	COIL FIX 1 RC875 822J
3-T201	EO-349589	COIL OSC 1 32-5016-12
3-X101	EI-344422	OSC X'TAL HC-18/U 7.200000MHz
3-FR1	ER-345507	⚠ R FUSE ERD2FC S10 1/4W 220J
3-R22	ER-328067	⚠ R CB H S10 FS RDS 1/4W 331J
3-R23	ER-328082	⚠ R CB H S10 FS RDS 1/4W 333J
3-R106	ER-306805	⚠ R CB H S15 FS RDS 1/2W 101J
3-R107	ER-327710	⚠ R CB H S10 FS RDS 1/4W 151J
3-R119	ER-360146	⚠ R OMF H S10 FS 1/2W 151J
3-C104	EC-347591	C MMY V F05 MMH63 474M 100DC
3-C232	EC-306445	FM/C.220PF(J)500WV
3-C237	EC-326138	C PP V F10 APH 182J 630DC
3-C238	EC-347263	C MC V F05 FM 221J 500DC
3-J1	EJ-336905	PIN J AJC-035-ACB P 4P
3-J2	EJ-359067	SOCKET INLET HECO470-01-640
3-TM101	EJ-359031	TERMINAL LEVER YK-D31-0215 P 2P

4. FRONT END PC BOARD

REF. NO.	PART NO.	DESCRIPTION
4-TR1	ET-351853	TR FET 2SK161 Y
4-TR2	ET-336869	TR 2SC2999 C,D
4-TR3	ET-328265	TR 2SC930 F
4-TR4	ET-351853	TR FET 2SK161 Y
4-D1	ED-349448	D VARACTOR 1SV147
4-D2	ED-349448	D VARACTOR 1SV147
4-D3	ED-349448	D VARACTOR 1SV147
4-D4	ED-349448	D VARACTOR 1SV147
4-L1	EO-349461	COIL FIX 2 LINK
4-L2	EO-349462	COIL FIX 2 U147
4-L3	EO-349461	COIL FIX 2 LINK
4-L4	EO-349462	COIL FIX 2 U147
4-L5	EO-349462	COIL FIX 2 U147
4-L6	ES-349056	SW PUSH ESB-62915 6 THROW
4-L7A	EO-353687	COIL OSC 2 E525HN-110003 [EXCEPT Y1]
4-L7B	EO-361840	COIL OSC 2 E525HNS-110011 [Y1]
4-T1	EO-337640	COIL IFT 119AC-15533X 10.7MHz

5. IF PC BOARD

REF. NO.	PART NO.	DESCRIPTION
5-IC1	EI-359060	IC HA12430
5-IC2	EI-359061	IC LA3361
5-TR1	ET-338410	TR 2SC2878 A,B [L]
5-TR2	ET-352408	TR FET 2SK192A GR [L]
5-TR3	ET-338410	TR 2SC2878 A,B [L]
5-TR4	ET-353898	TR 2SC3330 [L]
5-TR5	ET-353899	TR 2SA1317 S,T,U
5-TR6	ET-353899	TR 2SA1317 S,T,U
5-TR7	ET-353898	TR 2SC3330
5-TR8	ET-351853	TR FET 2SK161 Y
5-TR9	ET-328265	TR 2SC930 F
5-TR10	ET-351853	TR FET 2SK161 Y
5-TR11	ET-353898	TR 2SC3330
5-TR12	ET-353366	TR 2SC3112 A,B
5-TR13	ET-353366	TR 2SC3112 A,B
5-TR14	ET-349081	TR 2SC3383 S,T
5-TR15	ET-349081	TR 2SC3383 S,T
5-TR16	ET-349081	TR 2SC3383 S,T
5-D1	ED-349460	D VARACTER SVC321 A,B,C,D DOUBLE
5-D2	ED-349460	D VARACTER SVC321 A,B,C,D DOUBLE
5-D3	ED-344280	D SILICON H GMA-01-FY2 F05 [L]
5-D4	ED-344280	D SILICON H GMA-01-FY2 F05 [L]
5-D5	ED-344280	D SILICON H GMA-01-FY2 F05
5-D6	ED-337265	D ZENER H HZ6 C2
5-D7	ED-301911	D SILICON H DS448
5-D8	ED-344280	D SILICON H GMA-01-FY2 F05
5-VR1	EV-356577	R S-FIX H H0615C 3P 103
5-VR2	EV-356579	R S-FIX H H0615C 3P 102
5-FL1	EH-355568	FILTER CE SFE10.7MS2GY-A
5-FL2	EH-336804	FILTER CE SFE10.7MA8 10.7MHz
5-FL3	EH-355382	FILTER LC BP 79-5151-11 [V]
5-L1	EO-337523	COIL FIX 1 L-8 223J
5-L2	EO-337523	COIL FIX 1 L-8 223J
5-T1	EO-337598	COIL VARI 2 25A-1353-01
5-T2	EO-337599	COIL VARI 2 25A-1354-03 [L]
5-T3	EO-336829	COIL OSC 2 7NR-7818F 125UH
5-T4	EO-359062	COIL OSC 2 7BR-9585F [L]
5-T5	EO-359175	COIL DET 2 PM199CEA-14367Z
5-T6	EO-356732	COIL IFT BCFLZ-450A
5-VC1	EC-359065	CS-FIX H CTC-6U-020 4.3-20
5-VC2	EC-359065	CS-FIX H CTC-6U-020 4.3-20 [L]
5-R27	ER-360146	⚠ R OMF H S10 FS 1/2W 151J
5-R44	ER-328067	⚠ R CB H S10 FS RDS 1/4W 331J
5-C6A	EC-356597	C PP V F05 PP 431J 50DC [EXCEPT L]
5-C6B	EC-353044	C PP V F05 PP 511J 50DC [L]
5-C7	EC-346879	C PP V F05 PP 221J 50DC [L]
5-C40	EC-344483	C PP V F05 PP 102J 50DC
5-C51	EC-356598	C PP V F05 PP 302J 50DC
5-C52	EC-356598	C PP V F05 PP 302J 50DC

6. MAIN AMP PC BOARD

REF. NO.	PART NO.	DESCRIPTION
		MAIN AMP PC BOARD
6-IC1	EI-358554	⚠ IC STK4152-2
6-TR1	ET-322598	⚠ TR 2SB632K E,F
6-TR2	ET-349459	⚠ TR 2SD1406 O,Y,GR
6-TR3	ET-353899	TR 2SA1317 S,T,U
6-TR4	ET-338565	TR 2SD1302 R,S
6-D1	ED-329056	D ZENER H HZ22 2
6-D2	ED-301911	D SILICON H DS448
6-D3	ED-200213	⚠ D SILICON DBA40C-K15 200/2.6A
6-D4	ED-310607	D ZENER H HZ18 2
6-D5	ED-348200	⚠ D SILICON DBA20C-K15 200/2.0A
6-D7	ED-346616	⚠ D ZENER H HZ12 B3
6-D8	ED-344280	D SILICON H GMA-01-FY2 F05
6-D9	ED-337265	D ZENER H HZ6 C2
6-D10	ED-302269	D ZENER H HZ5 A2
6-D11	ED-301911	D SILICON H DS448
6-D12	ED-301911	D SILICON H DS448
6-D13	ED-301911	D SILICON H DS448
6-L1	EO-337880	COIL FIX 2 202AK-018 2R2K
6-L2	EO-342936	COIL BALUN [V]
6-FR1	ER-319455	⚠ R FUSE ERD2FC S10 1/4W 10R0G
6-FR2	ER-319455	⚠ R FUSE ERD2FC S10 1/4W 10R0G
6-FR3	ER-345507	⚠ R FUSE ERD2FC S10 1/4W 220J
6-FR4	ER-318647	⚠ R FUSE ERD2FC S10 1/4W 4R7J
6-R6	ER-325269	⚠ R CB H S10 FS RDS 1/4W 222J
6-R9	ER-359266	⚠ R OMF H S12 FS 1W 100J
6-R10	ER-359266	⚠ R OMF H S12 FS 1W 100J
6-R13	ER-328082	⚠ R CB H S10 FS RDS 1/4W 332J
6-R16	ER-359269	⚠ R OMF H S12 FS 1W 221J
6-R17	ER-322591	⚠ R CB H S10 FS RDS 1/4W 101J [C,A]
6-R18	ER-322591	⚠ R CB H S10 FS RDS 1/4W 101J [C,A]
6-C13	EC-358538	C EC V CUT 472M 45.0DC
6-C14	EC-358538	C EC V CUT 472M 45.0DC
6-C17	EC-323846	C EC V CUT HA 102M 35DC
6-C24	EC-326583	C MMY V CUT CF921 473K 400DC
6-TM1	EJ-359264	TERMINAL LEVER YKD21-0023A P 4P
		ASSEMBLY BLOCK
6-F3A	EF-306957	⚠ FUSE TSC 125V 4.00A [C,A]
6-F3B	EF-690996	⚠ FUSE SEMKO T 4.00A 250V [E,V,S, L(E)]
6-F3C	EF-359086	⚠ FUSE BET T 4.00A 250V [L(B)]
6-F4A	EF-306957	⚠ FUSE TSC 125V 4.00A [C,A]
6-F4B	EF-690996	⚠ FUSE SEMKO T 4.00A 250V [E,V,S, L(E)]
6-F4C	EF-359086	⚠ FUSE BET T 4.00A 250V [L(B)]
6-F5A	EF-309392	⚠ FUSE TSC 125V 1.25A [C,A]
6-F5B	EF-623103	⚠ FUSE SEMKO T 1.00A 250V [E,V,S, L(E)]
6-F5C	EF-355226	⚠ FUSE BET T 1.00A 250V [L(B)]
6-F6A	EF-306952	⚠ FUSE TSC A 250V 4.00A [U,Y1]
6-F6B	EF-306957	⚠ FUSE TSC 125V 4.00A [C,A]
6-F6C	EF-691007	⚠ FUSE SEMKO T 3.15A 250V [E,V,S, L(E)]
6-F6D	EF-359225	⚠ FUSE BET T 3.15A 250V [L(B)]
6-F7A	EF-306952	⚠ FUSE TSC A 250V 4.00A [U,Y1]
6-F7B	EF-306957	⚠ FUSE TSC 125V 4.00A [C,A]
6-F7C	EF-691007	⚠ FUSE SEMKO T 3.15A 250V [E,V,S, L(E)]
6-F7D	EF-359225	⚠ FUSE BET T 3.15A 250V [L(B)]

7. G.EQ PC BOARD

REF. NO.	PART NO.	DESCRIPTION
7-IC1	EV-359053	IC LA3600
7-VR1	EV-359219	VR SLIDE 30P2SVOI W104
7-VR2	EV-359219	VR SLIDE 30P2SVOI W104
7-VR3	EV-359219	VR SLIDE 30P2SVOI W104
7-VR4	EV-359219	VR SLIDE 30P2SVOI W104
7-VR5	EV-359219	VR SLIDE 30P2SVOI W104
7-VR6	EV-359083	VR SLIDE 30PSVOH MN254

8. VOLUME PC BOARD

REF. NO.	PART NO.	DESCRIPTION
8-VR1	EV-359051	VR ROTARY 16P20x3x B104

9. HEAD PHONE PC BOARD

REF. NO.	PART NO.	DESCRIPTION
9-R1	ER-359268	R OMF H S12 FS 1W 181J
9-J1	EJ-359075	PHONE J HLJ4308-01-3040

10. CONTROL PC BOARD

REF. NO.	PART NO.	DESCRIPTION
10-IC1	EI-359048	IC C1005-736
10-TR1	ET-353899	TR 2SA1317 S,T,U [U,Y1]
10-D1	ED-301911	D SILICON H DS448 [U,Y1]
10-D2	ED-301911	D SILICON H DS448 [L]
10-D3	ED-301911	D SILICON H DS448 [Y1]
10-D4 to 7	ED-301911	D SILICON HDS448
10-D8	ED-344280	D SILICON H GMA-01-FY2 F05
10-D10	ED-301911	D SILICON H DS448
10-D11	ED-344280	D SILICON H GMA-01-FY2 F05
10-D12 to 14	ED-301911	D SILICON H DS448
10-D15	ED-321269	D LED GL5PR6 RED
10-SW1 to 10	ES-349367	SW TACT SKHHAB044A
10-X1	EI-348409	OSC CE CSB400P 0.4MHz
10-IB1	EH-359049	COMP R TNC15A104J
10-IN1	EM-353670	IND FL 8-BT-29ZK CHARACTER
10-BT1	EZ-358816	BATTERY LITHIUM BR2032-1HF

11. FUNCTION LED PC BOARD

REF. NO.	PART NO.	DESCRIPTION
11-TR1 to 4	ET-353898	TR 2SC3330
11-D1 to 4	ED-337391	D LED GL5NG6 GREEN

12. LED PC BOARD

REF. NO.	PART NO.	DESCRIPTION
12-D1	ED-337391	D LED GL5NG6 GREEN
12-D2	ED-321269	D LED GL5PR6 RED

13. POWER SUPPLY PC BOARD

REF. NO.	PART NO.	DESCRIPTION
13-SW1	ES-337902	⚠ SW PUSH SDLD1P002 01-1
13-L1	EO-338409	COIL LF FK0B160MH02 250UH [V]
13-R1	ER-356573	⚠ R SD ANTI-STATIC 1/2W 225K [C,A]
13-C1A	EC-320548	⚠ C CE V F 103Z 250AC [V]
13-C1B	EC-338411	⚠ C CE V FZ 103P 400AC [C,A]
13-C1C	EC-338496	⚠ C CE V FZ 472P 400AC [E,V,B]
13-F1A	EF-311839	⚠ FUSE TSC A 250V 1.60A [U,Y1]
13-F1B	EF-323080	⚠ FUSE TSC 125V 3.15A [C,A]
13-F1C	EF-602550	⚠ FUSE SEMKO T 1.25A 250V [E,V,S, L(E)]
13-F1D	EF-359007	⚠ FUSE BET T 1.25A 250V [L(B)]
13-F2	EF-311839	⚠ FUSE TSC A 250V 1.60A [U,Y1]

ASSEMBLY BLOCK

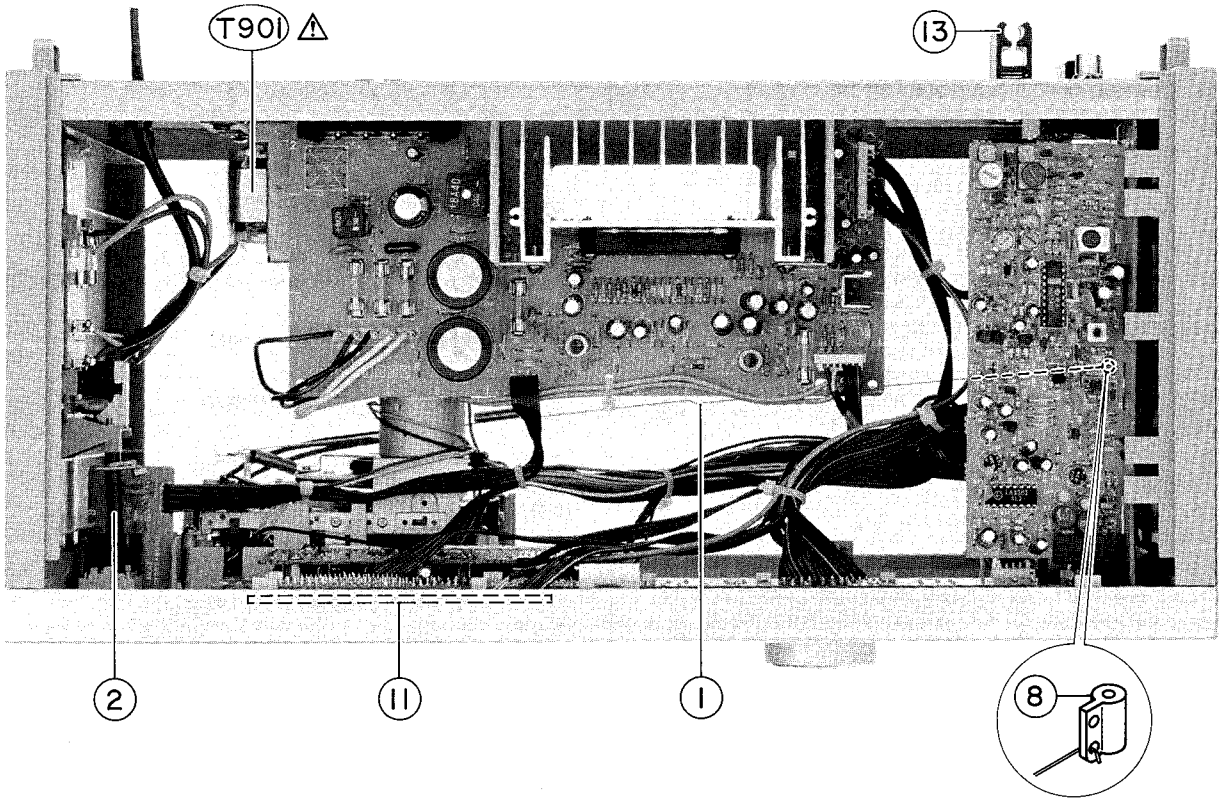

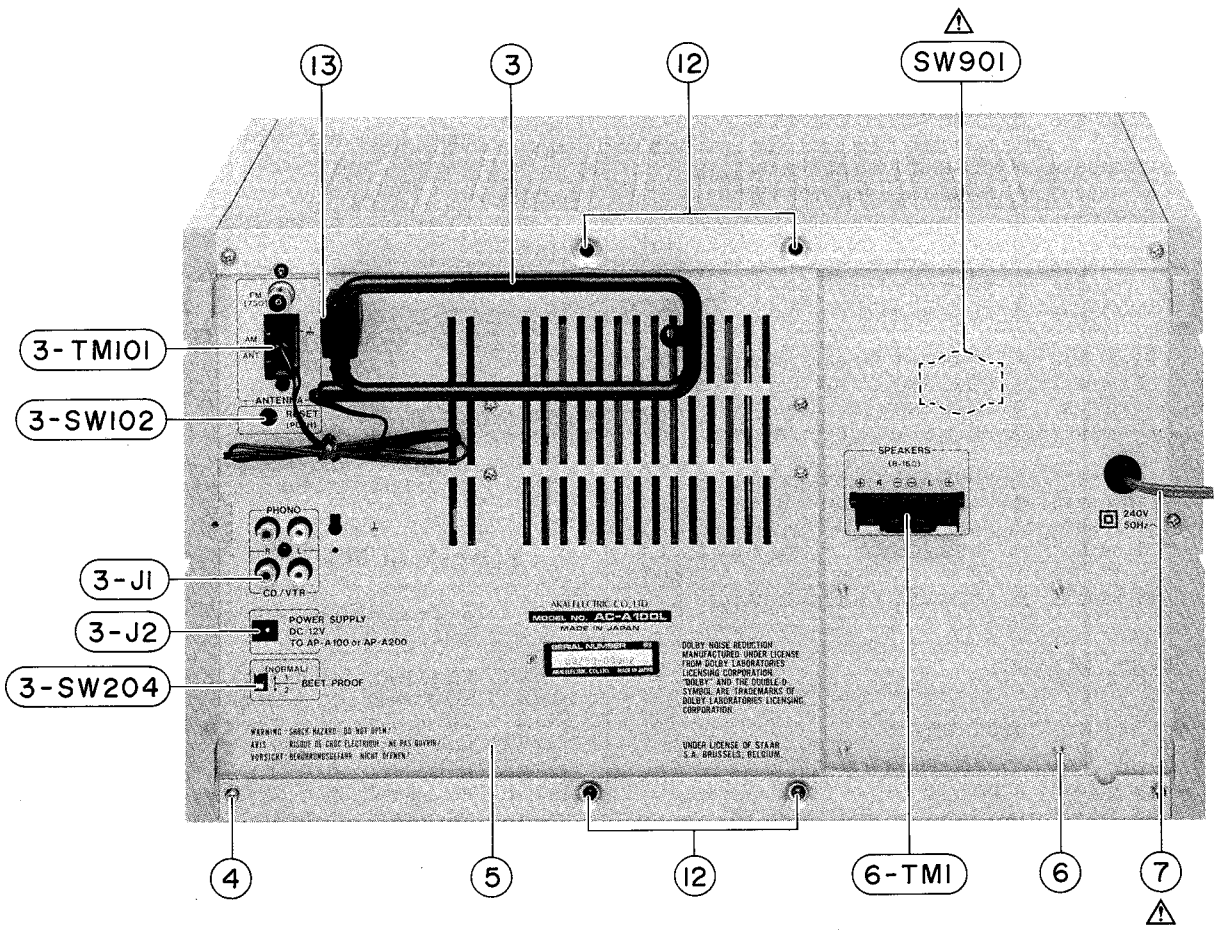

14. ASSEMBLY BLOCK

REF. NO.	PART NO.	DESCRIPTION
		ASSEMBLY BLOCK
14-1	ZG-358866	REC SPRING
14-2	MZ-358868	JOINT POWER
14-3	EE-359265	ANT LOOP LA-200A-A
14-4	ZS-397878	T2BR30x10STL CMT PW080
14-5A	SP-355139A	PANEL REAR AC-A100(U,Y1)
14-5B	SP-355139D	PANEL REAR AC-A100(C,A)
14-5C	SP-355139B	PANEL REAR AC-A100(E,V)
14-5D	SP-355139C	PANEL REAR AC-A100(S)
14-5E	SP-355139E	PANEL REAR AC-A100L(E)
14-5F	SP-355139F	PANEL REAR AC-A100L(B)
14-6	ZS-346742	ST BID40x08STL CMT CUP [POWER TRANS FIX]
14-7A	EW-359076	⚠ AC CORD C1005 U [U,Y1]
14-7B	EW-359077	⚠ AC CORD CD1005 C [C]
14-7C	EW-359078	⚠ AC CORD 2 CORES VM02380 SPT-1-CB UC [A]
14-7D	EW-359079	⚠ AC CORD 2 CORES VM0364 LC2X0.75CBEV [E,V,L(E)]
14-7E	EW-359081	⚠ AC CORD 2 COERS VM0436 LC2X0.75CB S [S]
14-7F	EW-359204	⚠ AC CORD 2 CORES LC2X0.75-CB B [L(B)]
14-8	MZ-358870	REC JOINT
14-9x	MB-351605	BELT 0.8xD593 CRHS65 [COUNTER BELT]
14-10x	MC-353312	COUNTER MK395-043 (BLACK)
14-11	SM-358871	PLATE GEQ [EQ,BALANCE KNOB FIX]
14-12	ZS-319460	T2BR30x06STL BZN PROJECTION
14-13	SZ-332739	HOLDER ANTENNA
14-14x	EJ-352118	SOCKET COAX PAL B2-714P-900
14-T901A	BT-359040	⚠ TRANS POWER C1005T-70(U,Y1) [U,Y1]
14-T901B	BT-359041	⚠ TRANS POWER C1005T-30(C) [C]
14-T901C	BT-359042	⚠ TRANS POWER C1005T-20(A) [A]
14-T901D	BT-359045	⚠ TRANS POWER C1005T-40(E,V) [E,V,L(E)]
14-T901E	BT-359046	⚠ TRANS POWER C1005T-50(S,B) [S,L(B)]
14-SW901	ES-349070	⚠ SW SELECTOR YKS11-0002 02-4 [U,Y1]
		BASE PC BOARD
3-SW102	ES-344445	SW TACT EVQ-QHR12B
3-SW204	ES-360114	SW SLIDE 00220658 02-02S
3-J1	EJ-336905	PIN J AJC-035-ACB P 4P
3-J2	EJ-359067	SOCKET INLET HEC0470-01-640
3-TM101	EJ-359031	TERMINAL LEVER YK-D31-0215 P 2P
		MAIN AMP PC BOARD
6-TM1	EJ-359264	TERMINAL LEVER YKD21-0023A P 4P

FINAL ASSEMBLY BLOCK

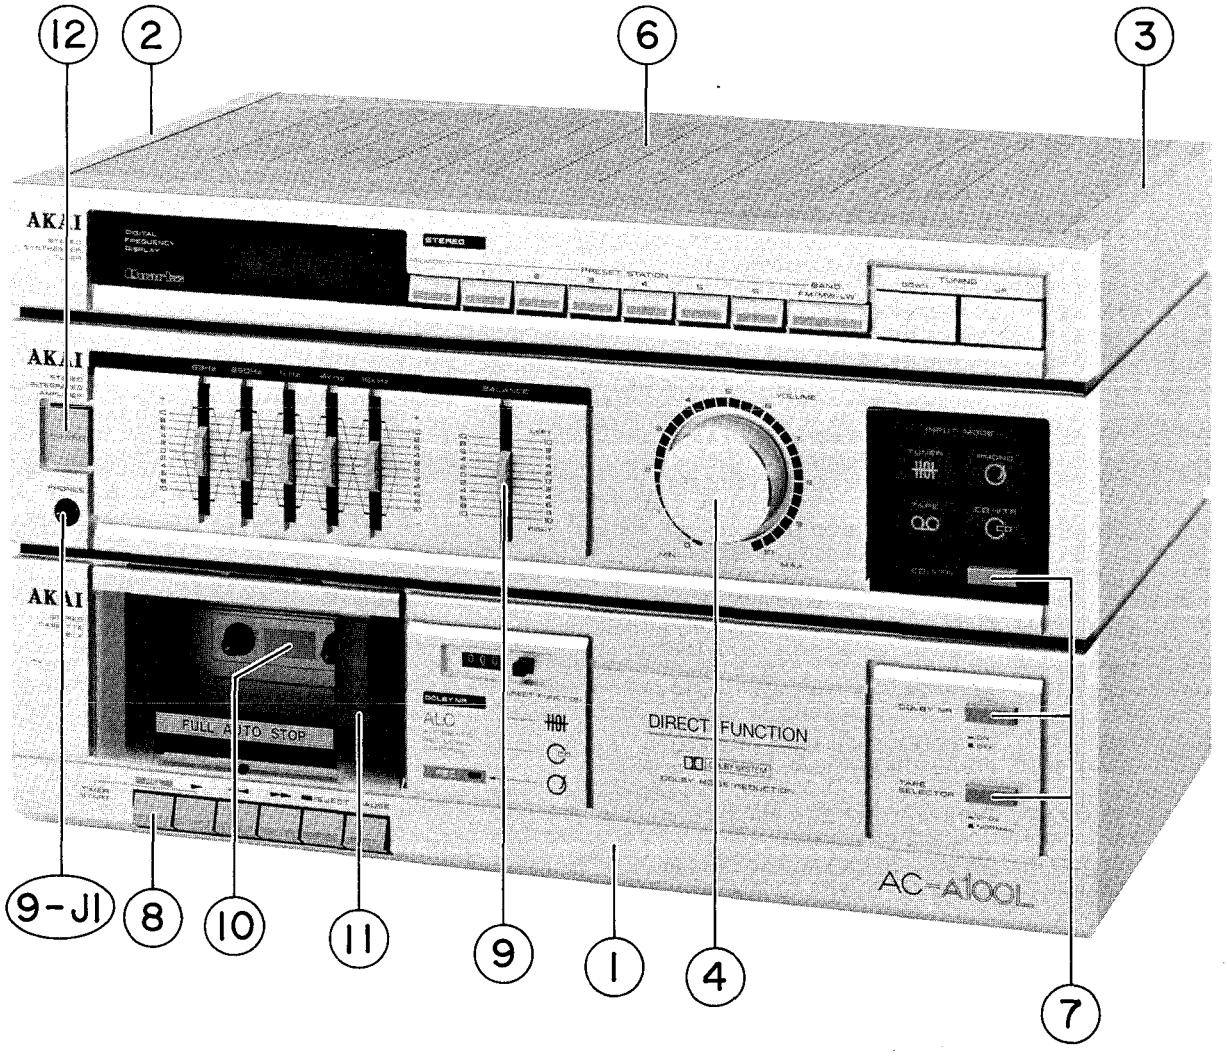

15. FINAL ASSEMBLY BLOCK

REF. NO.	PART NO.	DESCRIPTION
	FINAL ASSEMBLY BLOCK	
15-1A	BD-C1005A050A	PANEL FRONT BLK AC-A100
15-1B	BD-C1005A050C	PANEL FRONT BLK AC-A100L
15-1C	BD-C1005A050B	PANEL FRONT BLK AC-A100-B
15-1D	BD-C1005A050D	PANEL FRONT BLK AC-A100L-B
15-2	BD-358888A	PANEL SIDE(L)
15-2B	BD-358888B	PANEL SIDE(L)-B
15-3	BD-358887A	PANEL SIDE(R)
15-3B	BD-358887B	PANEL SIDE(R)-B
15-4	SK-B358605X1	KNOB VR PART
15-4B	SK-B358605X3	KNOB VR-B PART
15-5x	BC-355140A	COVER (A) [BUTTOM COVER]
15-6	BC-355140B	COVER (2)
15-6B	BC-355140C	COVER(2)-B
15-7	SB-358882	BUTTON PUSH
15-8	SK-358886A	BUTTON OPERATION
15-9	SK-358879	KNOB SLIDE
15-10	SZ-645186	REFLECTOR
15-11	BD-358884A	LID CASE
15-11B	BD-358884B	LID CASE-B
15-12	SK-343017C	KNOB POWER (2)
15-12B	SK-343017F	KNOB POWER-B
	HEAD PHONE PC BOARD	
9-J1	EJ-359075	PHONE J HLJ4308-01-3040

SYMBOL FOR COLOR VARIATION
NON : STANDARD COLOR
B or BL : BLACK

INDEX

MODEL AP-A100/C

PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.
AX-332567C	2-35	EV-315416	1-VR1	SA-332577C	2-25	TP-336361	2-28	ZG-325402	2-6
AX-332567D	2-35B	EW-358749	2-32A	SK-345362A	2-8	TP-336362	2-28B	ZG-332548	2-17
BC-B332582	2-26	EW-358750	2-32B	SK-345362E	2-8B	TP-345341	2-7	ZG-353257	2-4
BC-358036A	2-1	EW-358754	2-33	SK-351613B	2-34	TP-348266A	2-30A	ZS-350767	2-16
BC-358036B	2-1B	MB-345351B	2-15	SK-351739	2-12	TP-348266B	2-30B	ZS-358930	2-9
BM-354988	2-M901	MB-355119	2-31	TP-B332568X2	2-18	TP-348321	2-29	ZW-270101	2-23
EI-357879	1-IC1	ML-345348	2-21	TP-B345367	2-19	TP-351625	2-3	ZW-340648	2-5
ES-316432	2-SW901	ML-358006	2-13	TP-P1034A040A	2-10	TP-358836	2-2		
ES-358768	1-SW1	MV-269965	2-20	TP-P1034A080A	2-22	ZG-313073	2-24		
EV-315416	1-VR2	MZ-358034	2-14	TP-301300	2-27	ZG-313181	2-11		

MODEL AP-A200/C

PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.
AX-332567C	4-30xA	ET-328844	1-Q1	SP-359109	4-35	ZS-310984	4-12		
AX-332567D	4-30xB	ET-328844	1-Q2	TP-B332568X2	4-21	ZS-332009	4-36		
BC-B353247	4-37	ET-330225	1-Q10	TP-B358014	4-39	ZS-349118	4-19		
BC-353231F	4-1B	ET-330225	1-Q7	TP-P1034A080A	4-25	ZS-358930	4-10		
BD-P1047A020A	4-31	ET-330225	1-Q8	TP-P1037A040A	4-9	ZW-290283	4-26		
BD-P1047A020B	4-31B	ET-742510	1-Q11	TP-348266A	4-40B	ZW-325521	4-8		
BD-353231D	4-1	ET-742510	1-Q4	TP-348266B	4-40A	ZW-331536	4-14		
BM-360085	4-M901	ET-742510	1-Q3	TP-353252	4-7	ZW-340648	4-6		
ED-337391	3-D1	EV-780138	1-VR1	TP-353712	4-18	ZW-340648	4-11		
ED-349656	3-D2	EW-358749	4-42B	TP-358003	4-16	ZW-382083	4-15		
ED-557447	2-D1	EW-358750	4-42A	TP-358012A	4-29				
ED-557447	2-D2	EW-358754	4-41	TP-358012B	4-29B				
ED-708712	1-D1	MB-343057	4-38	TP-358836	4-2				
EI-780137	1-IC1	ML-345348	4-24	TP-360072	4-22				
ER-353877	1-R1	ML-358006	4-17	ZG-313073	4-27				
ES-325488	4-SW901	MS-353238	4-4	ZG-332548	4-20				
ES-337843	2-SW1	MV-269965	4-23	ZG-353257	4-5				
ET-308867	1-Q5	SA-332577	4-28	ZG-358000	4-13				
ET-308867	1-Q9	SK-358010A	4-32	ZG-358951	4-3				
ET-308867	1-Q6	SK-358011A	4-33	ZG-358952	4-34				

INDEX

MODEL AC-A100/L

PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.
BA-C1005A020A	2-1A	ED-301911	10-D2	EI-349591	3-IC201	ES-716377	1-SW901	MB-712819	1-58
BA-C1005A020B	2-1B	ED-301911	10-D3	EI-349719	3-IC3	ET-308977	3-TR208	MB-712820	1-59
BA-C1005A020C	2-1C	ED-301911	10-D4	EI-354951	3-IC101	ET-308977	3-TR209	MC-353312	14-10x
BA-C1005A020D	2-1D	ED-301911	10-D5	EI-358554	6-IC1	ET-310148	3-TR211	MI-711710	1-35
BA-C1005A020E	2-1E	ED-301911	10-D6	EI-359048	10-IC1	ET-322598	6-TR1	MI-712804	1-33
BA-C1005A020F	2-1F	ED-301911	10-D7	EI-359053	7-IC1	ET-328265	3-TR101	MI-712812	1-46
BA-C1005A020G	2-1G	ED-301911	10-D10	EI-359060	5-IC1	ET-328265	4-TR3	MI-712813	1-47
BA-C1005A040A	2-3A	ED-301911	10-D12	EI-359061	5-IC2	ET-328265	5-TR9	MI-712814	1-48
BA-C1005A040B	2-3B	ED-301911	10-D13	EJ-336905	3-J1	ET-336869	4-TR2	MI-712817	1-56
BA-C1005A040C	2-3C	ED-301911	10-D14	EJ-352118	14-14x	ET-337759	3-TR102	MI-715920	1-49
BA-C1005A040D	2-3D	ED-302269	6-D10	EJ-359031	3-TM101	ET-338410	5-TR1	MI-715935	1-32
BA-C1005A040E	2-3E	ED-306316	3-D101	EJ-359067	3-J2	ET-338410	5-TR3	ML-712806	1-36
BA-C1005A040F	2-3F	ED-310387	3-D4	EJ-359075	9-J1	ET-338565	6-TR4	ML-712809	1-40
BA-C1005A060A	2-5A	ED-310607	6-D4	EJ-359264	6-TM1	ET-344275	3-TR201	ML-716175	1-38
BA-C1005A060B	2-5B	ED-321269	10-D15	EM-353670	10-IN1	ET-349081	3-TR4	ML-716179	1-50
BA-C1005A060C	2-5C	ED-321269	12-D2	EO-336829	5-T3	ET-349081	3-TR103	ML-716180	1-51
BA-C1005A060D	2-5D	ED-329056	6-D1	EO-336934	3-L2	ET-349081	3-TR203	ML-716375	1-24
BA-C1005A060E	2-5E	ED-331197	3-D2	EO-337523	5-L1	ET-349081	3-TR204	MV-716186	1-60
BA-C1005A060F	2-5F	ED-331617	3-D204	EO-337523	5-L2	ET-349081	3-TR205	MZ-358868	14-2
BA-C1005A070A	2-6A	ED-337265	5-D6	EO-337598	5-T1	ET-349081	3-TR206	MZ-358870	14-8
BA-C1005A070B	2-6B	ED-337265	6-D9	EO-337599	5-T2	ET-349081	3-TR207	MZ-712808	1-39
BA-C1005A080A	2-4A	ED-337391	11-D1	EO-337640	4-T1	ET-349081	3-TR214	MZ-716171	1-26
BA-C1005A080B	2-4B	ED-337391	11-D2	EO-337880	6-L1	ET-349081	3-TR215	MZ-749256	1-34
BA-C1005A080C	2-4C	ED-337391	11-D3	EO-338409	13-L1	ET-349081	5-TR14	SB-358882	15-7
BA-C1005A080D	2-4D	ED-337391	11-D4	EO-342936	6-L2	ET-349081	5-TR15	SB-716178	1-41
BA-C1005A080E	2-4E	ED-337391	12-D1	EO-349461	4-L1	ET-349081	5-TR16	SK-B358605X1	15-4
BA-F0141A010A	2-2A	ED-344280	3-D201	EO-349461	4-L3	ET-349366	3-TR213	SK-B358605X3	15-4B
BA-F0141A010B	2-2B	ED-344280	3-D202	EO-349462	4-L2	ET-349366	3-TR216	SK-343017C	15-12
BA-F0141A010C	2-2C	ED-344280	3-D203	EO-349462	4-L4	ET-349366	3-TR217	SK-358879	15-9
BB-359082	1-1	ED-344280	5-D3	EO-349462	4-L5	ET-349459	3-TR3	SK-358886A	15-8
BC-355140A	15-5x	ED-344280	5-D4	EO-349589	3-S201	ET-349459	6-TR2	SM-358871	14-11
BC-355140B	15-6	ED-344280	5-D5	EO-353687	4-L7A	ET-349718	3-TR2	SP-355139A	14-5A
BC-355140C	15-6B	ED-344280	5-D8	EO-356732	5-T6	ET-350795	3-TR202	SP-355139B	14-5C
BD-C1005A050A	15-1A	ED-344280	6-D8	EO-356809	3-FL202	ET-351853	4-TR1	SP-355139C	14-5D
BD-C1005A050B	15-1C	ED-344280	10-D8	EO-357050	3-L201	ET-351853	4-TR4	SP-355139D	14-5B
BD-C1005A050C	15-1B	ED-344280	10-D11	EO-359062	5-T4	ET-351853	5-TR8	SP-355139E	14-5E
BD-C1005A050D	15-1D	ED-346455	3-D3	EO-359175	5-T5	ET-351853	5-TR10	SP-355139F	14-5F
BD-358884A	15-11	ED-346616	6-D7	EO-361840	4-L7B	ET-352408	5-TR2	SZ-332739	14-13
BD-358884B	15-11B	ED-348200	6-D5	ER-306805	3-R106	ET-353366	5-TR12	SZ-645186	15-10
BD-358887A	15-3	ED-349448	4-D1	ER-318647	6-FR4	ET-353366	5-TR13	TC-712810	1-43
BD-358887B	15-3B	ED-349448	4-D2	ER-319455	6-FR1	ET-353898	3-TR104	TC-712811	1-44
BD-358888A	15-2	ED-349448	4-D3	ER-319455	6-FR2	ET-353898	3-TR105	TC-712823	1-85
BD-358888B	15-2B	ED-349448	4-D4	ER-322591	6-R17	ET-353898	3-TR210	ZG-558866	14-1
BF-712807	1-37	ED-349460	5-D1	ER-322591	6-R18	ET-353898	5-TR4	ZG-712816	1-53
BL-712799	1-28	ED-349460	5-D2	ER-325269	6-R6	ET-353898	5-TR7	ZG-712822	1-79
BM-712825	1-M901	ED-357754	3-D1	ER-327710	3-R107	ET-353898	5-TR11	ZG-715921	1-73
BR-715918	1-29	ED-357754	3-D5	ER-328067	3-R22	ET-353898	11-TR1	ZG-715922	1-128
BR-715919	1-30	EE-359265	14-3	ER-328067	5-R44	ET-353898	11-TR2	ZG-715940	1-75
BT-359040	14-T901A	EF-306952	6-F6A	ER-328082	3-R23	ET-353898	11-TR3	ZG-716187	1-67
BT-359041	14-T901B	EF-306952	6-F7A	ER-328082	6-R13	ET-353898	11-TR4	ZG-716188	1-68
BT-359042	14-T901C	EF-306957	6-F3A	ER-345507	3-FR1	ET-353899	5-TR5	ZG-716189	1-69
BT-359045	14-T901D	EF-306957	6-F4A	ER-345507	6-FR3	ET-353899	5-TR6	ZG-716190	1-70
BT-359046	14-T901E	EF-306957	6-F6B	ER-356573	13-R1	ET-353899	6-TR3	ZG-716193	1-78
EC-306445	3-C232	EF-306957	6-F7B	ER-359266	6-R9	ET-353899	10-TR1	ZG-716194	1-80
EC-320548	13-C1A	EF-309392	6-F5A	ER-359266	6-R10	ET-355216	3-TR1	ZG-716197	1-82
EC-323846	6-C17	EF-311839	13-F1A	ER-359268	9-R1	ET-360137	3-TR212	ZG-716355	1-81
EC-326138	3-C237	EF-311839	13-F2	ER-359269	6-R16	EV-356577	5-VR1	ZG-749268	1-72
EC-326583	6-C24	EF-323080	13-F1B	ER-360146	3-R119	EV-356579	5-VR2	ZS-319460	14-12
EC-338411	13-C1B	EF-355226	6-F5C	ER-360146	5-R27	EV-359051	8-VR1	ZS-346742	14-6
EC-338496	13-C1C	EF-359007	13-F1D	ES-337902	13-SW1	EV-359083	7-VR6	ZS-497878	14-4
EC-344483	5-C40	EF-359086	6-F3C	ES-344445	3-SW102	EV-359093	3-VR201	ZS-536488	1-112
EC-346879	5-C7	EF-359086	6-F4C	ES-349056	4-L6	EV-359093	3-VR202	ZS-749292	1-113
EC-347263	3-C238	EF-359225	6-F6D	ES-349070	14-SW901	EV-359093	3-VR203	ZS-749293	1-114
EC-347591	3-C104	EF-359225	6-F7D	ES-349367	10-SW1	EV-359219	7-VR1	ZW-716181	1-52
EC-353044	5-C6B	EF-602550	13-F1C	ES-349367	10-SW2	EV-359219	7-VR2		
EC-356597	5-C6A	EF-623103	6-F5B	ES-349367	10-SW3	EV-359219	7-VR3		
EC-356598	5-C51	EF-690996	6-F3B	ES-349367	10-SW4	EV-359219	7-VR4		
EC-356598	5-C52	EF-690996	6-F4B	ES-349367	10—SW5	EV-359219	7-VR5		
EC-358538	6-C13	EF-691007	6-F6C	ES-349367	10-SW6	EW-359076	14-7A		
EC-358538	6-C14	EF-691007	6-F7C	ES-349367	10-SW7	EW-359077	14-7B		
EC-359065	5-VC1	EH-336804	5-FL2	ES-349367	10-SW8	EW-359078	14-7C		
EC-359065	5-VC2	EH-351182	3-FL201	ES-349367	10-SW9	EW-359079	14-7D		
ED-200213	6-D3	EH-355382	5-FL3	ES-349367	10-SW10	EW-359081	14-7E		
ED-301911	3-D6	EH-355568	3-FL101	ES-359068	3-SW203	EW-359204	14-7F		
ED-301911	5-D7	EH-355568	5-FL1	ES-359070	3-SW201	EZ-358816	10-BT1		
ED-301911	6-D11	EH-359049	10-IB1	ES-359071	3-SW1	HE-337047	1-H902		
ED-301911	6-D12	EI-332259	3-IC2	ES-359071	3-SW202	HP-712824	1-H901		
ED-301911	6-D13	EI-344422	3-X101	ES-360114	3-SW204	HZ-716172	1-27		
ED-301911	6-D2	EI-344764	3-IC1	ES-360115	3-SW101	MB-351605	14-9x		
ED-301911	10-D1	EI-348409	10-X1	ES-713179	1-SW902	MB-712818	1-57		

AKAI

PRO-A100/A100D

MODEL AP-A100/C, AP-A200/C, AC-A100/L

SCHEMATIC DIAGRAM AND PC BOARD

TABLE OF CONTENTS

1. AT-A100/C SCHEMATIC DIAGRAM, AP-A200 SCHEMATIC DIAGRAM, HALL D.D MOTOR, JUNCTION PCB, LED PCB, MOTOR PCB, SPEED SELECTOR PCB 1
2. AC-A100/L CONNECTION DIAGRAM 2
3. CONTROL PCB, FUNCTION LED PCB, G.EQ PCB, HEAD PHONE PCB, MAIN AMP PCB, POWER SUPPLY PCB, VOLUME PCB 3
4. AC-A100/L BASE SCHEMATIC DIAGRAM 4
5. BASE PCB, FRONT END PCB 5
6. AC-A100 IF-SCHEMATIC DIAGRAM 6
7. IF-A PCB 7
8. AC-A100L IF-B SCHEMATIC DIAGRAM 8
9. IF-B PCB 9
10. BLOCK DIAGRAM OF IC'S 10

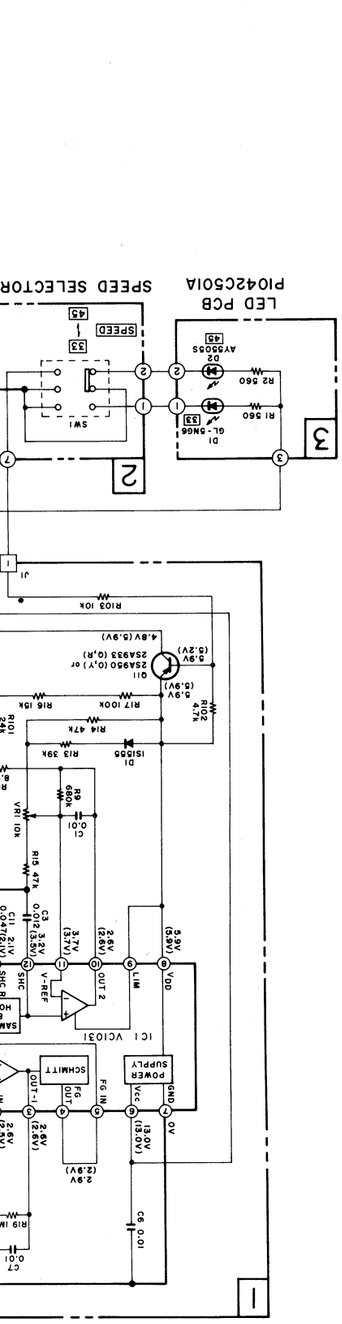

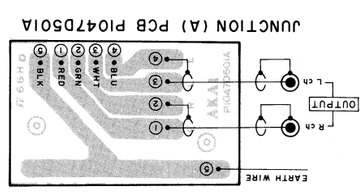

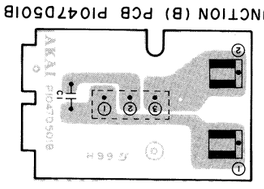

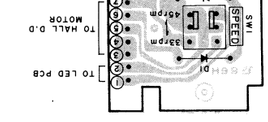

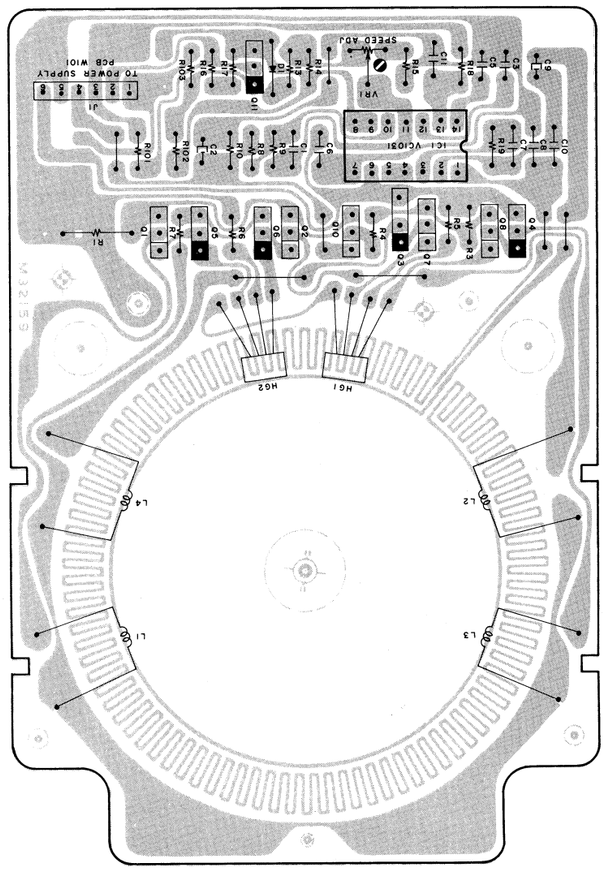

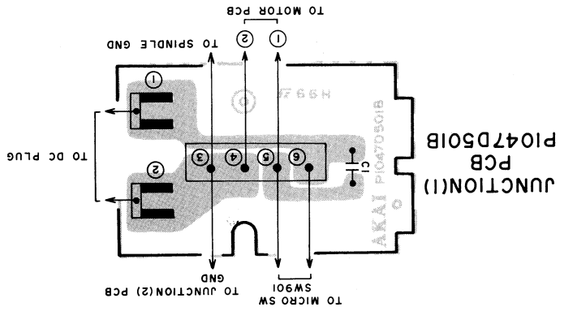

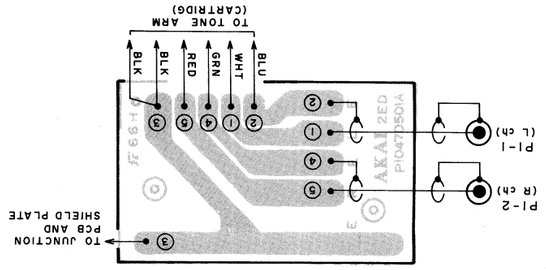

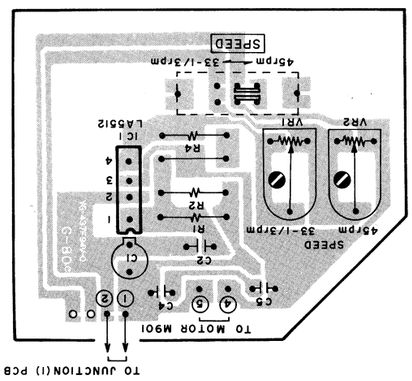

WARNING: Δ INDICATES SAFETY CRITICAL COMPONENTS. FOR CONTINUED SAFETY,
REPLACE SAFETY CRITICAL COMPONENTS ONLY WITH MANUFACTURER'S
RECOMMENDED PARTS
AVERTISSEMENT: Δ IL INDIQUE LES COMPOSANTS CRITIQUES DE SÉCURITÉ.
POUR MAINTENIR LE DEGRÉ DE SÉCURITÉ DE L'APPAREIL,
NE REMPLACER QUE DES PIÈCES RECOMMANDÉES PAR LE FABRICANT

= NPN TRANSISTOR

= PNP TRANSISTOR

- - 2SC2120(O,Y)
- - - 2SA950(O,Y) or 2SB926(R,S)
- - - 2SA1015 (Y,GR) or 2SA933(O,R)
- - - 2SC1815(Y,GR) or 2SC2458(Y,GR) or
or 2SC1740(O,R)
- - - 2SA950(O,Y) or 2SA933(O,R)

M901

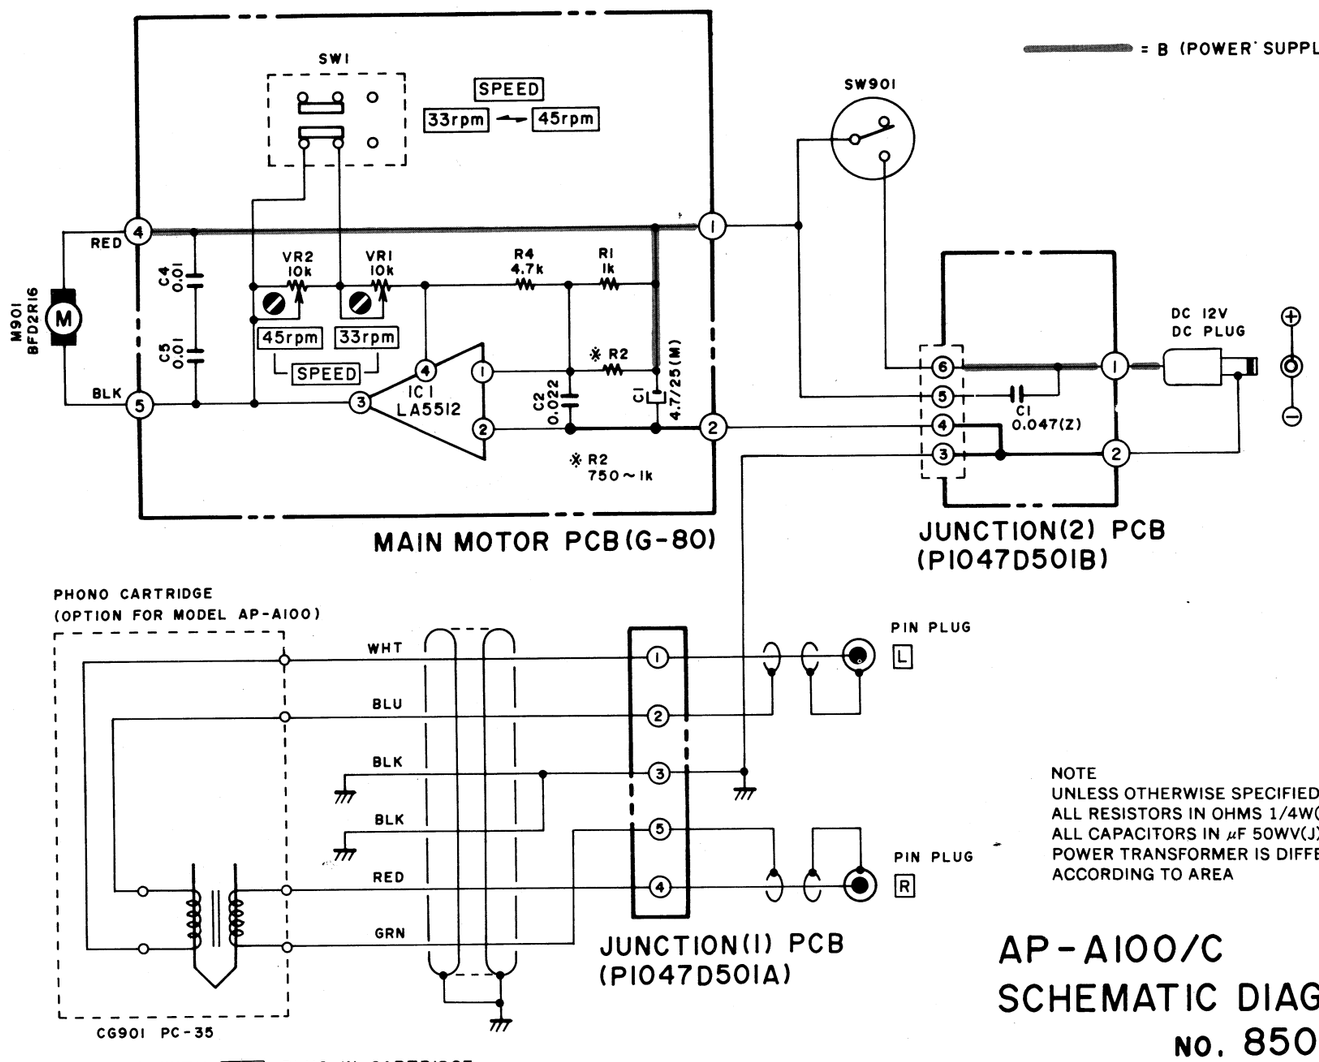

NOTE
UNLESS OTHERWISE SPECIFIED
ALL RESISTORS IN OHMS 1/4W(J)
ALL CAPACITORS IN μF 50WV(J)
POWER TRANSFORMER IS DIFFERENT ACCORDING TO AREA

AP-A100/C SCHEMATIC DIAGRAM

NO. 850614A A4
3

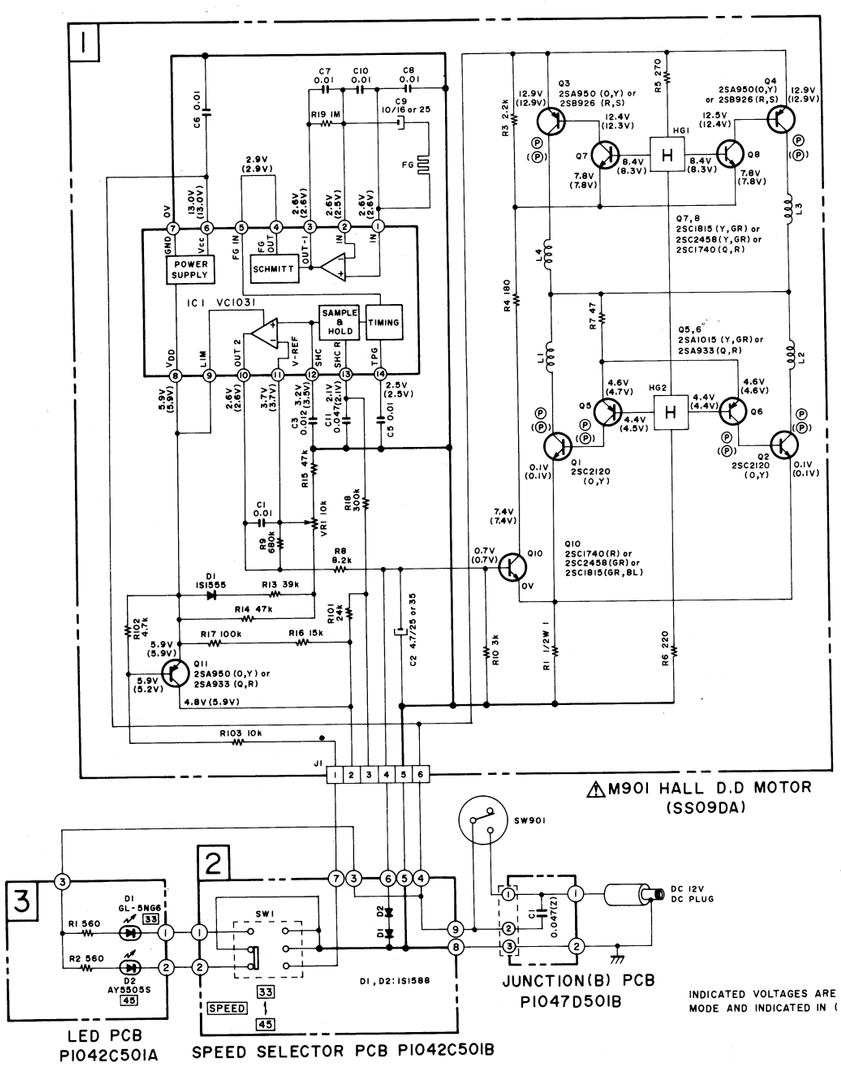

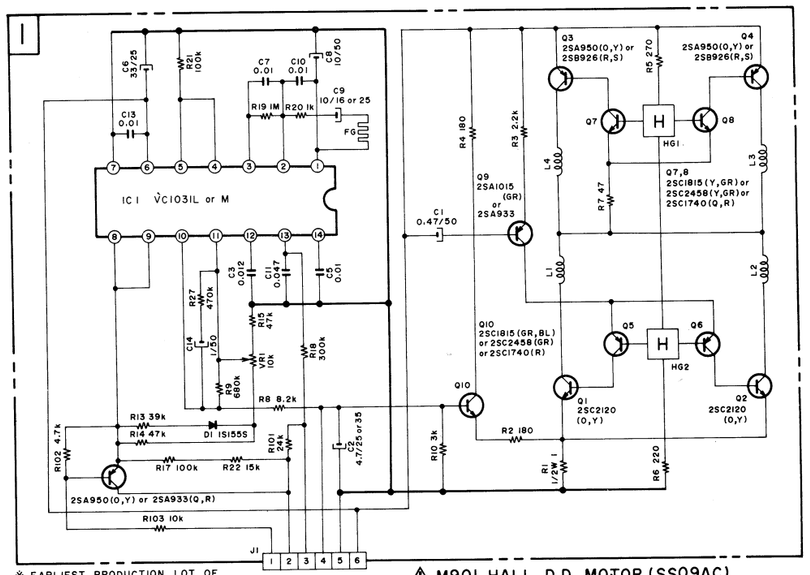
IC1 VC1031L or M
Q1 2SC2120 (O,Y)
Q2 2SC2120 (O,Y)
Q3 2SA950(O,Y) or 2SB926(R,S)
Q4 2SA950(O,Y) or 2SB926(R,S)
Q5 Q6
Q7 Q8
Q9 2SA1015 (GR) or 2SA933
Q10 2SC1815(GR,BL) or 2SC2458(GR) or 2SC1740(R)
Q7,8 2SC1815(Y,GR) or 2SC2458(Y,GR) or 2SC1740(Q,R)
2SA950(O,Y) or 2SA933(Q,R)
D1 1S1555
R103 10k
J1
※ EARLIEST PRODUCTION LOT OF E AND U MODELS HAVE BEEN USED HALL D,D, MOTOR OF SS09AC TYPE.
⚠M901 HALL D.D MOTOR (SS09AC)

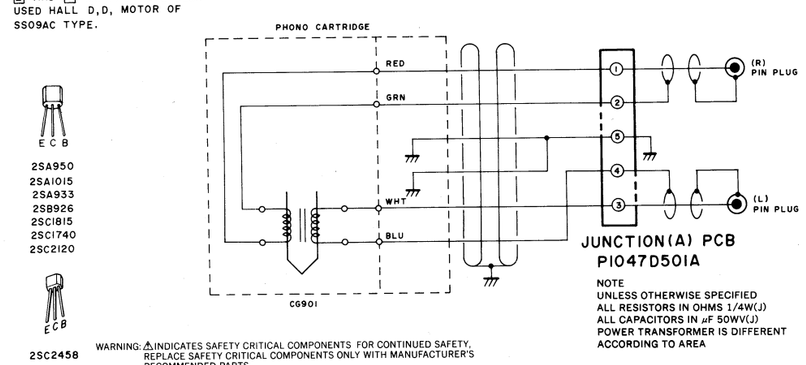

2SA950
2SA1015
2SA933
2SB926
2SC1815
2SC1740
2SC2120

2SC2458

WARNING: ⚠INDICATES SAFETY CRITICAL COMPONENTS. FOR CONTINUED SAFETY, REPLACE SAFETY CRITICAL COMPONENTS ONLY WITH MANUFACTURER'S RECOMMENDED PARTS
AVERTISSEMENT: ⚠IL INDIQUE LES COMPOSANTS CRITIQUES DE SÉCURITÉ. POUR MAINTENIR LE DEGRÉ DE SÉCURITÉ DE L'APPAREIL, NE REMPLACER QUE DES PIÈCES RECOMMANDÉES PAR LE FABRICANT

INDICATED VOLTAGES ARE AT 33rpm PLAY MODE AND INDICATED IN ( ) AT 45rpm PLAY MODE

NOTE
UNLESS OTHERWISE SPECIFIED
ALL RESISTORS IN OHMS 1/4W(J)
ALL CAPACITORS IN μF 50WV(J)
POWER TRANSFORMER IS DIFFERENT ACCORDING TO AREA

AP-A200 SCHEMATIC DIAGRAM

NO. 850608A A2

AC-A100/L

AC-A100 IF-A PCB C1005B505A
AC-A100L IF-B PCB C1005B506A

FRONT END PCB C1005B5040

BASE PCB C1005A503A

GEQ PCB C1005A502A

CONTROL PCB C1005A5010

VOLUME C1005A5

LED PCB C1005A503B

FUNCTION LED PCB C1005A507C [U] A508C [C,A] A509C [B,E,V,S]

* MODEL AC-A100(Y1) AND THE SAME MODEL EXCEPT FO ON THE CONTROL PCB AND FR

B (POWER SUPPLY) LINE

001759

MAIN AMP PCB C1005A507A U
A508A C,A
A509A B,E,V,S
HEADPHONE PCB
C1005A507D U
A508D A,C
A509D B,E,V,S
POWER SUPPLY PCB
C1005A507B U
POWER SUPPLY PCB C1005A508B A,C
POWER SUPPLY PCB C1005A509B V
POWER SUPPLY PCB C1005A509B E,B,S
VOLUME PCB
C1005A502B
SPEAKERS
EXCLUDE V MODEL
IC1 1/2
STK4152-2
IC1 2/2
SW901
VOLTAGE SELECTOR
POWER
PHONES
VOLUME
BALANCE
TUNING
* MODEL AC-A100(Y1) AND AC-A100 U ARE THE SAME MODEL EXCEPT FOR THE PART INDICATED ON THE CONTROL PCB AND FRONT END PCB.
AM
FM
kHz
MHz
IN1 8-BT-29ZK
B (POWER SUPPLY) LINE
INDICATED VOLTAGES ARE AT P.B MODE.
NOTE
UNLESS OTHERWISE SPECIFIED
ALL RESISTORS IN OHMS 1/6W(J)
ALL CAPACITORS IN μF 50WV(J)
POWER TRANSFORMER IS DIFFERENT ACCORDING TO AREA
(FS) = FAIL SAFE RESISTORS
WARNING: ⚠ INDICATES SAFETY CRITICAL COMPONENTS FOR CONTINUED SAFETY, REPLACE SAFETY CRITICAL COMPONENTS ONLY WITH MANUFACTURER'S RECOMMENDED PARTS
AVERTISSEMENT: ⚠ IL INDIQUE LES COMPOSANTS CRITIQUES DE SÉCURITÉ. POUR MAINTENIR LE DEGRÉ DE SÉCURITÉ DE L'APPAREIL, NE REMPLACER QUE DES PIÈCES RECOMMANDÉES PAR LE FABRICANT

*	B	U(Y1)	C,A	E,V,S
F1	T1.25A 250V	1.6A 250V	3.15A 125V	T1.25A 250V
F2	——	1.6A 250V	——	——
F3	T4A 250V	——	4A 125V	T4A 250V
F4	T4A 250V	——	4A 125V	T4A 250V
F5	T1A 250V	——	1.25A 125V	T1A 250V
F6,7	T3.15A 250V	4A 250V	4A 125V	T3.15A 250V

AC-A100/L CONNECTION DIAGRAM

NO.4-1 850801A 3

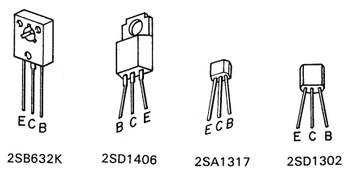

2SB632K 2SD1406 2SA1317 2SD1302

TR1 ..... 2SB632K (E, F)
TR2 ..... 2SD1406
TR3 ..... 2SA1317 (S, T, U)
TR4, TR4b ..... 2SD1302 (S, T)

LOCAT
TR1 ....
TR2 ....
TR3 ....
TR4 ....
TR4b ..

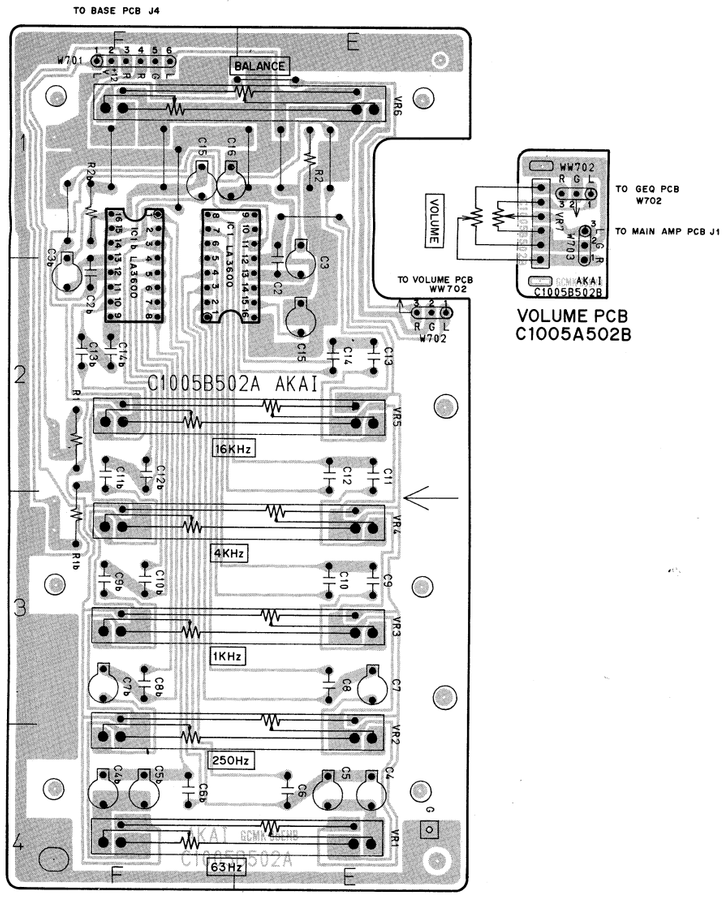

GEQ PCB
C1005A502A

VOLUME PCB
C1005A502B

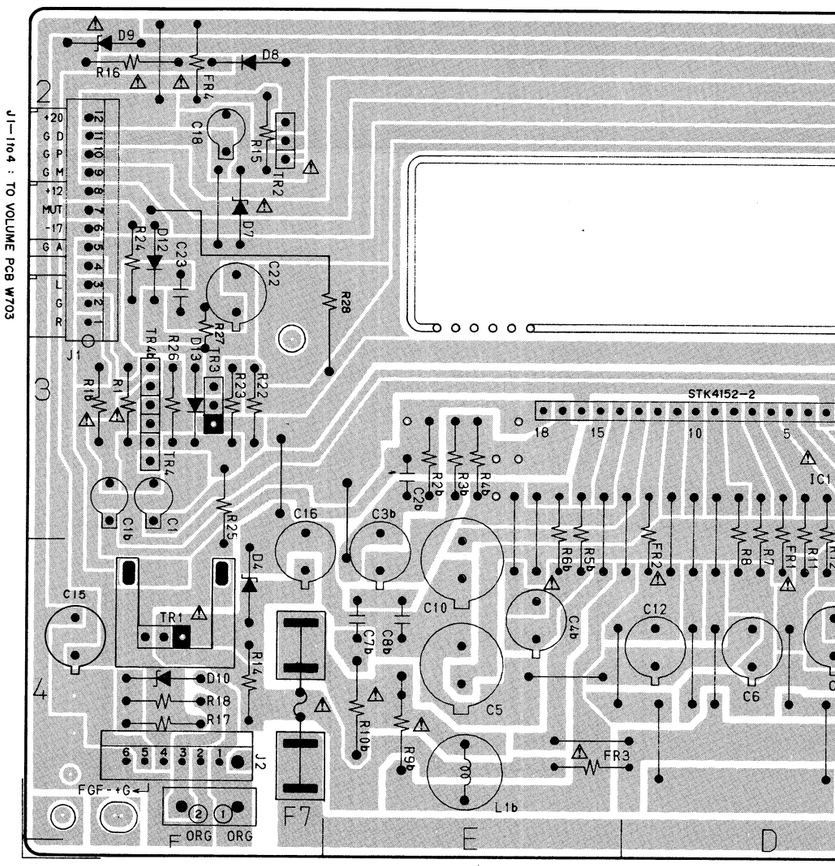

J2-1to3: TO CONTROL PCB W604
J2-4to6: TO CONTROL PCB W603

MAIN

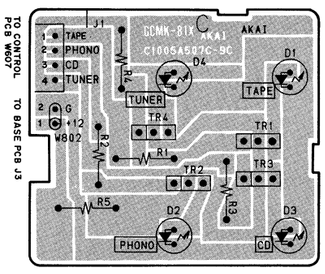

FUNCTION LED PCB
C1005A507C
A508C
A509C

U
A.C
B.E.V.S

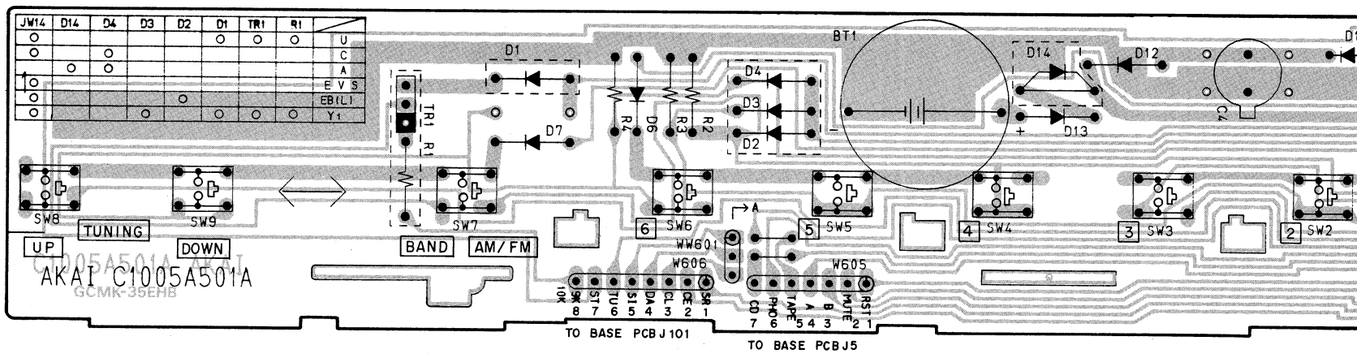

CONTROL
C1005A50

TR1 ~ 4 ..... 2SC3330

2SC3330

LOCATION OF TRANSISTOR'S

TR1	F4
TR2	F2
TR3	F3
TR4	F3
TR4b	F3

LOCATION OF IC

IC1	E3/D3

LOCATION OF CONNECTOR'S

J1	F2/F3
J2	F4
W801	C4

TR1..... 2SB632K (E, F)
TR2..... 2SD1406
TR3..... 2SA1317 (S, T, U)
TR4, TR4b..... 2SD1302 (S, T)

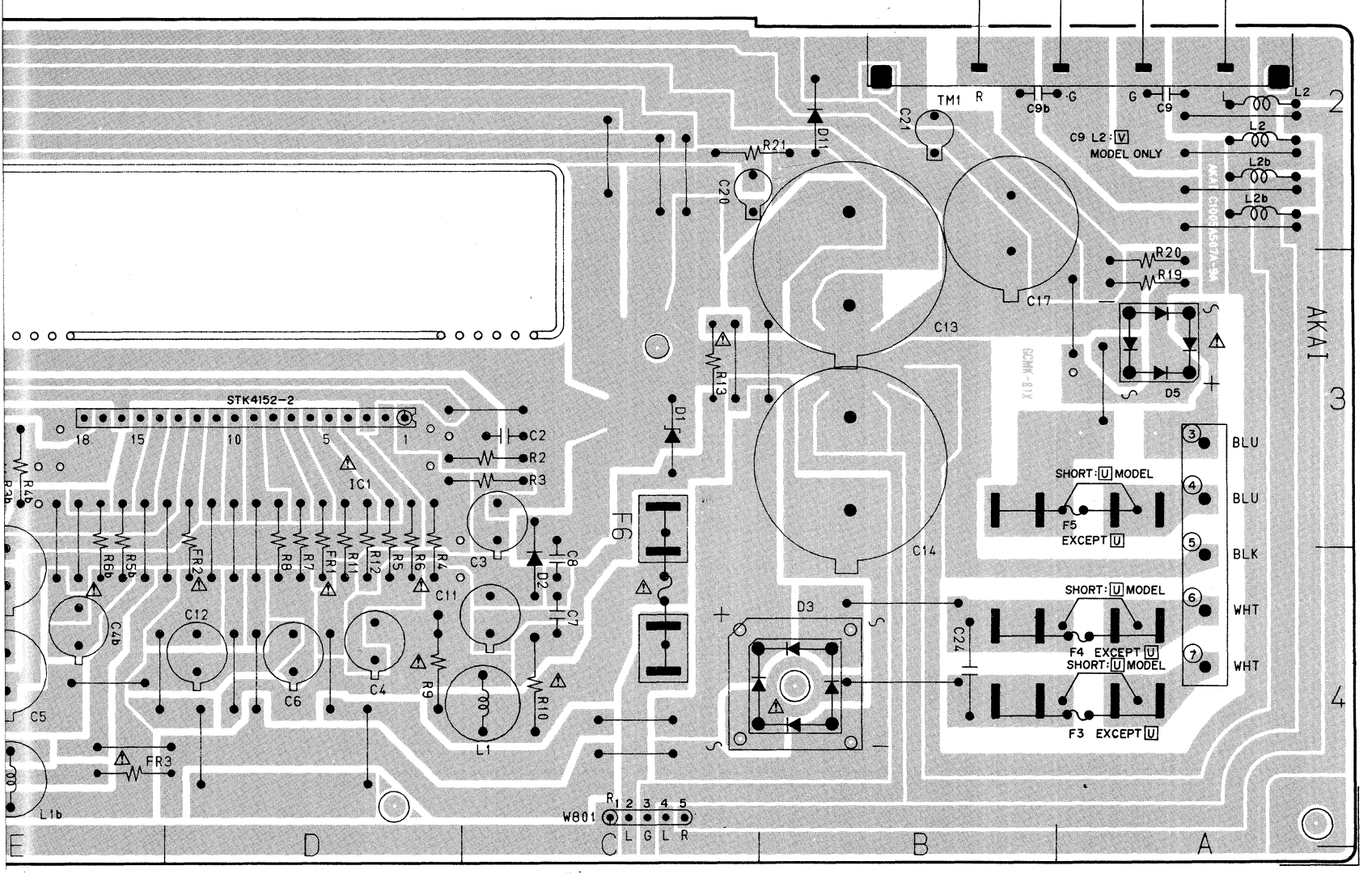

TO HEAD PHONE PCB WW801

MAIN AMP PCB C1005A507A U
C1005A508A A,C
C1005A509A S,V,E,B

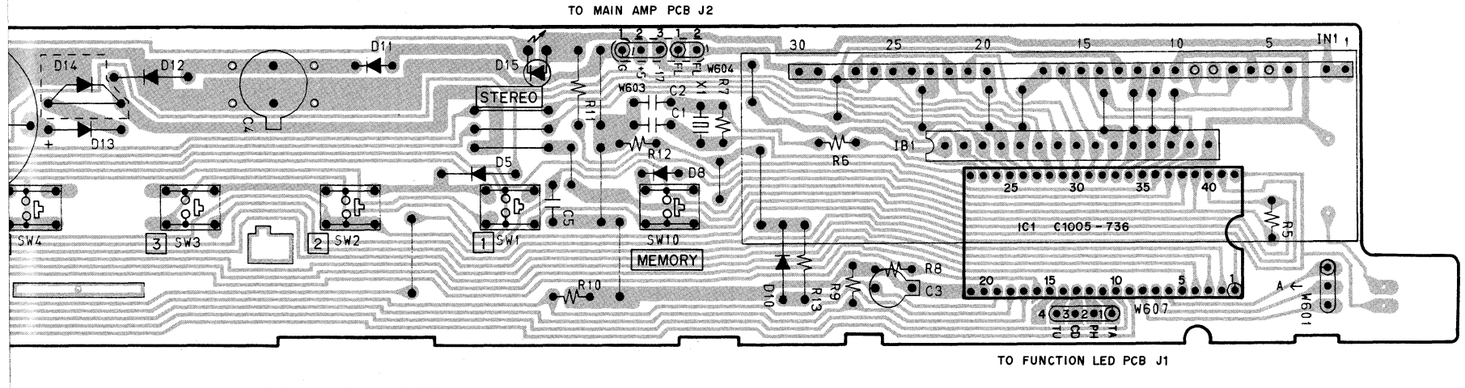

CONTROL PCB
C1005A5010

TR1..... 2SA1317 (S, T, U)

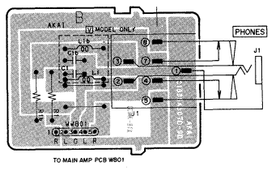

HEAD PHONE PCB
C1005A507D U
C1005A508D A,C
C1005A509D B,E,V,S

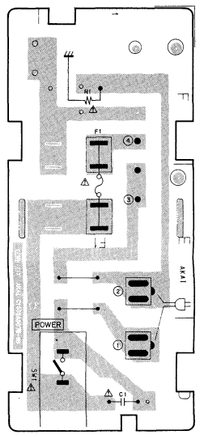

POWER SUPPLY PCB
C1005A 508B A,C

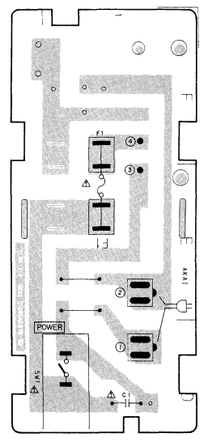

POWER SUPPLY PCB
C1005A 509B B,S,E

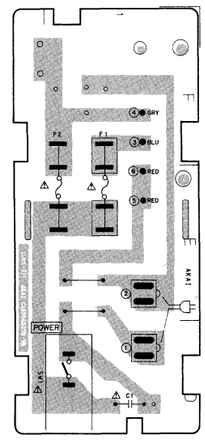

POWER SUPPLY PCB
C1005A507B U

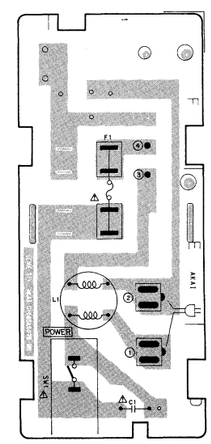

POWER SUPPLY PCB
C1005A509B V

AC-A100/L

04

03

*L7 Y1 E525HNS-110011

*L7 E525HN-110003 EXCEPT Y1

*	EXCEPT(Y1)	(Y1)
C1	27P LH	33P LH
C2	27P LH	33P LH
C4	33P LH	39P LH
C5	33P LH	39P LH
C7	27P LH	33P LH
C8	27P LH	33P LH
C22	6P(D)UJ	3P(C)UJ

FRONT END PCB C1005B5040

ANTENNA
FM
AM
LOOP ANT
TM101

IC201 LA2730

LEFT
RIGHT
H901 REC/PB
P201
P210
TP P2
TP P1
SW-4
SW-3
SW-2
PB REC SW201
P.B LEVEL
TAPE SELECTOR
NORMAL CrO2
SW202
MODEL

SAME AS LEFT CHANNEL

POWER SUPPLY DC12
J2
J1
D1
D5 14.0V D1,5 DSI35D-KB1
TR1 2SA1317 (T, V)
IC1 1/2
IC2 TC4052BP
IC3 M5218P
IC3 1/2
IC3 2/2
PHONO
CD/VTR
L ch
R ch
EXCLUDE MODEL
J4
TO GEQ PCB(J11)
GND
+12V

BASE PCB C1005A503A

001760

2SA1317
2SC3399
2SC3330
2SC3402

2SD1406

2SC3383
2SC930
2SC2320
2SC2274

2SD612K

WARNING: ⚠ INDICATES SAFETY CRITICAL COMPONENTS FOR CONTINUED SAFETY, REPLACE SAFETY CRITICAL COMPONENTS ONLY WITH MANUFACTURER'S RECOMMENDED PARTS

AVERTISSEMENT: ⚠ IL INDIQUE LES COMPOSANTS CRITIQUES DE SÉCURITÉ. POUR MAINTENIR LE DEGRÉ DE SÉCURITÉ DE L'APPAREIL, NE REMPLACER QUE DES PIÈCES RECOMMANDEES PAR LE FABRICANT

NOTE
UNLESS OTHERWISE SPECIFIED
ALL RESISTORS IN OHMS 1/6W(J)
ALL CAPACITORS IN μF 50 WV(J)

AC-A100/L BASE SCHEMATIC DIAGRAM

NO.4-2 850802A 3

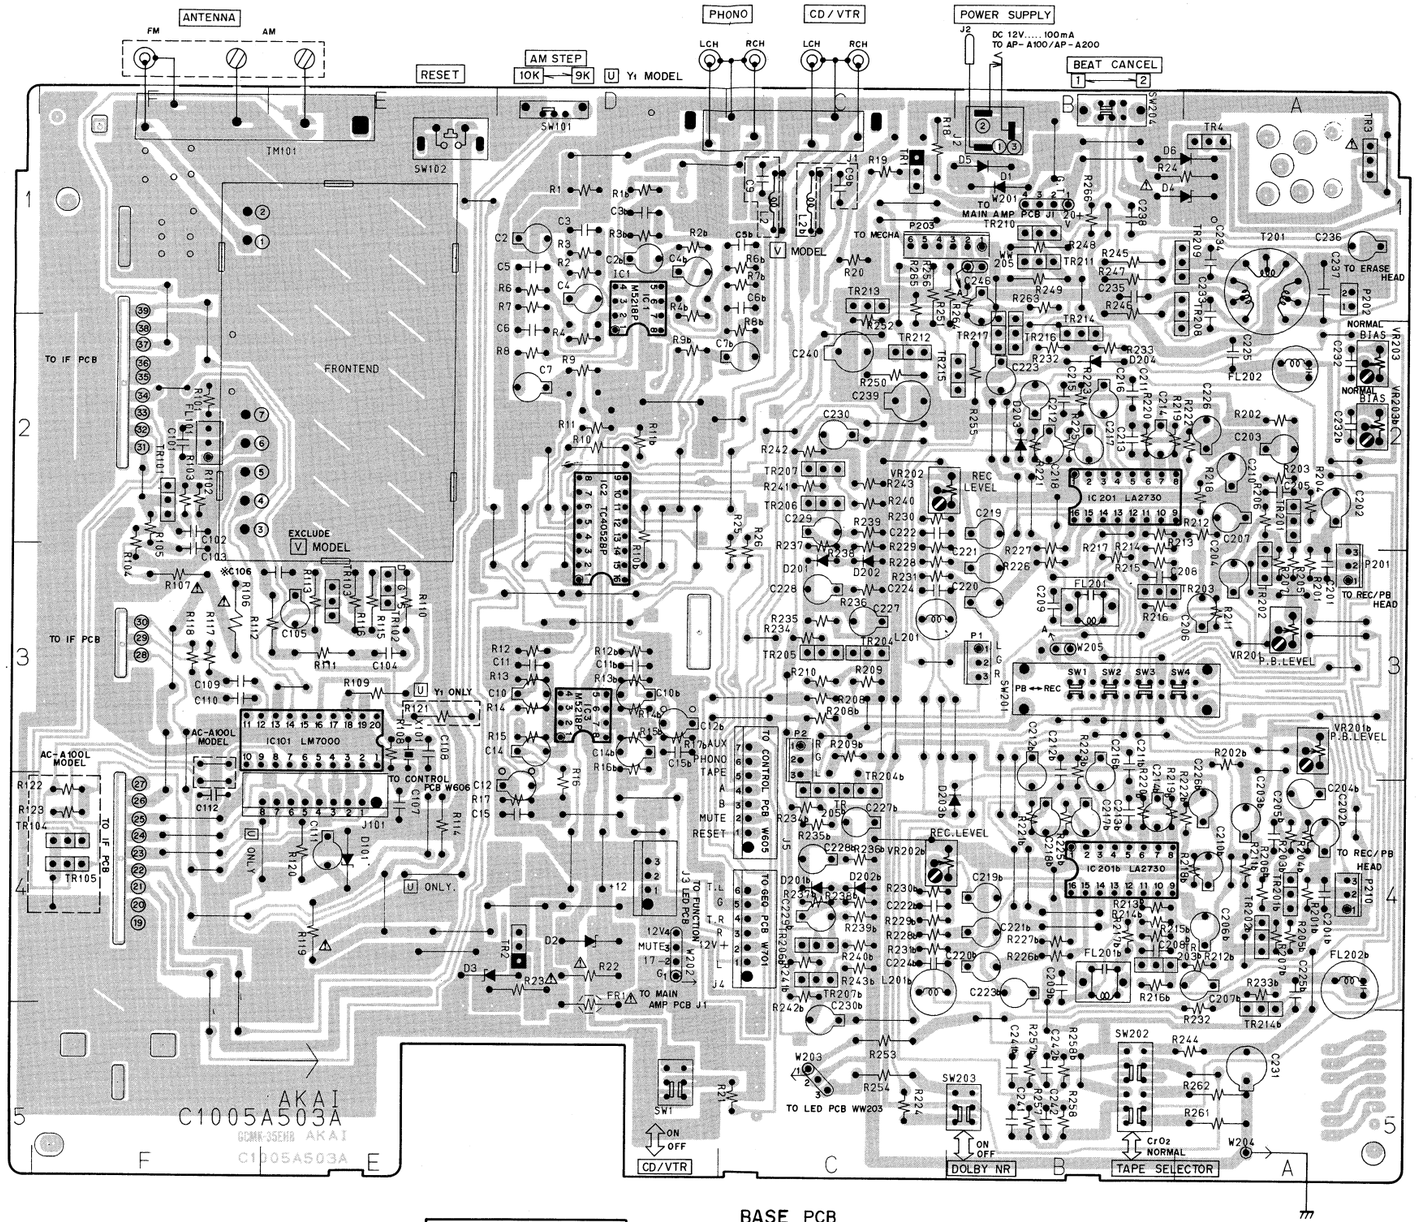

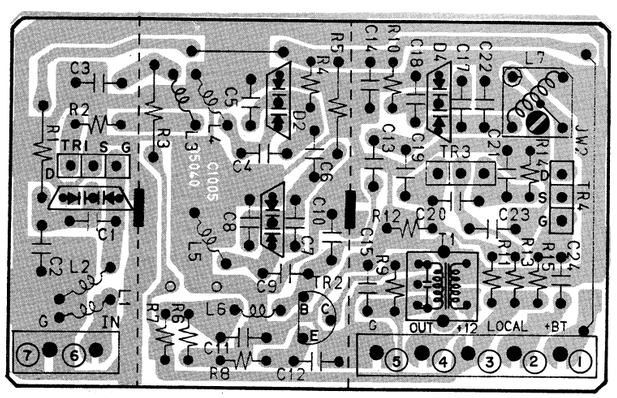

FRONT END PCB C1005B5040

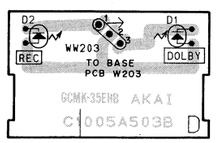

LED PCB
C1005A503B

BASE PCB
C1005A503A



2SA1317
2SC3399
2SC3330
2SC3402

2SD1406

2SC3383
2SC930
2SC2320
2SC2274

2SD612K

B PNP TRANSISTOR
B NPN TRANSISTOR

TR1 ..... 2SA1317 (T, U)
TR2 ..... 2SA1392 (S, T)
TR3 ..... 2SD1406 (O, Y, GR)
TR4, 101, 103,..... 2SC3383 (S, T)
203 ~ 207,
214, 215
TR101 ..... 2SC930 (E, F)
TR102 ..... 2SK246 (GR)
TR201 ..... 2SC2320L (F, G)
TR202 ..... 2SC3399
TR208, 209..... 2SC2274K (E, F)
TR210 ..... 2SC3330
TR211 ..... 2SD612K (E, F)
TR212 ..... 2SC3330 (U, V)
TR213,216,217.... 2SC3402

LOCATION OF TRANSISTOR'S
TR1 ..... C1
TR2 ..... D4
TR3 ..... A1
TR4 ..... A1
TR101 ..... F2
TR102 ..... E3
TR103 ..... E3
TR201 ..... A2
TR201b A4
TR202 ..... A3
TR202b A4
TR203 ..... B3
TR203b B4
TR204 ..... C3
TR204b C4
TR205 ..... C3
TR205b C4
TR206 ..... C2
TR206b C4
TR207 ..... C2
TR207b C4
TR208 ..... A1.2/B1.2
TR209 ..... A1/B1
TR210 ..... B1
TR211 ..... B1
TR212 ..... C2
TR213 ..... C1
TR214 ..... B2
TR214b A4/A5
TR215 ..... B2
TR216 ..... B2
TR217 ..... B2

LOCATION OF IC'S
IC1 ..... D1/D2
IC2 ..... D2/D3
IC3 ..... D3
IC101 ..... E3
IC201 ..... B2
IC201b B4

LOCATION OF CONNECTOR'S
J1 ..... C1
J2 ..... B1
J3 ..... D4
J4 ..... C4
J5 ..... C4/C5
P1 ..... B3
P2 ..... C3
P202 ..... A1
P203 ..... C1
P210 ..... A4
W201 ..... B1
W202 ..... D4
W203 ..... C5
J101 ..... E4

AC-A100

05

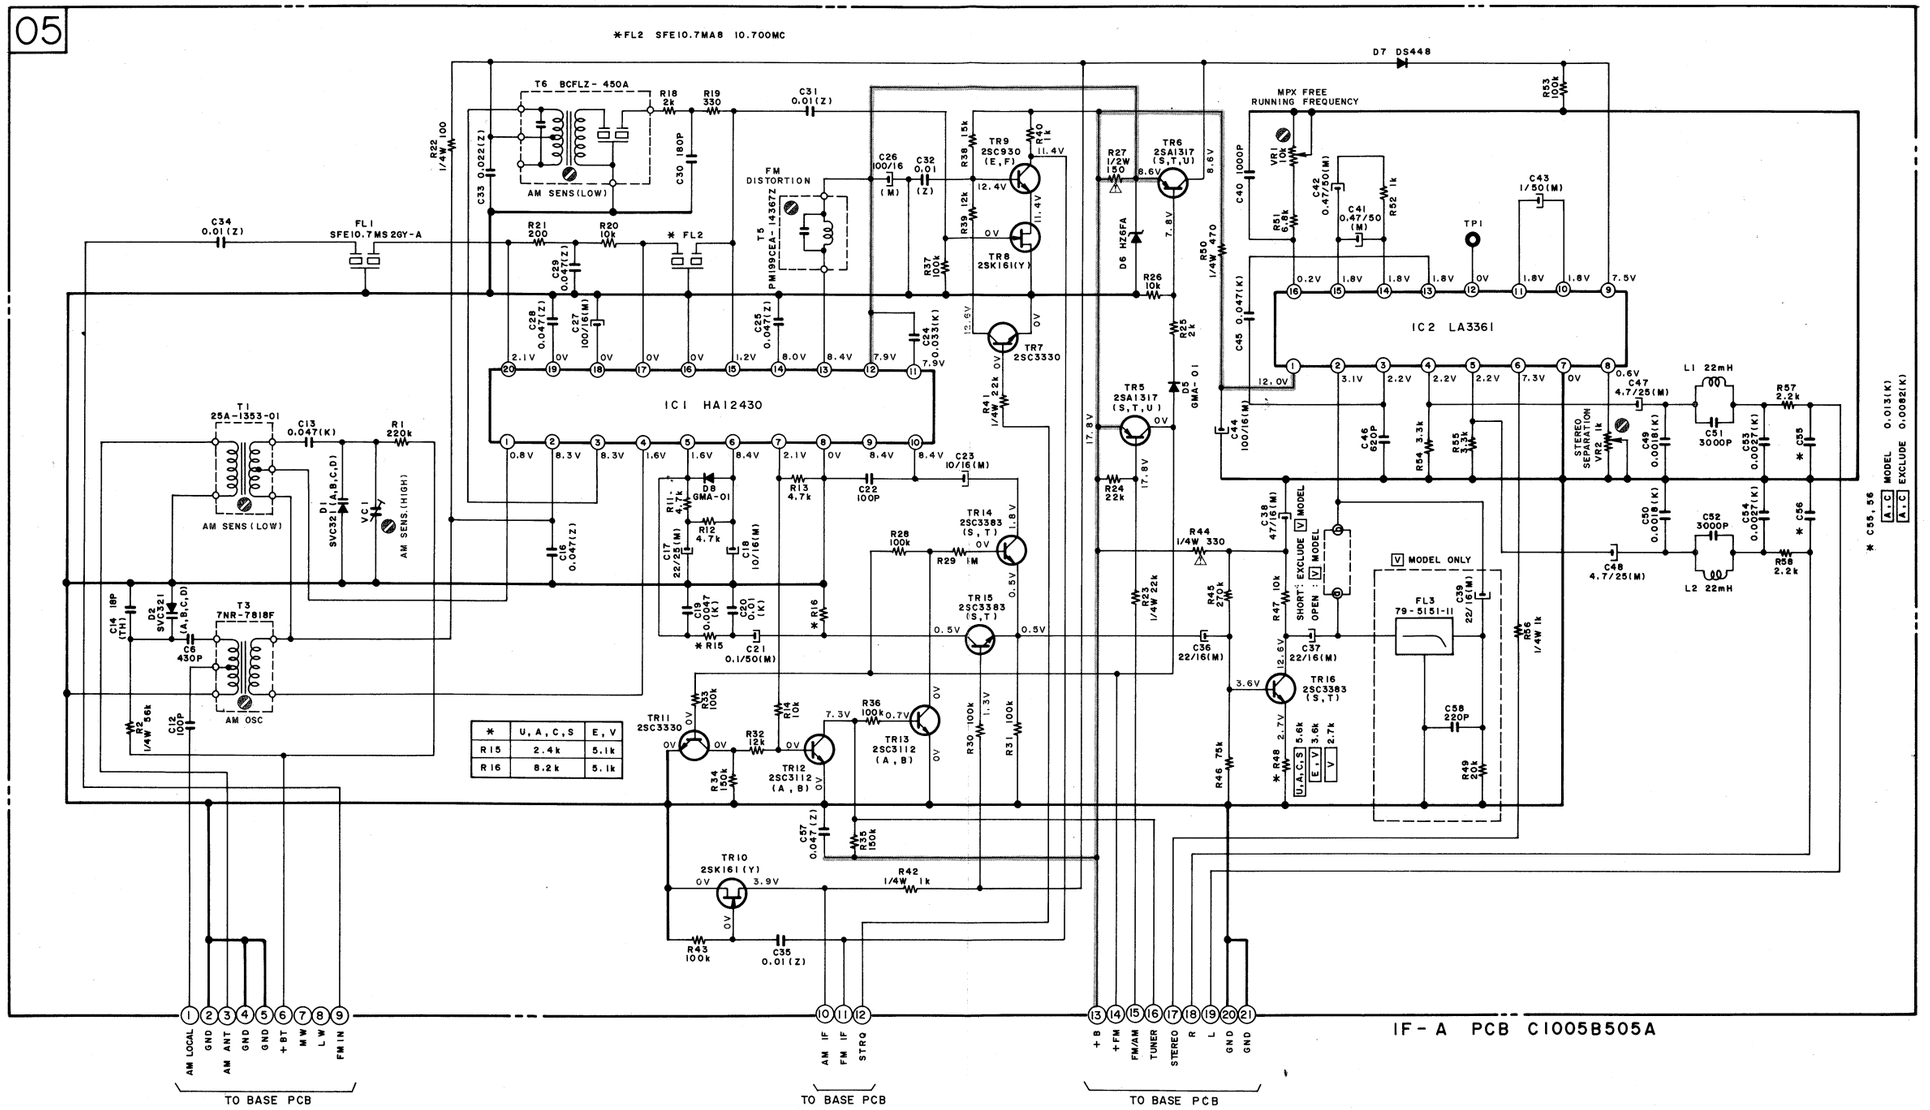

*	U,A,C,S	E,V
R15	2.4k	5.1k
R16	8.2k	5.1k

B (POWER SUPPLY) LINE

2SA1317
2SC3330

2SC930
2SC3383
2SC3112

2SK161

INDICATED VOLTAGES ARE AT AM MODE

NOTE
UNLESS OTHERWISE SPECIFIED
ALL RESISTORS IN OHMS 1/6W(J)
ALL CAPACITORS IN μF 50 WV(J)

WARNING: ⚠INDICATES SAFETY CRITICAL COMPONENTS. FOR CONTINUED SAFETY, REPLACE SAFETY CRITICAL COMPONENTS ONLY WITH MANUFACTURER'S RECOMMENDED PARTS.

AVERTISSEMENT: ⚠IL INDIQUE LES COMPOSANTS CRITIQUES DE SÉCURITÉ. POUR MAINTENIR LE DEGRÉ DE SÉCURITÉ DE L'APPAREIL, NE REMPLACER QUE DES PIÈCES RECOMMANDÉES PAR LE FABRICANT

AC-A100 IF-A SCHEMATIC DIAGRAM

NO. 4-3 850803A(A2)

001782

ADJ. PART	Item
T1	AM LOW Range SENS.
T3	AM OSC
T5	FM DISTORTION
T6	AM LOW Range SENS.
VC1	AM HIGH Range SENS.
VR1	MPX FREE RUNNING FREQUENCY
VR2	STEREO SEPARATION

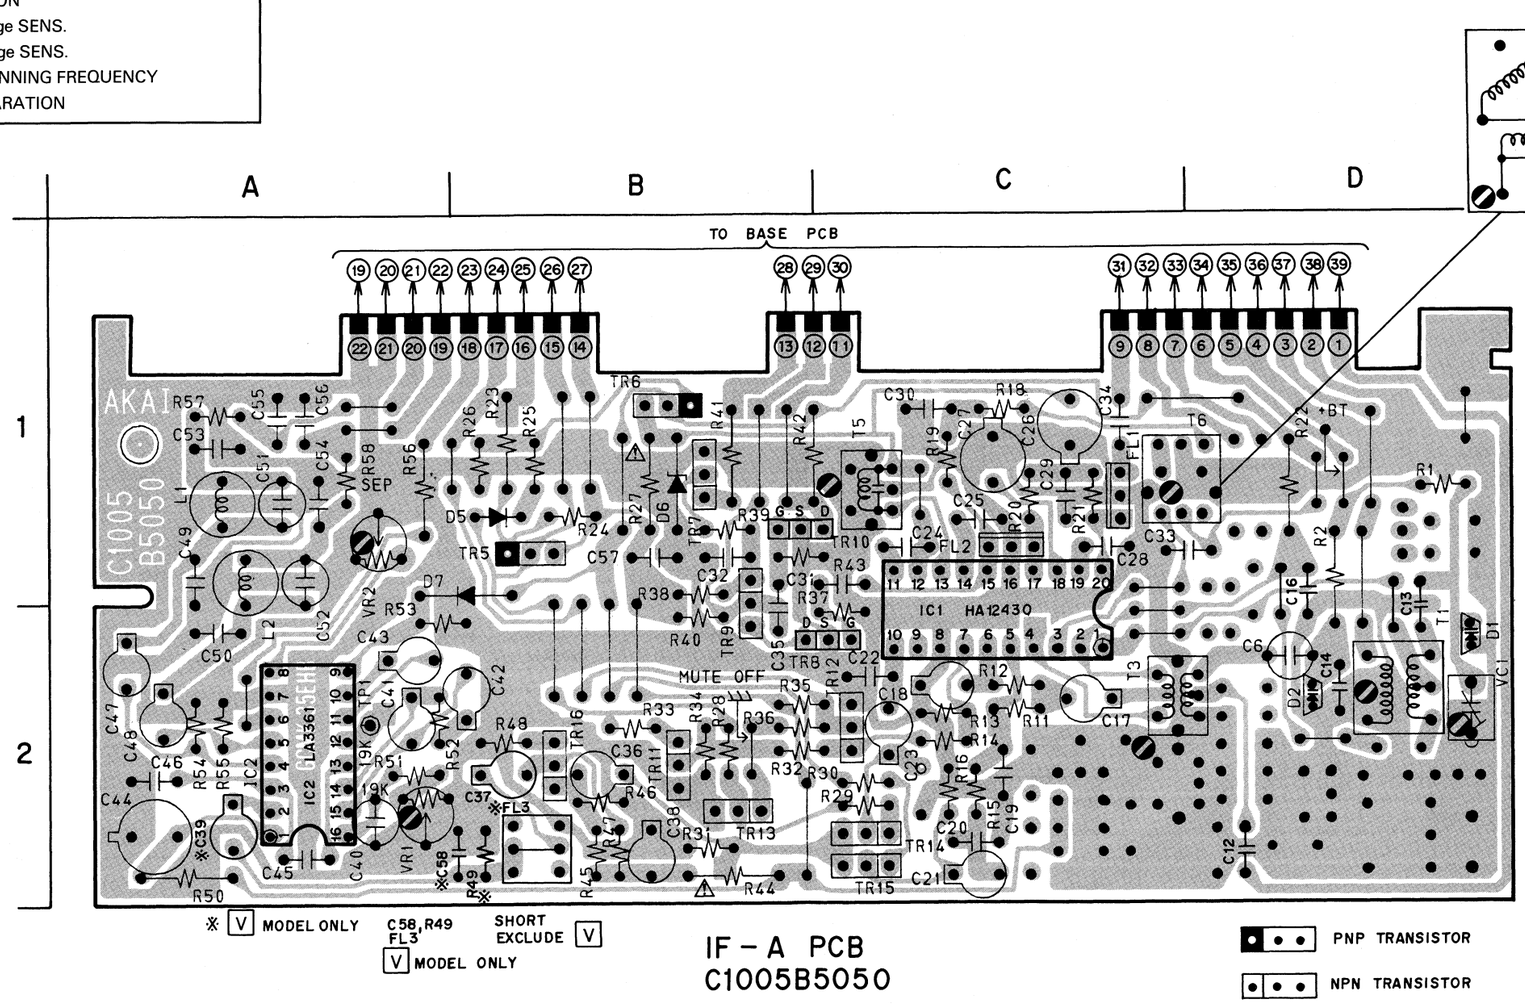

IF – A PCB
C1005B5050

TR5, 6..... 2SA1317 (S, T, U)
TR7, 11 ..... 2SC3330
TR8, 10 ..... 2SK161 (Y)
TR9..... 2SC930 (E, F)
TR12, 13 ..... 2SC3112 (A, B)
TR14, 15, 16..... 2SC3383 (S, T)

LOCATION OF TRANSISTOR'S

TR5..... B1
TR6..... B1
TR7..... B1
TR8..... C2
TR9..... B1/B2
TR10 ..... B1
TR11 ..... B2
TR12 ..... C2
TR13 ..... B2
TR14 ..... C2
TR15 ..... C2
TR16 ..... B2

LOCATION OF IC'S

IC1..... C1/C2
IC2..... A2

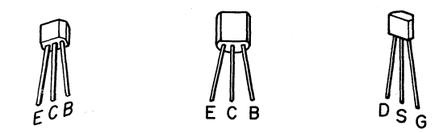

2SA1317
2SC3330

2SC930
2SC3383
2SC3112

2SK161

AC-A100L

05

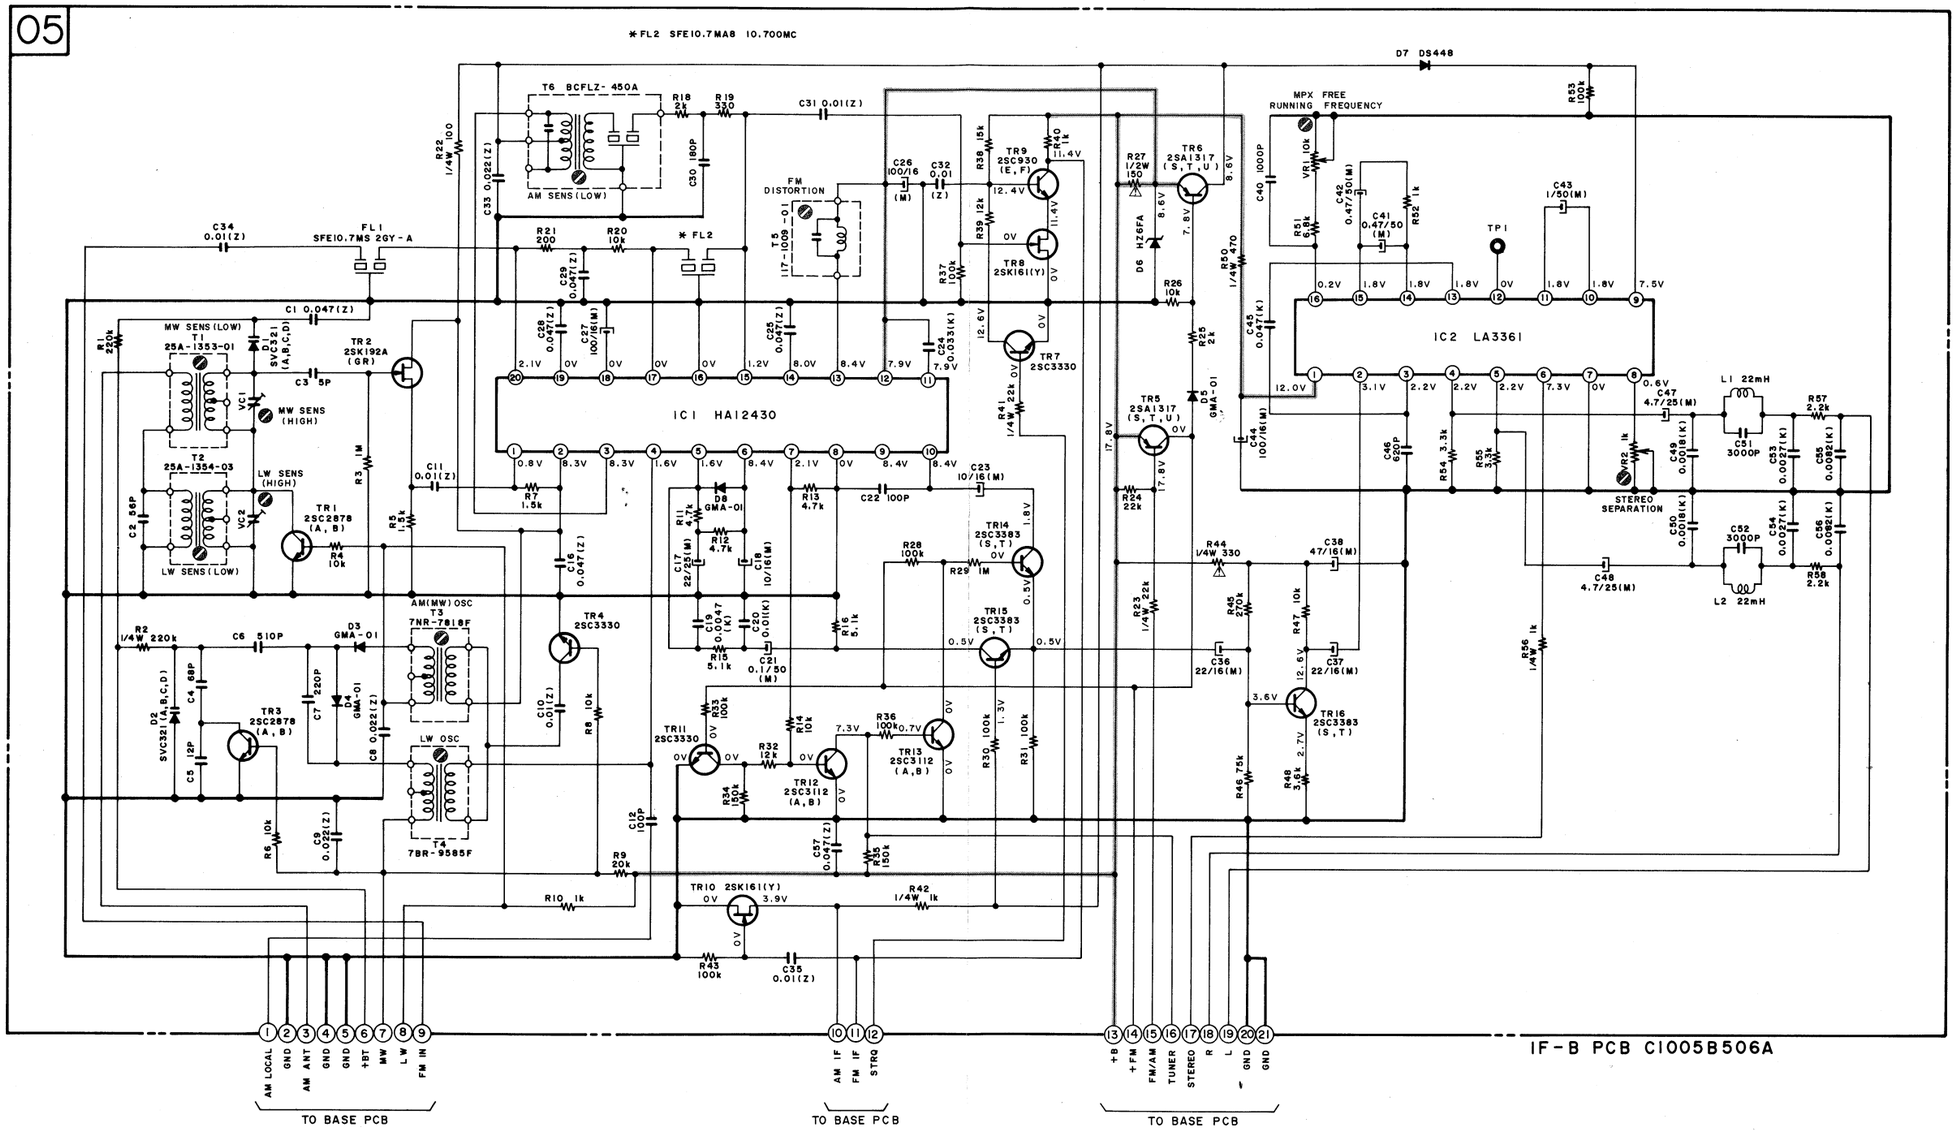

B (POWER SUPPLY) LINE

2SK192A
2SK161

2SC3330
2SA1317

2SC930
2SC3112
2SC3383
2SC2878

INDICATED VOLTAGES ARE AT AM MODE.

WARNING: ⚠ INDICATES SAFETY CRITICAL COMPONENTS. FOR CONTINUED SAFETY, REPLACE SAFETY CRITICAL COMPONENTS ONLY WITH MANUFACTURER'S RECOMMENDED PARTS

AVERTISSEMENT: ⚠ IL INDIQUE LES COMPOSANTS CRITIQUES DE SÉCURITÉ. POUR MAINTENIR LE DEGRÉ DE SÉCURITÉ DE L'APPAREIL, NE REMPLACER QUE DES PIÈCES RECOMMANDÉES PAR LE FABRICANT

NOTE
UNLESS OTHERWISE SPECIFIED
ALL RESISTORS IN OHMS 1/6W (J)
ALL CAPACITORS IN μF 50 WV (J)

AC-A100L IF-B SCHEMATIC DIAGRAM

NO. 4-4 850804A (A2)

001761

ADJ. PART	Item
T1	MW LOW Range SENS.
T2	LW LOW Range SENS.
T3	AM (MW) OSC
T4	LW OSC
T5	FM DISTORTION
T6	AM LOW Range SENS.
VC1	MW HIGH Range SENS.
VC2	LW HIGH Range SENS.
VR1	MPX FREE RUNNING FREQUENCY
VR2	STEREO SEPARATION

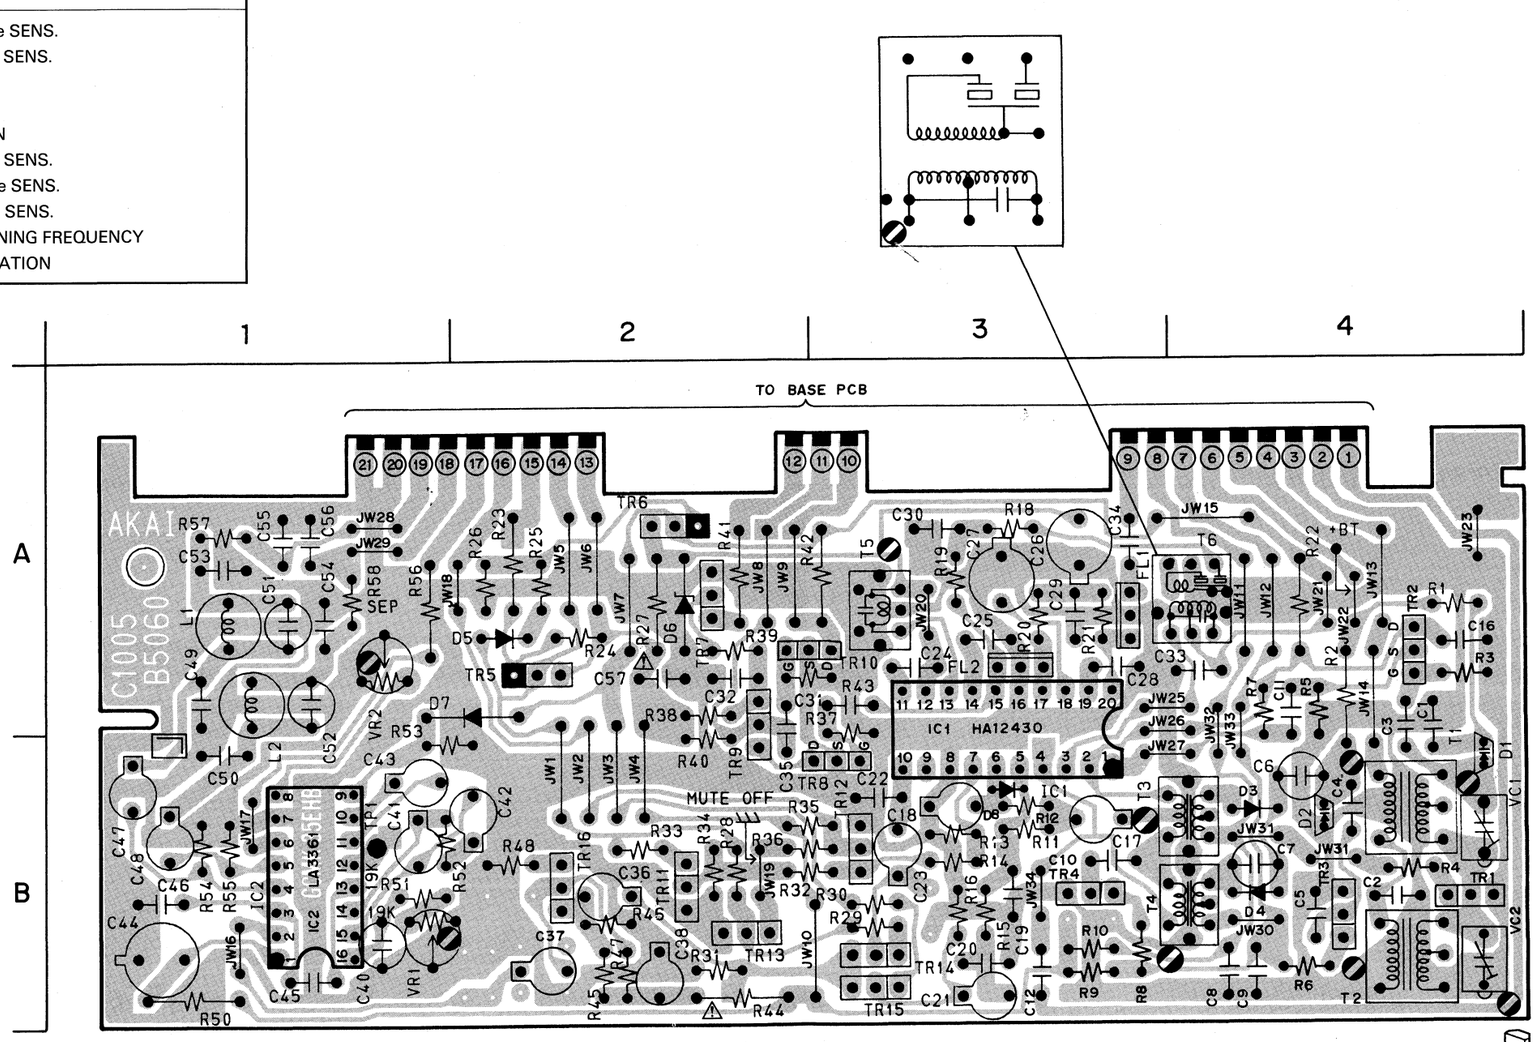

IF-B PCB C1005B5060

TR1, 3..... 2SC2878 (A, B)
TR2..... 2SK192A (GR)
TR4, 7, 11 ..... 2SC3330
TR5, 6..... 2SA1317 (S, T, U)
TR8, 10 ..... 2SK161 (Y)
TR9..... 2SC930 (E, F)
TR12, 13 ..... 2SC3112 (A, B)
TR14, 15, 16..... 2SC3383 (S, T)

LOCATION OF TRANSISTOR'S

TR1..... B4
TR2..... A4
TR3..... B4
TR4..... B3
TR5..... A2
TR6..... A2
TR7..... A2
TR8..... B3
TR9..... A2/B2
TR10 ..... A2/B2
TR11 ..... B2
TR12 ..... B3
TR13 ..... B2
TR14 ..... B3
TR15 ..... B3
TR16 ..... B2

LOCATION OF IC

IC1..... A3/B3
IC2..... B1

PNP TRANSISTOR

NPN TRANSISTOR

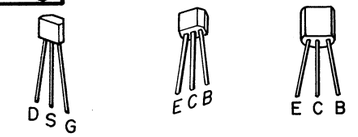

2SK192A
2SK161

2SC3330
2SA1317

2SC930
2SC3112
2SC3383
2SC2878

HA12430 (FM/AM STEREO RECEIVER SYSTEM)

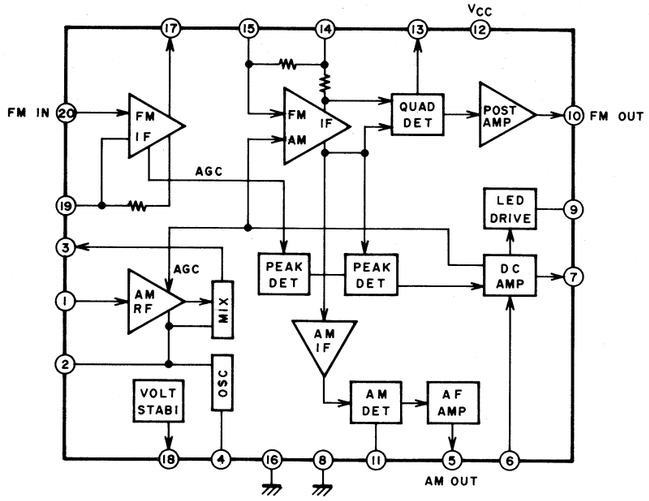

LA3361 (PLL FM MULTIPLEX STEREO DEMODULATOR)

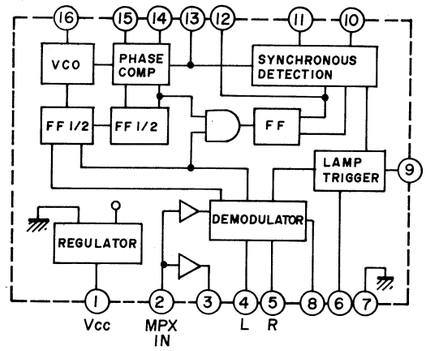

LA3600 (EQUALIZER)

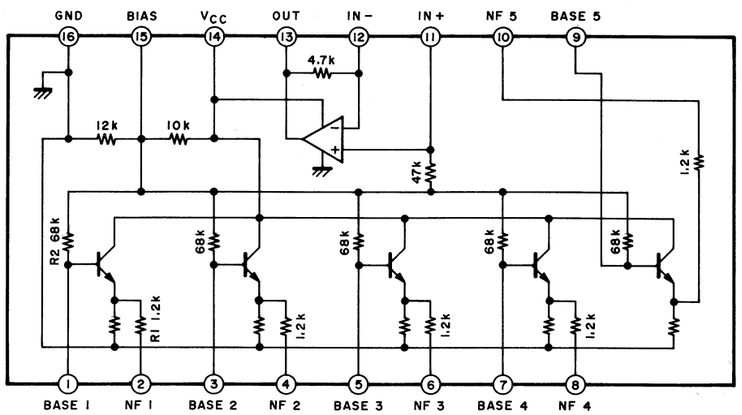

LM7000 (PLL FREQUENCY SYNTHESIZER)

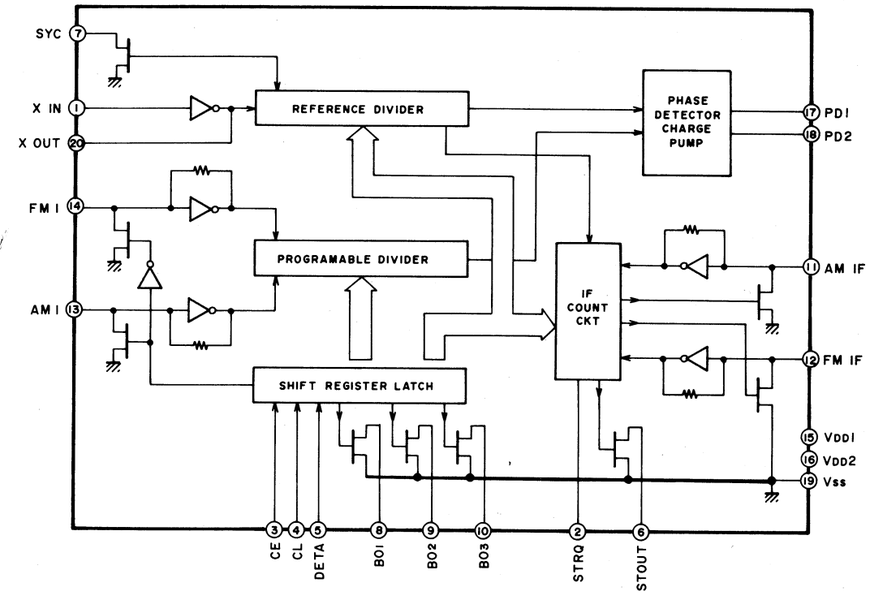

STK4152-II (POWER AMPLIFIER)

TC4052BP (DIFFERENTIAL 4-CHANNEL MULTIPLEXER/DEMULTIPLEXER)

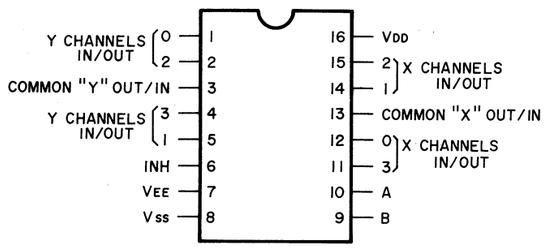

INHIBIT (6)	A (10)	B (9)	"ON" CHANNEL
L	L	L	0X, 0Y
L	H	L	1X, 1Y
L	L	H	2X, 2Y
L	H	H	3X, 3Y
H	X	X	NONE

X=DON'T CARE